

Intellian i9/i9P Serial Number



This serial number will be required for all troubleshooting or service calls made regarding this product.

Notice

All Right Reserved

Intellian i9/i9P[®] and Intellian[®] are the registered trademarks of Intellian Technologies, Inc., and should not be appropriated without permission by Intellian Technologies, Inc., and the information contained in this manual is the property of Intellian Technologies, Inc. Any and all parts of this manual shall not be reproduced and distributed in any form without prior written consent by Intellian Technologies, Inc. The information contained in this manual shall be subject to change at any time without notice due to the functional upgrades of the product.

Copyright© Intellian Technologies, Inc.

Doc. No. I9/I9P-DC V100

CONTENTS

INTRODUCTION	3
INTRODUCTION TO INTELLIAN i9/i9P.....	3
FEATURES OF INTELLIAN i9/i9P.....	3
FEATURES OF INTELLIAN i9/i9P.....	4
BASIC SYSTEM CONFIGURATION.....	5
INSTALLATION	6
SYSTEM COMPONENTS.....	6
TOOLS REQUIRED FOR INSTALLATION	10
PLANNING THE INSTALLATION	11
INSTALLATION AND MOUNTING OF ANTENNA.....	13
INSTALLING THE ACU	17
CONNECTING THE SYSTEM TO A GPS.....	21
TARGET SATELLITE SETTING	22
ADJUSTING THE LNB SKEW ANGLE (LINEAR POLARIZATION ONLY)	23
OPERATION INSTRUCTION.....	25
INTRODUCTION	25
OPERATION USING THE ACU	26
ACU SOFT KEYS.....	26
NORMAL MODE.....	26
SET UP MODE	31
OPERATION USING PC CONTROLLER PROGRAM.....	53
INTRODUCTION	53
PROGRAM INITIALING AND SERIAL PORT SETUP	54
MAIN MENU – USING DEFAULT DUAL-SAT MODE.....	55
SET SATELLITE INFORMATION	56
MAIN MENU- USING ADVANCED TRI-SAT MODE.....	58
SET SATELLITE INFORMATION	59
CONTROLLER MENU	62
TROUBLESHOOTING	67
PREPARATION FOR TRANSPORTATION.....	69
WARRANTY.....	70
APPENDIX : TECHNICAL SPECIFICATION	71

INTRODUCTION

Introduction to Intellian i9/i9P(Premium)

Intellian i9/i9P is a digital satellite antenna system designed specifically for all types of vessels (Anchored or transit) to automatically identify, track and capture satellite signals from the Digital Video Broadcasting (DVB: the international standard for digital TV transmissions) compatible satellites.

Specifically, Intellian i9/i9P has Wide Range Search (WRS) algorithm, which minimizes the search time during initialization, and Dynamic Beam Tilting (DBT) technology, which dynamically shapes the antenna beam to utilize stabilization. Once the satellite is acquired, the antenna DBT continuously measures the heading, pitch, and roll of the vessel by obtaining the satellite signal level around the antenna point, and transmits commands to the antenna motors to keep the antenna pointed at the satellite at all times. This active stabilization is enhanced by a conical scan tracking function to detect and lock onto the strongest signal, resulting in the clearest reception possible.

The i9/i9P has a built-in GPS system which enhances the speed of satellite signals acquisitions. In addition, the i9P provides the embedded auto skew angle control system to maintain the optimal signal strength and increase the quality of satellite receptions in weak satellite single coverage area.

Features of Intellian i9/i9P

Enjoy satellite broadcasts at sea

Intellian i9/i9P is the most modern antenna system that enables you to receive a high quality broadcasting signal at sea, where the atmospheric and environmental condition are very harsh.

Fully automatic control system

Fully automatic control system allows you to simply turn the power switch on, and have crystal clear, high quality satellite television in motion or at anchor.

High quality antenna

High tech parabolic antenna technology has been adopted for this antenna system, which is optimal for marine conditions. This enables you to receive the optimal signal level even when it is raining or snowing.

Fast and efficient search for the satellite

The WRS (Wide Range Search) algorithm allows for the antenna system to search the satellite within the shortest amount of time and to detect the satellite signal under any position and with any directional movement of the ship.

Outstanding reliability

Intellian i9/i9P provides highly reliable system through the implementation of a modularized design, and the usage of strictly proven components.

Built-in GPS


Intellian i9/i9P has imbedded GPS, which allows for the system to upload the GPS data automatically into the system for an even faster and stable system.

Built-in automatic skew angle control system


The automatic skew control system allows Intellian i9P to maintain the optimal skew angle at all times and ensure maximum level of satellite signal level.

Basic System Configuration

For your satellite TV system to work properly, the system will have to be connected with all of the provided components properly, as shown in the figure below (Refer to next chapter 'Installation' in this manual for more detailed connection instructions). Separate purchase of a satellite receiver and a TV is required.

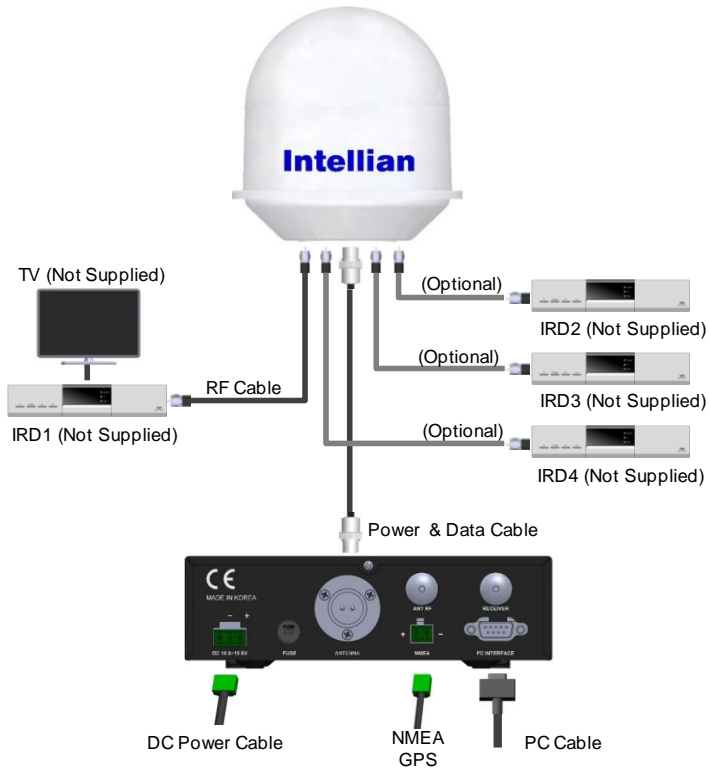

[i9P System Diagram]

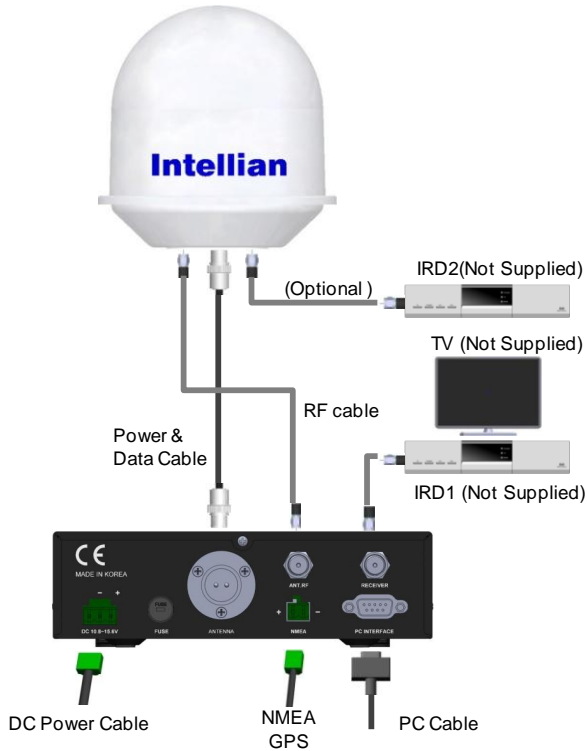

[i9 System Diagram]

Installation

The components of the Intellian i9/i9P have been designed to be modular so that it is suitable for simple installation on all types of vessels.

System Components

Antenna Unit

The antenna of Intellian i9/i9P is composed with the following components for the optimum search and reception of the satellite signal.

- Mechanical Unit – manipulates the antenna to receive the optimal satellite signal regardless of the movement of the vessel.

- Control Unit – controls mechanical operation of the antenna.
- RF Unit – transmits the optimum satellite signal to the receiver.
- Radome – protects the antenna from the severe marine environment.



Antenna Control Unit (ACU)

The Antenna Control Unit (ACU) provides the power to the antenna and controls the various settings of the antenna. Additionally, VFD (Vacuum Fluorescent Display) allows for you to operate the ACU in the dark.


The functions of the ACU are as follows:

- Provide power for the antenna unit
- Monitor the antenna status
- Change the target satellite
- Set up the user environment
- Set the current GPS information
- Set satellite information

- Move antenna manually
- Perform self-diagnosis of the antenna
- Set up the interface with a PC



Front

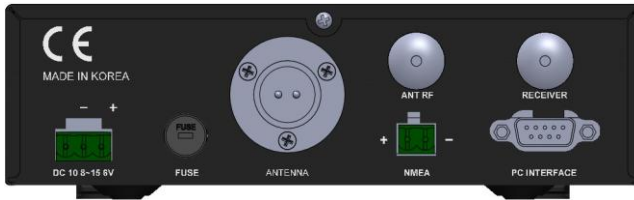








i9P Rear



i9 Rear

Installation Kit

Contain the items required for securing the antenna unit and ACU to your boat.

Antenna					ACU	
						
Hex. Bolt 5EA	Hex Head Wrench Bolt 5EA	Flat Washer 10EA	Spring Washer 5EA	Hex. Nut 5EA	Tapping Screw (Φ4x16L) 5EA	Machine Screw (Φ3x8L) 5EA

Other Components

No	Components	Size	Q'ty
1	ACU Bracket	-	2EA
2	RG6 (Antenna – ACU RF Cable)	30m	1EA
3	RG6 (ACU – IRD Cable)	3m	1EA
4	Power Cable	10m	1EA
5	PC Serial Cable	1.8m	1EA
6	Power & Data Cable	30m	1EA
7	NMEA Connector	AK950-2	1EA
8	Power Connector	AK950-3	1EA
9	Hex Bolt	M8x60L	5EA
	Hex Head Wrench Bolt	M6x35L	5EA
	Tapping Screw	ø4×16L	5EA
		ø3×8L	5EA
	Flat Washer	M8	10EA
		M6	5EA
	Spring Washer	M8	5EA
	Nut	M8	5EA
Eye Nut	M6	5EA	
10	Install CD	-	1EA
11	Manual	-	1EA
12	Mounting Template	-	1EA
13	Quick Installation Guide	-	1EA

Tools Required for Installation



Power Drill




10mm Spanner



Cross-Head
Screwdriver




11mm Spanner

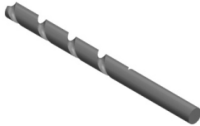

Φ10mm Drill



13mm Spanner

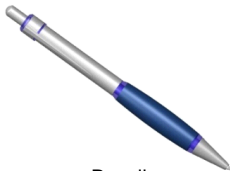


Pencil

Planning the installation

Selection of Installation Site

Install the antenna in accordance with the following procedures to insure maximum performance of the antenna.

The ideal antenna site has a clear view of the horizon/satellite all around. Please be sure there are no obstacles within 15 degrees above the antenna. Any obstacles located above a 15 degree elevation can prevent the antenna from tracking the satellite signal (Refer to the drawing).

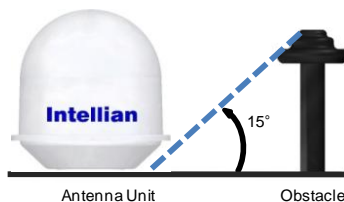

Keep the antenna out of line with nearby radars, as their energy levels may overload the antenna front-end circuits. If necessary, position the antenna unit so it is at least four feet (1.2 meters) above or below the level of the radar.

Make sure that the mounting surface is rigid, so that it will not flex when the vessel vibrates. If necessary, add a stiffening member to the mounting site to strengthen it.

The movement of the antenna can be minimized by installing it at the center of the ship. For optimal performance of the antenna, it is not recommended to install at any corner of the ship, where the movement of the ship is the greatest.

Install the bottom of the antenna parallel to the surface of the sea and fix tightly to the structure of the ship.

When setting the antenna down, be careful not to have the RF connector. Striking the connector on the bottom directly will damage the connector and make connection impossible.

Cables

Before installing the system cables, you need to take the following points into consideration.

- All cables need to be well clamped and protected from physical damage and exposure to heat and humidity.
- Cable with an acute bend is not allowed.
- Where a cable passes through an exposed bulkhead or deckhead, a watertight gland or swan neck tube should be used.

Power requirements

You need to follow the power requirements to avoid damage to the system.

Intellian i9/i9P has been designed to work on a boat's power supply rated at 12 VDC. (acceptable range: 10.8~15.6 V DC) .

If your IRD(s) and television(s) require a 110V/240V AC power, a suitable DC to AC converter will be needed to operate the unit(s) from your boat's DC power supply.

Extending the cables

The cables that have been supplied with your Intellian system should be of adequate length to complete the installation on most boats.

Power & Data Cable

This cable supplied at a length of 30m.

RF Cable

This cable is supplied at a length of 30m. If a longer length is required you should replace this cable with an extended RF cable supplied by Intellian Technologies.

Power Cable

This cable is supplied at a length of 10m.



WARNING


Exceeding the indicated cable lengths will result in reduced performance of your system.

Installation and Mounting of antenna

The method of installation and mounting of antenna may vary with vessel design but the following procedures are applicable in most situations, and will result in a secure and effective installation.

Confirmation of size prior to installation

- Confirm the height and diameter of the bottom surface of the antenna before installing it.
- The space must be sufficient for installing the antenna unit considering the height and diameter of the antenna.
- The height and the diameter of the bottom surface of the antenna are as shown in the following drawing. If possible, install the antenna using a power tower.

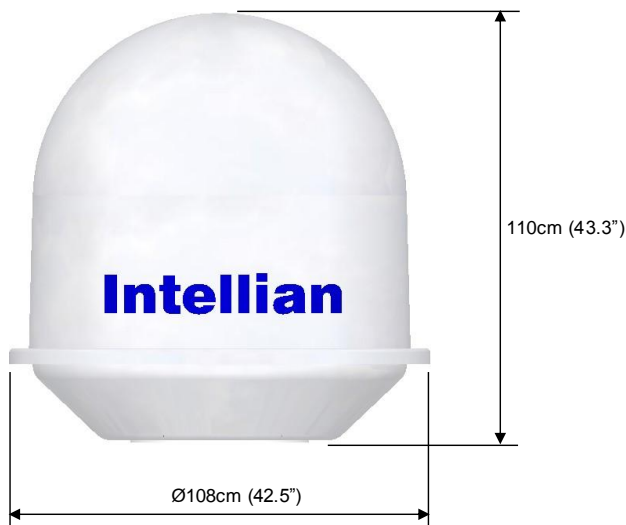


WARNING

Before installing the antenna you have to remove the radome and remove the shipping foam from the antenna interior. Replace the radome before installation. **The system functions will be abnormal if the radome is off.**

Mark of the antenna mounting position


Referring to the mounting template, mark where antenna is to be mounted on board the ship (it must be a flat surface) or on a separate power tower by drawing a square of 30.37 cm (12").

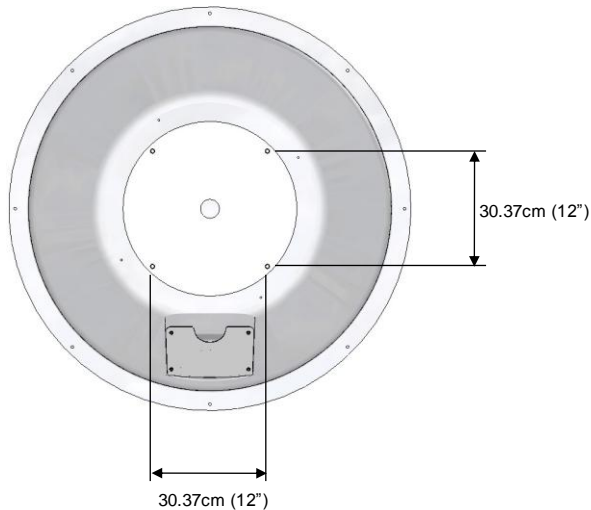

WARNING

If a power tower is not used to mount the antenna, separate cable shock and waterproofing measures must be taken to protect the RF/ Power & Data connector from being exposed to the sea water and external shocks. An exposed cable may cause electric shock and cause serious damage to the equipment.


Mounting holes for bolts

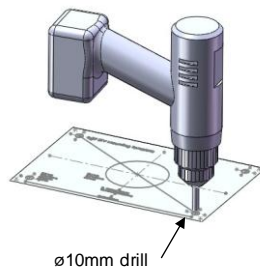

Make 4 bolt holes of 10mm diameter, one at each corner of a rectangle drawn as above.

Connection of the Power & Data cable and RF cable

Remove the cable cover on the radome bottom. Connect the Power & Data cable from the power connector. Connect the RF cable to the RF1 connector using 11mm spanner. Be careful not to tighten it too much, as you may damage the connector.

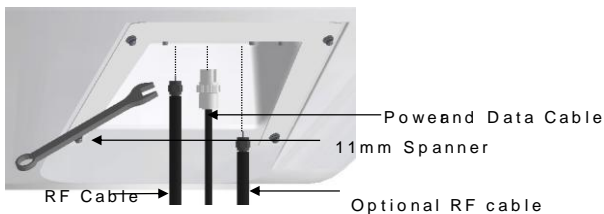


WARNING

Do not use excessive force when using the spanner, this will damage the threads. Be careful that the connectors do not contact the mounting surface of the antenna, this may cause a critical malfunction and serious damage to the equipment.


Mounting the antenna

Attach the antenna by using the hex head bolts (M8x50L), M8 spring washers, M8 flat washers and M8 nuts supplied.

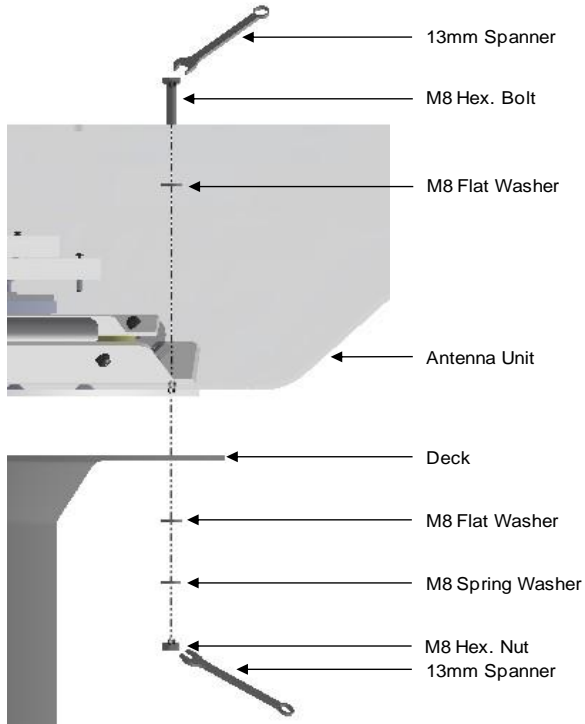

Installing the ACU

ACU dimensions

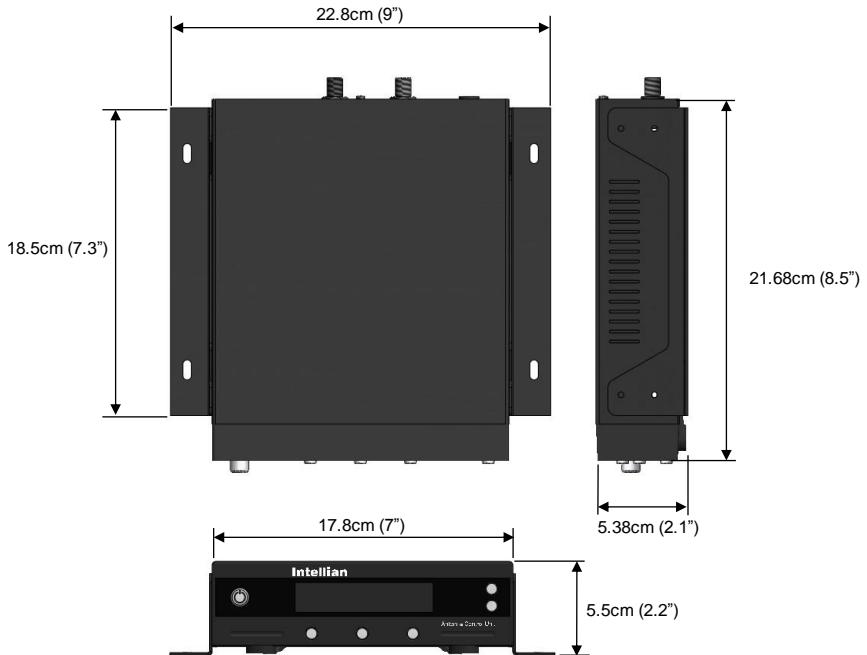


Selection of Installation Site

The ACU should be installed below deck, in a location that is:

- Dry, cool, and ventilated.
- Easy accessible from your main TV viewing area.


To Install the ACU

1. The ACU should be installed using the two supplied mounting brackets which allow for a top or bottom mounting configuration.
2. Using the self tapping screws supplied, attach the mounting brackets to the sides of the ACU.
3. Place the ACU in the location where it is going to be installed.
4. Connect the cables to the rear of the ACU.
5. Using a pencil to mark the 4 hole positions (2 each side), and use the appropriate drill bit to drill them.

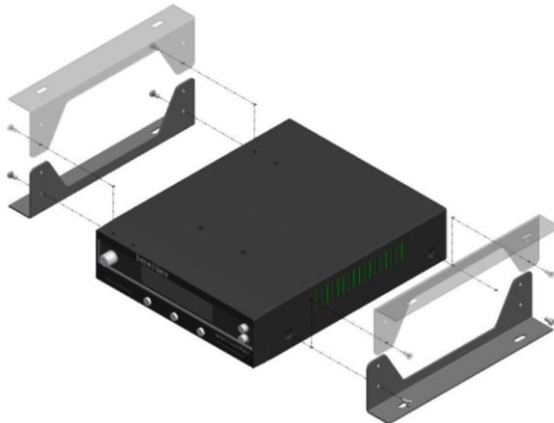

Connection the System Cables for i9P

After installation and fixation of the antenna, connect the ACU to the antenna. Refer to the drawing below to connect cables.

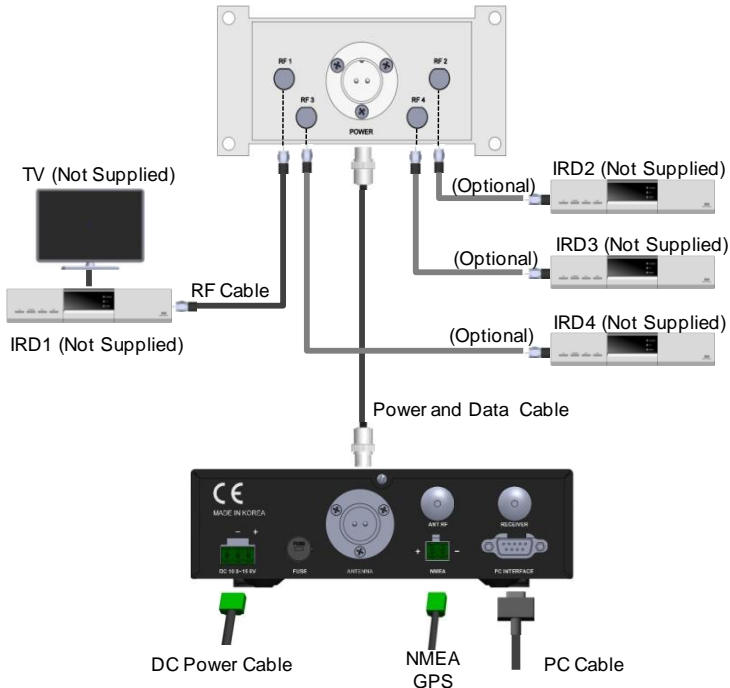


[i9P System Diagram]

- Connect the Power & Data Cable (30m) from the antenna to the ANTENNA connector on the rear of the ACU.
- Connect the RF Cable (30m) from the RF1 connector on the antenna to 'LNB', 'ANT' or 'Satellite In' on the rear panel of the IRD.
- Connect the power cable (10m) from DC power connector on the rear of ACU to a power source at 12 VDC.
- Press the POWER ON switch in front of the ACU to start the operation of the antenna system automatically.

Connection the System Cables for i9

After installation and fixation of the antenna, connect the ACU to the antenna. Refer to the drawing below to connect cables.

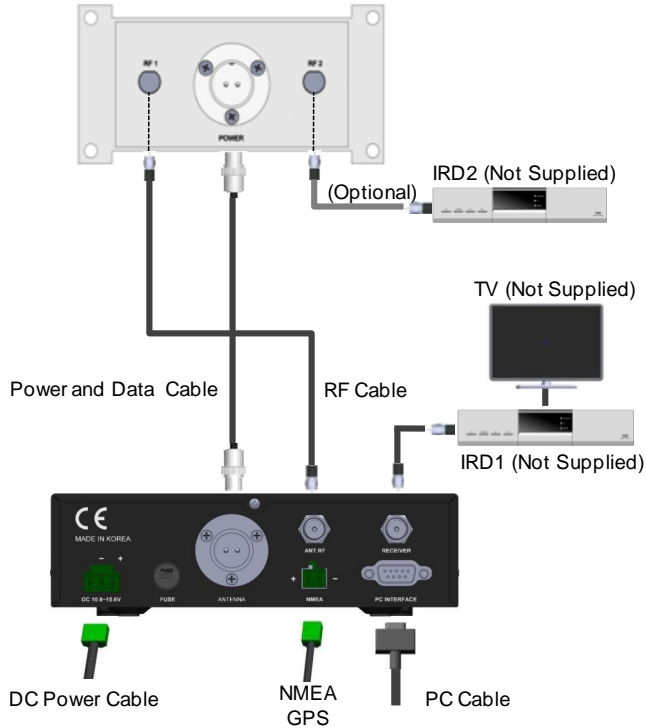

[i9 System Diagram]


- Connect the Power & Data Cable (30m) from the antenna to the ANTENNA connector on the rear of the ACU.
- Connect the RF Cable (30m) from the RF1 connector on the antenna to the ANT.RF1 connector on the rear of the ACU.
- Connect the power cable (10m) from DC power connector on the rear of ACU to a power source at 12 VDC.
- Press the POWER ON switch in front of the ACU to start the operation of the antenna system automatically.

Connecting the system to a GPS

For improved satellite tracking, you can connect your satellite TV system directly to your boat's NMEA 0183 GPS system. To do this you will need lengths of cable suitable for connecting to your GPS system and the green 2-way ACU GPS connector supplied with your Intellian i9/i9P Satellite TV System.

To connect the system to a GPS

1. Strip back the insulation of each cable and connect a cable to each terminal of the 2-way connector.
2. Tighten the locking screws.
3. Connect the cable from the **+ve** (positive) terminal of the ACU GPS connector to the NMEA **OUT** wire of the boat's GPS system.
4. Connect the cable from the **-ve** (negative) terminal of the ACU GPS connector to the **ground wire** of the boat's GPS system.
5. Refit the ACU GPS connector to the rear of the ACU.

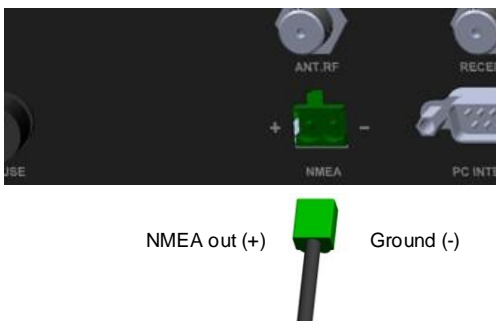

Target Satellite Setting

You can select the target satellite to receive satellite signal from. If the target satellite is not on the list you will have to register the target satellite.

GPS Setting

You can input the GPS information through the ACU or the PC Program. To setting the GPS information, the antenna system has to be in 'SET UP mode'. For detailed instructions, please refer to page 37; 'Setting the GPS', and page 58; 'Set Antenna GPS and find Antenna Angle'.

Satellite Registration

You can register the target satellite through the ACU or the PC Program. To register the target satellite, the antenna system has to be in 'SET UP mode' and the required information is, Satellite Name, Satellite Longitude, Method of Satellite Identification, Frequency of each band, Symbol Rate, Network ID, Power Change method. For detailed instructions, please refer to page 30; 'Edit Satellite Information', page 52; 'Set Satellite Information', and page 59; 'Set Tracking Information of Satellite'.

Satellite Pair Selection

You can select the Satellite Pair from the list through the ACU or the PC program. You can easily select the target satellite from the satellite pair. For detailed instructions please refer to page 28; 'Setting the Satellite Pair', page 52; 'Set Satellite Information'.

Target Satellite Selection

Choose the target satellite from the Satellite Pair. When selecting through the ACU, you have to press the left button to select the target satellite while the antenna system is in either 'Searching Mode' or 'Tracking Mode'. When using the PC program you can select either satellite 'A' or satellite 'B' from 'Tracking Satellite' at anytime.

Adjusting the LNB Skew Angle (Linear polarization only)

LNB Skew Angle



The LNB skew angle only needs to be adjusted when the target satellite uses linear polarization. In order to receive the maximized satellite signal level, the LNB skew angle must be adjusted according to the calculation of current GPS location and target satellite.

It only needs to be adjusted when changing from satellite to another, or when the boat has traveled a significant geographic distance. It should NOT need to be readjusted if the boat stays in the same location and is operating on the same satellite.

Skew Angle Adjustment for i9


Polarization of your Intellian i9 antenna must be accomplished manually by the following steps.

1. Remove the upper part of radome after switching power OFF.
2. Loosen the 4 bolts that connect the LNB and feed horn.
3. Turn the LNB and place it at the angle indicated on the back of the feed horn.
4. Tighten the 4 bolts.

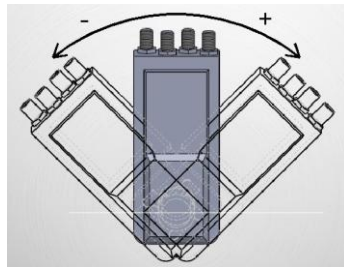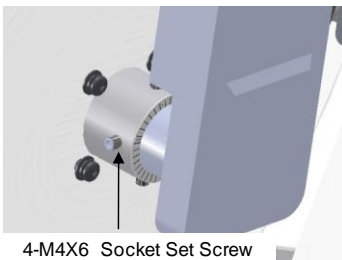

Auto Skew Angle Adjustment for i9P

Intellian i9P with an embedded auto skew angle control system. Therefore, manual adjustment of skew angle by user is not required. The skew angle is continuously adjusted automatically through the calculation of the optimum skew angle by using the information of the targeted satellite and the output value from the GPS sensor. Together with such location information of the ship as ship's longitudinal and latitudinal position change from movement the skew angle will be adjusted accordingly. The skew angle of LNB is shown from the ACU and GUI Program.

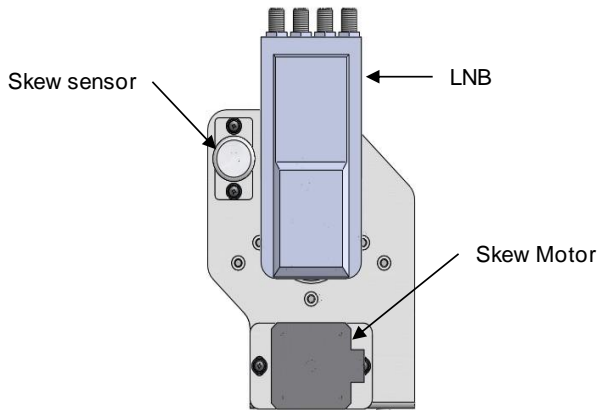

Operation Instruction

Introduction

This section of the handbook describes how to set up your Satellite TV System after installation using the ACU or PC controller program and includes the following functions:

- System start up.
- Changing the default satellite.
- Monitoring the antenna status.
- Setting sleep mode.
- Entering setup mode.
- Setting the satellite pair.
- Editing satellite information.
- Setting the antenna parameter.
- Setting the LNB local frequency.
- Setting GPS.
- Setting the DiSEqC method.
- Display versions.
- Display power status.
- Setting antenna go position.
- Setting antenna move step.
- Setting remote control.
- Setting the factory default parameters.
- Performing diagnostic tests.




WARNING

Note: Many of the above functions will only be required only after initial installation of your system. **Refer to the Quick Installation Guide** before operating the system.

Operation Using the ACU

ACU Soft Keys

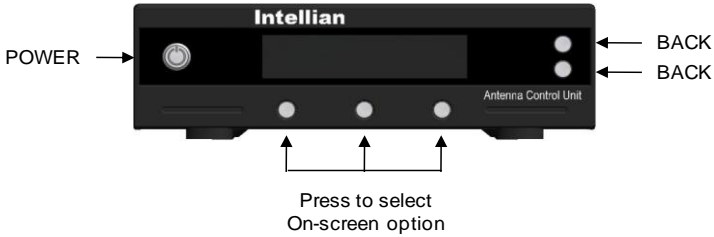

Normal Mode

Start Up

 
With the system installed and power applied, the ACU screen will show the following sequence:




1. Communication is being established between the antenna and the ACU. The ACU initialized.



2. The antenna is initialized.



 3. The antenna is searching for Satellite A.




4. The antenna has located the satellite and is now tracking.


Change of Target Satellite

Your antenna is programmed with two candidates of target satellites as default Dual-sat mode. Use advanced Tri-sat mode for targeting three satellites. To change the target satellite, press LEFT soft key. The target satellite is changed and is automatically tracked by the antenna.

Default Dual-sat Mode

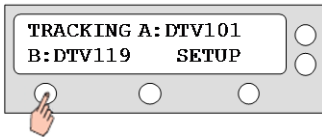


1. Press LEFT soft key for tracking Satellite B.

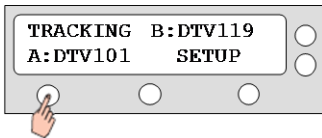


2. The antenna is tracking Satellite B.


Advanced Tri-sat Mode

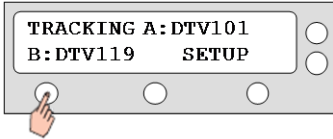

1. Press LFET soft key for tracking Satellite B.

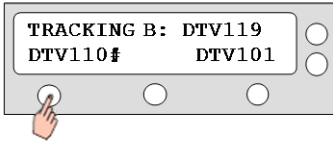

2. The antenna is tracking Satellite B.

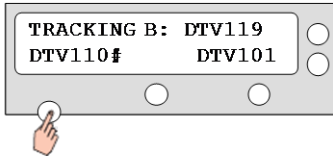

3. Press LFET soft key for tracking Satellite C.

 


4. The antenna is tracking Satellite C.

* Register a key on your remote control to track alternative target satellites.
See page 43.

Monitoring the current status of the antenna

While POWER ON to Intellian i9/i9P, ACU displays the status of the antenna. The various ACU displays may be shown according to the current status of the antenna.




1. The antenna is searching for Satellite A.



2. The antenna is tracking Satellite A.




3. The antenna is unwrapping the cable.

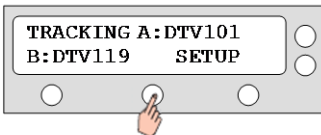

4. The antenna is again tracking satellite A. Press center soft key to display position detail.




5. Antenna position detail and signal strength are displayed.

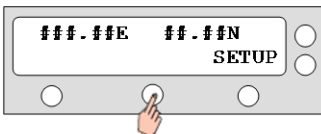


6. Press center soft key to display current GPS information. Press SETUP to return to main setup mode.

Sleep Mode

 If the antenna lost the tracking satellite in sleep mode, sleep mode is cancelled.



 1. Press **BACK** to enter sleep mode.




2. Press **Back** again for exiting sleep mode.

* Register a key on your remote control to change sleep mode.
See page 43.


Set Up Mode

Begin Set-Up Mode


To enter the Set-up Mode simply follow the instructions below:

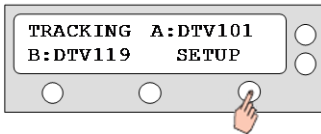

1. With the antenna tracking - Press SETUP.

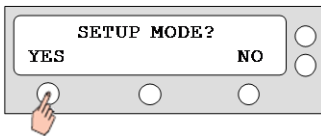

2. Press YES to enter setup mode.

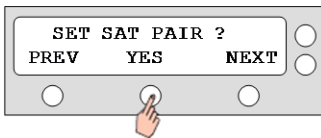

3. Press Yes to set the satellite pair.


Setting the Satellite Pair

You can change the satellite pair if you decide to receive satellite television service from a different service provider.


Example1. Changing the target satellite without using DiSEqC:




1. Press YES to enter setup mode.

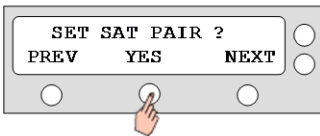

2. Press YES to set satellite pair.

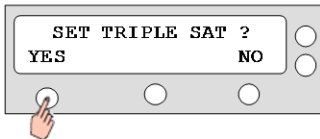


3. Press YES to set triple satellite.

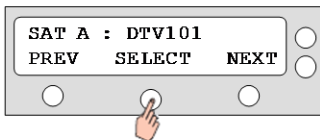


4. Set satellite A

Press PREV to show previous satellite name.
Press SELECT to set chosen satellite to SAT A.
Press NEXT to show next satellite name.

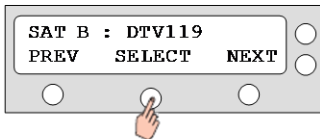

5. Set satellite B

Press PREV to show previous satellite name.
Press SELECT to set chosen satellite to SAT B.
Press NEXT to show next satellite name.

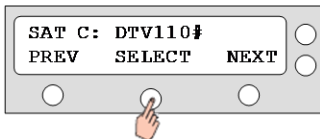

6. Set satellite C

Press PREV to show previous satellite name.
Press SELECT to set chosen satellite to SAT C.
Press NEXT to show next satellite name.




7. Press YES to save selections.

Press NO to cancel and return to main setup mode.


Example2. Changing the target satellite using DiSEqC:



 1. Press YES to enter setup mode.




 2. Press YES to set satellite pair.



3. Set satellite A

 Press PREV to show previous satellite name.
Press SELECT to set chosen satellite to SATA.
Press NEXT to show nextsatellite name.



4. Set satellite B

Press PREV to show previous satellite name.
Press SELECT to set chosen satellite to SAT B.
Press NEXT to show next satellite name.



5. Set satellite A* when DiSEqC is active from IRD.

Press PREV to show previous satellite name.
Press SELECT to set chosen satellite to SATA*.
Press NEXT to show nextsatellite name.



6. Set satellite B* when DiSEqC is active from IRD.

Press PREV to show previous satellite name.
Press SELECT to set chosen satellite to SAT B*.
Press NEXT to show nextsatellite name.

 


7. Press YES to save selections.


Press NO to cancel and return to main setup mode.

Edit Satellite information


It is possible to modify the existing satellite information and input new satellite information into the ACU as well. It is not recommended for a novice satellite service user to use this mode.




1. Press YES to enter setup mode.

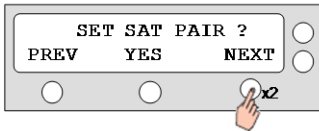

2. Press NEXT twice to enter edit satellite info mode.

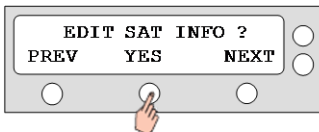

3. Press YES to edit satellite info.

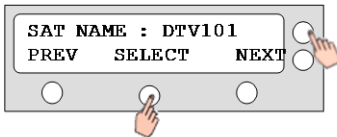


4. Set the satellite name.

PREV – Shows previous satellite name.

SELECT – Select the displayed satellite for editing.

NEXT – Shows next satellite name.

Press ENTER to move to next screen.

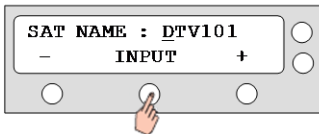


5. Input the satellite name.

+ Increases the value. - decreases the value.


Change the underscored digit using the +/- buttons.

 Press INPUT to accept the value and move to next digit. Press BACK to move to previous digit.



6. Press ENTER to move to next screen.

Press BACK to return previous screen.

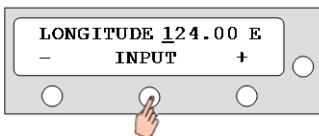


7. Input the satellite position.


+increases a value.- decreases a value.

Change the underscored digit using the +/- buttons.


Press INPUT to accept the value and move to next digit. Press BACK to move to previous digit.

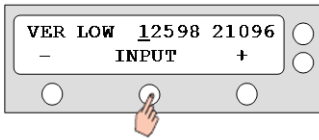


8. Input the tracking frequency (MHz) and symbol rate (KHz) for vertical low band.

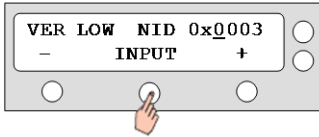


9. Input the network ID (NID) for vertical low band.

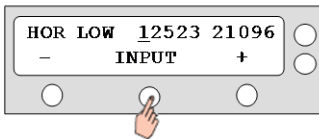


10. Input the tracking frequency (MHz) and symbol rate (KHz) for horizontal low band.

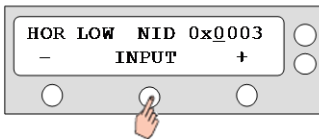


11. Input the network ID (NID) for horizontal low band.

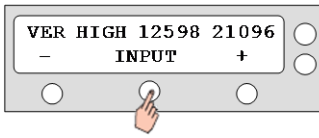

12. Input the tracking frequency (MHz) and symbol rate (KHz) for vertical high band.

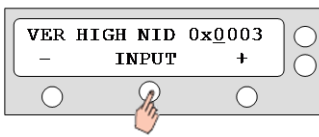


13. Input the network ID (NID) for vertical high band.

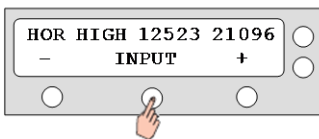


14. Input the tracking frequency (MHz) and symbol rate (KHz) for horizontal high band.




15. Input the network ID (NID) for horizontal high band.

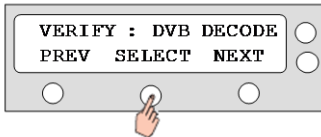


16. Select the verification method¹⁾ of tracking satellite.
 PREV – Shows previous method.
 SELECT – Set the displayed method.
 NEXT – Shows next method.

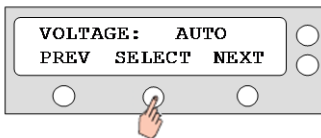

17. Select the voltage supply method²⁾ to LNB (AUTO recommended)

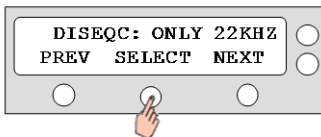

 18. Select the DISEQC method³⁾ (AUTO recommended)



19. Press YES to save the input information.
 Press NO to cancel and return to main setup mode.

1) Verification method

- SIGNAL – use only signal level for tracking
- DVB LOCK – use only DVB Lock signal for tracking
- DVB DECODE – verify satellite using DVB decoding method for tracking
- DSS DECODE – decode only DSS Lock signal for tracking

2) Voltage supply method


- AUTO- change voltage to LNB by IRD voltage
- ONLY 13V – always supply 13V to LNB
- ONLY 18V – always supply 18V to LNB

3) DISEQC method


- AUTO – change signal to LNB by IRD DISEQC
- ONLY 0KHZ – always supply 0kHz to LNB
- ONLY 22KHZ – always supply 22kHz to LNB

Setting the Antenna Parameters


It is not recommended for a novice satellite service user to use this mode. Consult Intellian for changing antenna parameters.

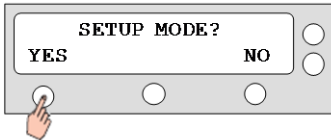


1. Press YES to enter setup mode.

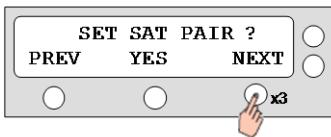


2. Press NEXT three times to enter set antenna parameter mode.

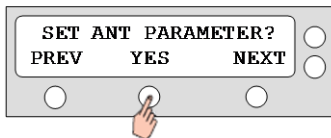

3. Press YES to set antenna parameter.

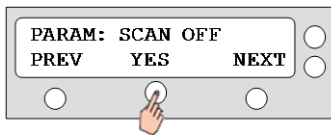

4. Select the PARAM 1) – SCAN OFF
 PREV – Shows previous parameter.
 SELECT – Set the displayed parameter.
 NEXT – Shows next parameter.
 Press ENTER to move to next screen.

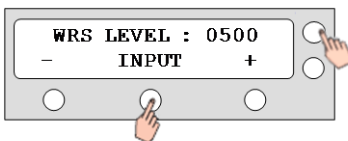

5. Input the WRS LEVEL.
 +increases the value. – decreases the value.
 Change the underscored digit using the +/- buttons.
 Press INPUT to accept the value and move to next digit. Press BACK to move to previous digit.
 Press ENTER to move to next screen.



6. Press YES to save the input information.
 Press NO to cancel and return to main setup mode.

1) Parameter Setting method

SCAN OFFSET – The actual angle between the marked point on the sub-reflector and the datum.

TRACK SCALE – To control the tracking speed while antenna is tracking the satellite. High Track Scale value resulting in high tracking speed.

DETECT LEVEL – The basic single detection level.

TRACKING LEVEL – The basic signal tracking level

ELADJUST – The mechanical tolerance compensation of elevation limit.

WRS LEVEL – The basic WRS detection level.

POWER THRESHOLD – The value to identify Vertical/Horizontal or RHCP/LHCP.

DISEQC LEVEL – The value to identify 22KHz tone.

OFFSET RH-LH – The difference value between RHCP/LHCP and SCAN OFFSET.


USE WRS – To apply WRS while antenna is searching for satellite.

OFFSET DIFFERENCE – To apply Offset Difference.


Setting the LNB local frequency

It is possible to select a local frequency from ACU. It is not recommended for a novice satellite service user to use this mode.


CASE 1. Single band LNB is used.

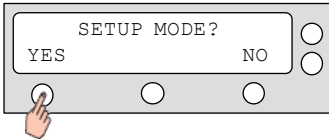


1. Press YES to enter setup mode.

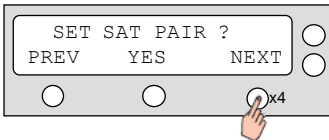


2. Press NEXT four times to enter set local frequency mode.

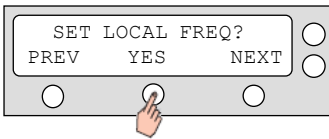

3. Press YES to set local frequency.

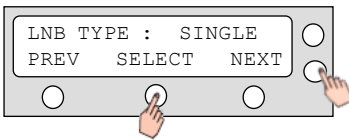

4. Select the LNB Type ¹⁾– SINGLE.
 PREV – Shows previous LNB type.
 SELECT – Set the displayed LNB type.
 NEXT – Shows next LNB type.
 Press ENTER to move to next screen.

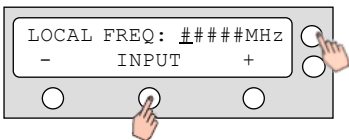

5. Input the local frequency of LNB.
 +increases the value. – decreases the value.
 Change the underscored digit using the +/- buttons. Press INPUT to accept the value and move to next digit. Press BACK to move to previous digit. Press ENTER to move to next screen.




6. Press YES to accept the data.
 Press NO to cancel and return to main setup mode.


CASE 2. Universal LNB is used. (Low band local frequency-9750 MHz/ High band local frequency 10600 MHz)




1. Press YES to enter setup mode.

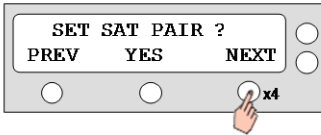

2. Press NEXT four times to enter set local frequency mode.

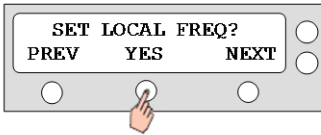

3. Press YES to set local frequency.

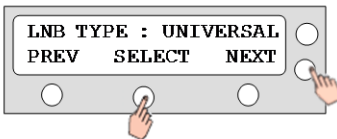

4. Select the LNB Type ¹⁾ – UNIVERSAL.
 PREV – Shows previous LNB type.
 SELECT – Set the displayed LNB type.
 NEXT – Shows next LNB type.
 Press ENTER to move to next screen.



5. Press YES to accept the data.
 Press NO to cancel and return to main setup mode.

1) LNB Type

SINGLE: Single Band LNB

Asia 11300 MHz, Japan 10678MHz, Korea 10750MHz, America 11250MHz


UNIVERSAL: Universal LNB

Low band local frequency -9750 MHz


High band local frequency -10600 MHz

Setting the GPS


It is possible to set up and modify the GPS information, which enhances the antenna functionality.

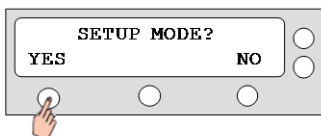


1. Press YES to enter setup mode.

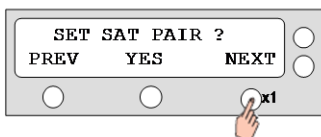

2. Press NEXT to enter GPS setup mode.

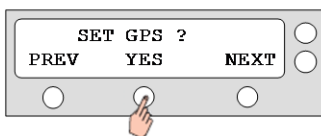


3. Press YES to set GPS.

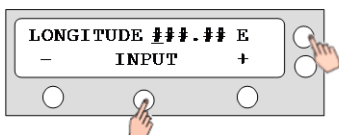

4. Input the longitude data.
 +increases the value. – decreases the value.
 Change the underscored digit using the +/- buttons.
 Press INPUT to accept the value and move to next digit. Press BACK to move to previous digit.



5. Press ENTER to move to next screen.
 Press BACK to move to previous screen.

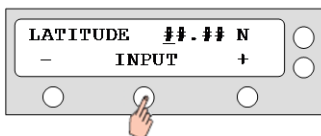


6. Input the latitude data.
 +increases the value. – decreases the value.
 Change the underscored digit using the +/- buttons.
 Press INPUT to accept the value and move to next digit. Press Back to move to previous digit.




7. Press YES to accept data.
 Press NO to cancel and return to main setup mode.

Setting the DiSEqC Method


DiSEqC selection can be made from ACU. It is not recommended for a novice satellite service user this mode.

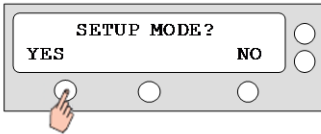

1. Press YES to enter setup mode.

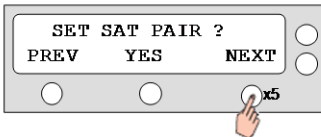

2. Press NEXT five times to enter DiSEqC mode.

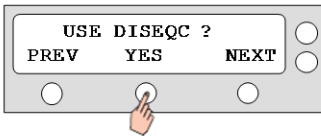

3. Press YES to use DiSEqC.



4. Select the DiSEqC Method¹⁾

PREV – Shows previous DiSEqC Method.
SELECT/ENTER – Set the displayed DiSEqC method.

NEXT– Shows next DiSEqC Method.
Press ENTER to move to next screen.



5. Press YES to accept the selection.
Press NO to cancel and return to main setup mode.

1) DiSEqC Method

DO NOT USE DiSEqC – DiSEqC is not using.

USE TO CHANGE BAND – DiSEqC is using to change to low and high band.


USE TO CHANGE SAT – DiSEqC is using to change tracking satellite

Display Versions


This sequence enables you to see what version of antenna and ACU software version are installed on your system.




1. Press YES to enter setup mode.

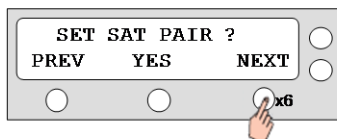


2. Press NEXT six times to enter the view version mode.

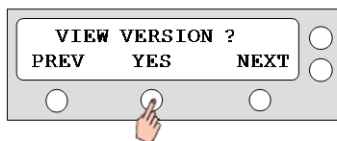

 
3. Press YES to view version.



 4. Antenna product name and S/N are shown. Press center soft key to view antenna software version. Press EXIT to return to main setup mode.




 5. Antenna software version and S/N are shown. Press center soft key to view ACU software version. Press EXIT to return to main setup mode.




6. ACU software version and S/N are shown. Press EXIT to return to main setup mode.


Display Power

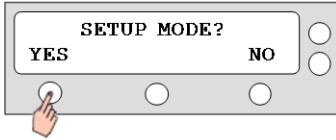


1. Press YES to enter setup mode.

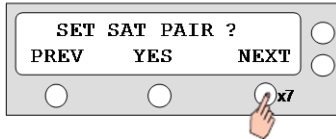


2. Press NEXT seven times to enter the view power mode.

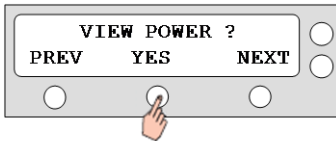

 
3. Press YES to view power.



 4. ACU Voltage is shown.
Press center soft key to view antenna voltage.
Press EXIT to return to main setup mode.



 
5. Antenna Voltage is shown.
Press center soft key to view IRD Voltage and frequency.
Press EXIT to return to main setup mode.




6. IRD Voltage and frequency are shown.
Press EXIT to return to main setup mode.

Setting Antenna Go Position


The antenna can be controlled manually by using ACU.

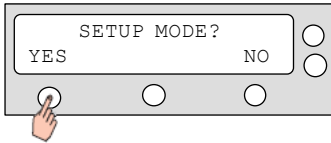


1. Press YES to enter setup mode.

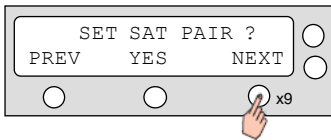


2. Press NEXT nine times to enter the antenna go position mode.

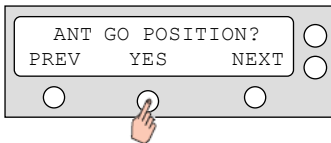


3. Press YES to go position.

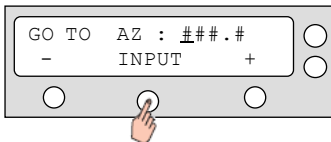


4. Input position value for azimuth (AZ) axis.
 + increases the value. – decreases the value.
 Change the underscored digit using the +/- buttons.
 Press INPUT to accept the value and move to next digit. Press BACK to move to previous digit. Press ENTER to move to next screen.

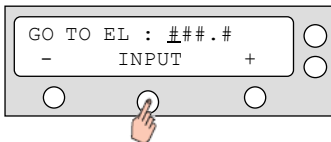

5. Input position value for elevation (EL) axis.
 + increases the value. – decreases the value.
 Change the underscored digit using the +/- buttons.
 Press INPUT to accept the value and move to next digit. Press BACK to move to previous digit. Press ENTER to move to next screen.

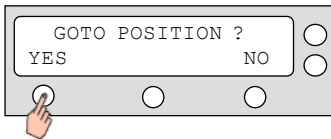

 
6. Press YES to move the antenna to input position.
 Press NO to return to the Antenna Go Position mode.




7. Press EXIT to return to main setup mode.

Setting Antenna Move Step


The antenna may be moved by 1° step manually by using ACU.

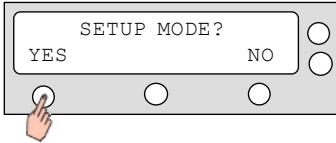


1. Press YES to enter setup mode.

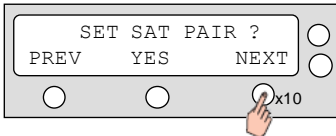


2. Press NEXT ten times to enter the antenna move step mode.

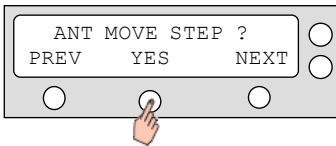

3. Press YES to move step.

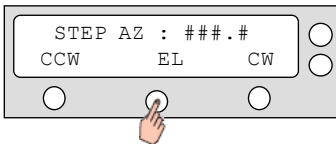


4. Move the antenna in the azimuth (AZ) axis.
 CW – Move the antenna clockwise.
 CCW – Move the antenna counter-clockwise.
 EL – Go to elevation control screen.

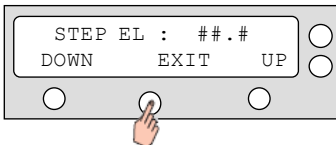


5. Move the antenna in the elevation (EL) axis.
 UP – Move the antenna up.
 DOWN – Move the antenna down.
 EXIT – Return to Antenna Move Step mode.


Setting Remote Control

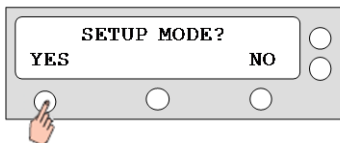


1. Press YES to enter setup mode.

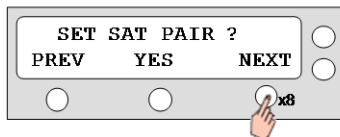


2. Press NEXT eight times to enter remote control setting mode .

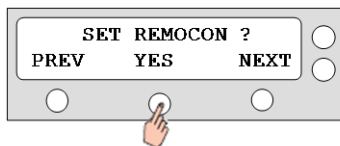

3. Press YES to set remote control.

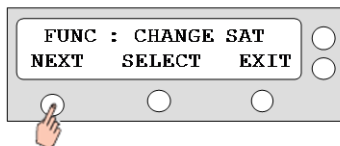


4. Select the Function¹⁾
NEXT – Shows next function.

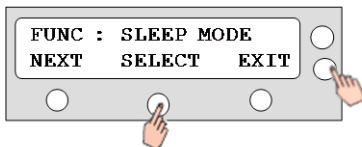


5. SELECT/ENTER –Registers a key on remote control .



 
6. Point remote control to ACU .
Press any key on remote control for selected function and press same key again for confirmation.
Press BACK to move to previous screen.
Press EXIT to return to main setup mode.



 7. If failed to press same key twice, TRY AGAIN will be displayed.



 8. If failed to register a free key, KEY IS USING will be displayed.



9. REMOTE KEY REGISTERED will be displayed if key has been properly registered.



10. Press NEXT to shows next function.
Press EXIT to return to main setup mode.

1) Function

CHANGE SAT

SLEEP MODE

CLEAR REGISTERED KEY

 
Change the target satellite.

Enter sleep mode.


Clear registered key.

Executing Antenna Diagnosis


It is possible to see the antenna status by reviewing the result of diagnosis of the antenna. Refer to the following codes, to understand the diagnosis results.




1. Press YES to enter setup mode.

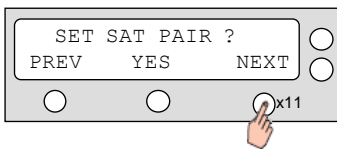


2. Press NEXT eleven times to enter the antenna diagnosis mode.

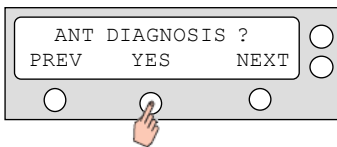

 3. Press YES to diagnosis antenna.




4. CODE 101 is being tested.
Press EXIT to return to main setup mode.

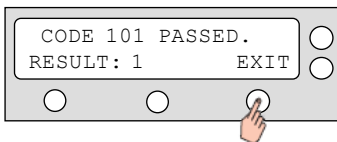


5. CODE¹⁾ 101 is pass.
Press EXIT to return to main setup mode.

- CODE 101 : Communication between antenna and antenna control unit is tested.
If failed, check the power and data cable.
- CODE 102 : AZ CW limit is tested.
If failed, check the limit sensors, motor ,and belt for AZ axis.
- CODE 103 : AZ CCW limit is tested.
If failed, check the limit sensors, motor ,and belt for AZ axis.
- CODE 104 : EL axis is tested.
If failed, check the limit sensors, motor ,and belt for EL axis.
- CODE 105 : Sub-reflector is tested.
If failed, check the sub-reflector.
- CODE 106 : LNB is tested.
If failed, check the LNB and control board.
- CODE 107: Skew System tested.
If failed, check the control board, skew motor ,and skew sensor
- CODE 108 : Antenna Input Power tested.
If failed, check the RF cable.
- CODE 109 : ACU Power tested.
If failed, check the ACU power cable and Input DC power.
- CODE 110 : IRD Power tested.
If failed, check the ACU to IRD cable and IRD power.
- RESULT STATUS : ● is pass. Number is fail(● ● 3 ● ● ● ● 8 ● ●). And ? Is Testing.


Setting Region

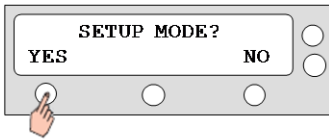


1. Press YES to enter setup mode.

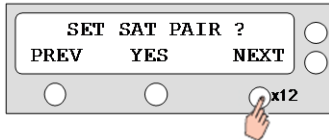

2. Press NEXT twelve times to enter the load region information mode.

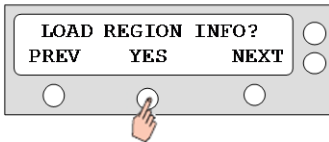

3. Press YES to load region information.

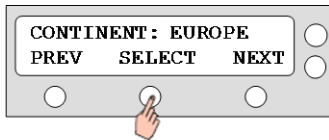


4. Select the continent¹⁾.

PREV – Shows previous continent.

SELECT – Select the displayed continent for editing.

NEXT – Shows next continent.

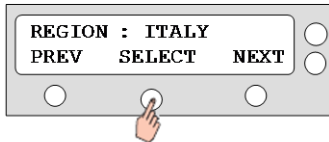


5. Select the region²⁾.

PREV – Shows previous region.

SELECT – Select the displayed region for editing.

NEXT – Shows next region .

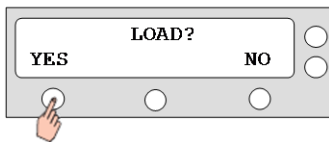

6. Press YES to accept the selection.

Press NO to cancel and return to main setup mode



7. After loading, auto restart.

1) CONTINENT


N. AMERICAN, S.AMERICAN, EUROPE, ASIA..

2) REGION


New York, Miami, UK, JAPAN..

Setting the factory default parameters


Initialize all of the antenna information to the factory set up.

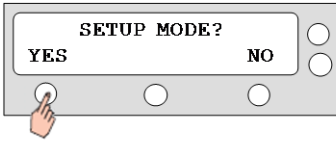

1. Press YES to enter setup mode.

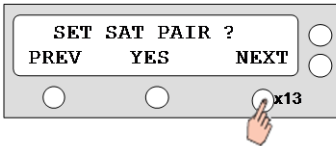

2. Press NEXT thirteen times to enter the default setting mode.

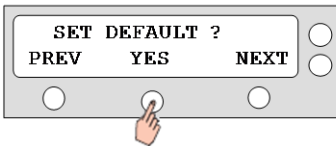

3. Press YES to set default parameters.


OPERATION USING PC Controller Program

Introduction

GUI Software of Intellian i9/i9P has been coded for the user to easily set up the antenna by using the user's personal computer. Using the GUI program enables the user to easily monitor and modify the information of antenna, satellite and GPS. Additionally, the detail diagnostic method of the antenna is provided by the GUI program.


To start this GUI program,

1. Connect one end of PC serial cable to the serial port on the computer.
2. Connect the other end of the PC serial cable to the "PC Interface" on the rear of ACU.
3. Execute GUI program by inserting the CD-ROM supplied into the CD-ROM drive of the computer.
4. After turning on the power of the ACU, if the blue status circle does not change to 'Search' or 'Tracking' from 'Initialize', then you have to change the "PC Interface" terminal of ACU for PC program use rather than GPS use.

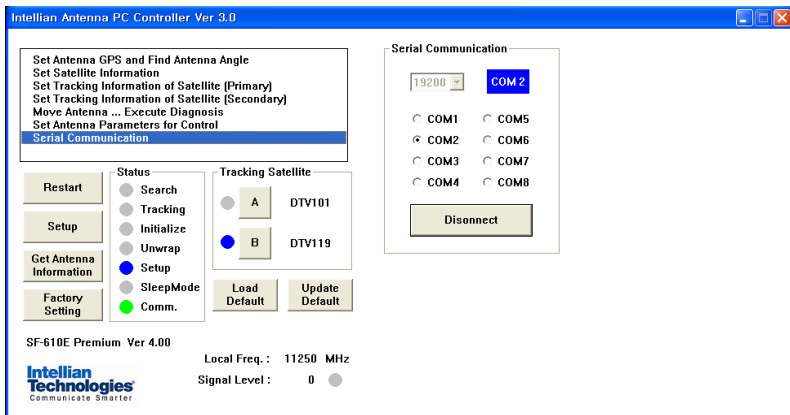

Program Initialing and Serial Port Setup

The communication between the ACU and antenna must be established as the first step in order to start setting your antenna.

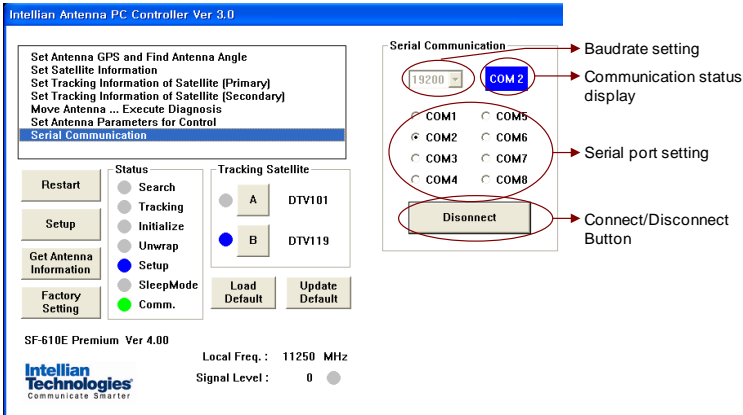

Command Button

- Baud Rate Setting – To display communication speed.
- Connection Status Display – To display communication port between ACU and PC.
- Serial Port Setting – To select serial port to be used.
- Connect/ Disconnect – To establish communication between PC and ACU.

Main Menu – Using Default Dual-sat Mode

Intellian Antenna PC Controller Ver 3.0

Set Antenna GPS and Find Antenna Angle
 Set Satellite Information
 Set Tracking Information of Satellite (Primary)
 Set Tracking Information of Satellite (Secondary)
 Move Antenna ... Execute Diagnosis
 Set Antenna Parameters for Control
 Serial Communication

 Status
 ● Search
 ● Tracking
 ● Initialize
 ● Unwrap
 ● Setup
 ● SleepMode
 ● Comm.

Tracking Satellite
 A DTV101
 B DTV119

 Load Default¹⁾
 Update Default²⁾

SF-610E Premium Ver 4.00

Local Freq.: 11250 MHz Local frequency
 Signal Level: 0 Signal strength

Intellian Technologies
Communicate Smarter

Antenna Status Monitoring

- Search – Antenna is searching for the selected satellite.
- Tracking – Antenna is tracking the selected satellite.
- Initialize – Antenna or the ACU is initializing.
- Unwrap – Antenna is unwrapping the wire.
- Setup – Antenna is in setup mode.
- Comm. – Antenna is possible communication.

Definition of Program Command Buttons

- Restart – To exit setup mode and restart antenna again.
- Setup – To enter the setup mode.
- Get Antenna Information – To indicate the information on display after receiving it input to the antenna.
- Factory Setting – To initialize all antenna information to the default as same as ex-factory status.
- Load Default – To display the up-to-date information input to PC program.
- Update Default – To update the antenna information by the up-to-date input to PC program.

Set Satellite Information

The screenshot shows the 'Satellite Information' menu with the following elements and annotations:

- Satellite Information:** 'Satellite' dropdown (DTV101), 'Name' field (DTV101), 'Longitude' field (101.0° W), and 'Edit Satellite Information' button.
- Verification:** Radio buttons for 'AGC Only', 'DVB Lock Only', 'DVB Decode', and 'DSS Decode'.
- DiSEqC:** 'DiSEqC : OFF' and 'DiSEqC : ON' sections, each with 'Register for Sat A' and 'Register for Sat B' buttons.
- Local Frequency:** 'DiSEqC' section with 'Not Use', 'Change Band', and 'Change Satellite' buttons; 'Local Frequency' section with 'Single Band', 'Universal LNB', and 'Set Local Frequency' buttons.

Annotations with red circles and arrows point to:

- Satellite name and longitude
- Satellite Verification method
- Select Triple Satellite
- Register satellite for tracking
- DiSEqC using method
- Select LNB type
- Select local frequency of LNB

• Satellite Information

The name, longitude and confirmation method of the satellite is displayed when a satellite is selected in the list box. Push “Edit Satellite Information” button to update the information on modifying the value.

• DiSEqC

When the operation method of DiSEqC is selected to “Change Band”, DiSEqC may be used for updating the local frequency and to “Change Satellite”, for updating the target satellite.

• Registration of target satellite

In case that the DiSEqC is selected to “Not Use” or “Change Band”, only ❶ “Register for Sat A” and ❷ “Register for Sat B” may be registered. Pushing ❶ or ❷ button after selecting the satellite in the list box makes it possible to register A or B. In case that DiSEqC is selected to “Change Satellite”, ❸ “Register for Sat A” and ❹ “Register for Sat B” are activated and the target satellite when DiSEqC is available may be registered by pushing ❸ and ❹ buttons.

• Local Frequency

In case that DiSEqC is selected to “Change Band”, be sure to push the “Universal LNB” button. In case that the DiSEqC is selected to “Not Use” or “Change Satellite”, be sure to push “Single Band” button and key in into the Local Frequency, and then push “Set Local Frequency” button.

Command Button

- Edit Satellite Information – To modify the satellite information.
- Register for Sat A – To register a satellite to satellite A.
- Register for Sat B – To register a satellite to satellite B.
- Not Use – Do not use DiSEqC.
- Change Band – To use DiSEqC to change band.
- Change Satellite – To use DiSEqC to change the satellite.
- Single Band – Antenna in use of Single LNB.
- Universal Band – Antenna in use of universal LNB.
- Set Local Frequency – To select local frequency of LNB.

Main Menu- Using Advanced Tri-sat Mode

The screenshot shows the Intellian Antenna PC Controller Ver 3.0 software interface. The main menu is titled "Set Satellite Information" and includes options for setting tracking information, moving the antenna, and setting parameters. The "Status" section shows the antenna is in "Setup" mode. The "Tracking Satellite" section shows three satellites: A (DTV101), B (DTV119), and C (DTV110#). The "Local Freq." is set to 11250 MHz and the "Signal Level" is 0. The Intellian Technologies logo is visible in the bottom left corner.

Controller Menu
Antenna status monitoring
Select & Monitor target satellite
Satellite pair
DTV101 – SAT A without DiSEqC
DTV119 – SAT B without DiSEqC
DTV110# – SAT C with DiSEqC
Load Default¹⁾
Update Default²⁾
Local frequency
Signal strength


Antenna Status Monitoring

- Search – Antenna is searching for the selected satellite.
- Tracking – Antenna is tracking the selected satellite.
- Initialize – Antenna or the ACU is initializing.
- Unwrap – Antenna is unwrapping the wire.
- Setup – Antenna is in setup mode.
- Comm. – Antenna is possible communication.

Definition of Program Command Buttons

- Restart – To exit setup mode and restart antenna again.
- Setup – To enter the setup mode.
- Get Antenna Information – To indicate the information on display after receiving it input to the antenna.
- Factory Setting – To initialize all antenna information to the default as same as ex-factory status.
- Load Default – To display the up-to-date information input to PC program.
- Update Default – To update the antenna information by the up-to-date information input to PC program.

Set Satellite Information

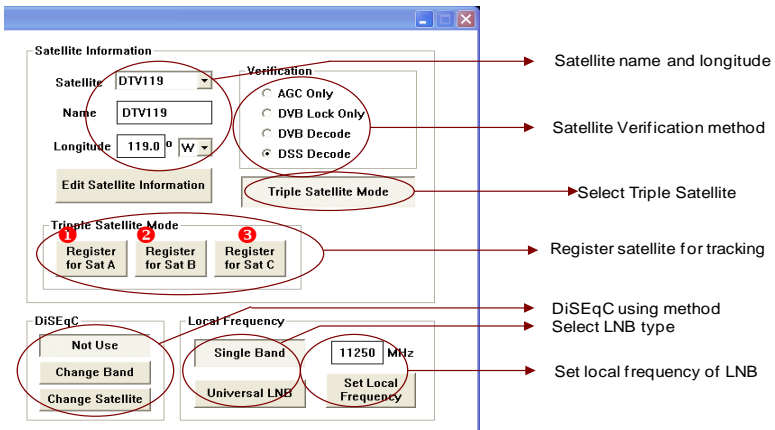

- **Satellite Information**

The name, longitude and confirmation method of the satellite is displayed when a satellite is selected in the list box. Push “Edit Satellite Information” button to update the information on modifying the value.

- **DiSEqC**

When the operation method of DiSEqC is selected to “Change Band”, DiSEqC may be used for updating the local frequency and to “Change Satellite”, for updating the target satellite.

- **Registration of target satellite**

In case that Tri-sat Mode is selected and the DiSEqC is selected to “Not Use”, only ❶ “Register for Sat A”, ❷ “Register for Sat B” and ❸ “Register for Sat C” may be registered. Pushing ❶ or ❷ or ❸ button after selecting the satellite in the list box makes it possible to register A or B or C.

- **Local Frequency**


In case that DiSEqC is selected to “Change Band”, be sure to push the “Universal LNB” button. In case that the DiSEqC is selected to “Not Use” or “Change Satellite”, be sure to push “Single Band” button and key in into the Local Frequency, and then push “Set Local Frequency” button.

Command Button


- Edit Satellite Information – To modify the satellite information.
- Tri-sat Mode – To use three satellites.
- Register for Sat A – To register a satellite to satellite A.
- Register for Sat B – To register a satellite to satellite B.
- Register for Sat C – To register a satellite to satellite C.
- Not Use – Do not use DiSEqC.
- Change Band – To use DiSEqC to change band.
- Change Satellite – To use DiSEqC to change the satellite.
- Single Band – Antenna in use of Single LNB.
- Universal Band – Antenna in use of universal LNB.
- Set Local Frequency – To select local frequency of LNB.

Load and Update Default Command Button


- 1) Load Default: Click “load default” button to select *.rif file according to your region.

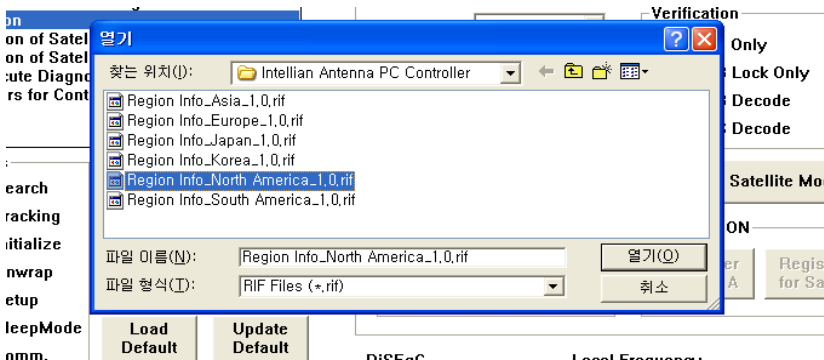

- Update Default: Click “Update default” button to open update default Dialogue. Click “yes” button to update the system

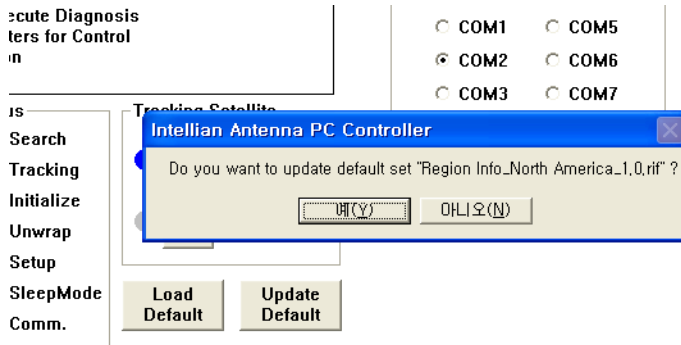


- Click “confirm / yes” button to complete the update.

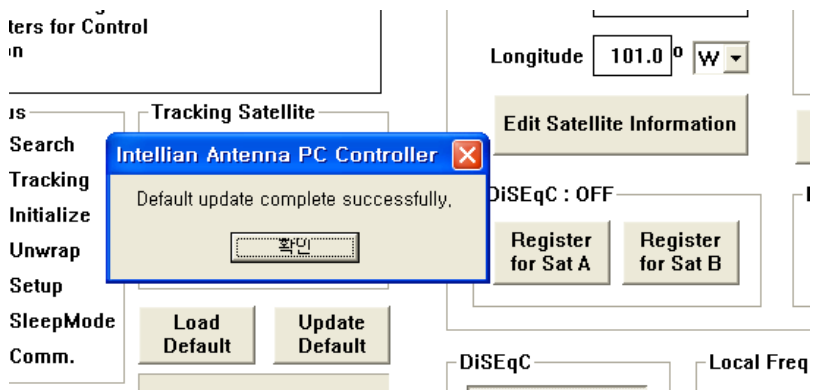

Controller menu

Set Antenna GPS and Find Antenna Angle

Antenna makes use of GPS information to search satellite quickly. The more precise the GPS information is, the quicker the antenna is able to search the satellite. The method to input information into GPS is to push “Set GPS” button after keying in the latitude and longitude information on “City GPS”. Pushing “Add City” button stores the GPS information. By selecting the stored region in the list box, the GPS information of such region is displayed. The Intellian i9/i9P satellite TV antenna system utilizes GPS data to locate the satellite faster.

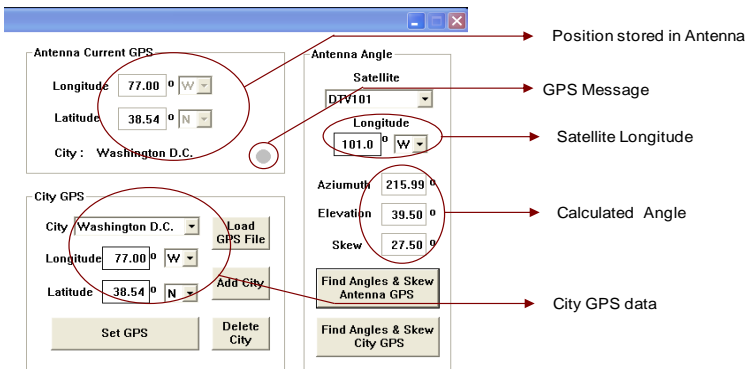

Command Buttons

Load GPS Files – Reads in the various city information from the GPS files.

Add City – Adds the name of city and its GPS information to GPS files.


Delete City – Deletes the name of city and its GPS information from the GPS files.

Set GPS – Inputs the indicated GPS information on display to antenna.

Find Angles & Skew Antenna GPS – Finds the current antenna angles and Skew angle in relation to the longitude of satellite and GPS.

Find Angles & Skew City GPS – Finds the current city angles and Skew angle in relation to the latitude of satellite and GPS.

Set Tracking Information of Satellite [Primary]

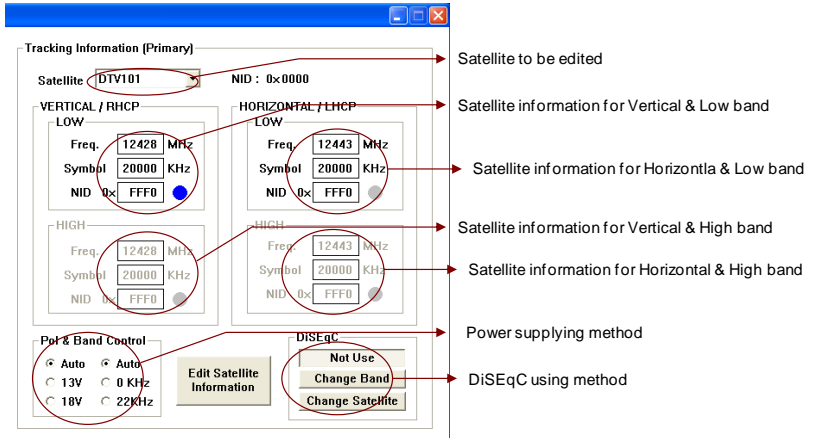

Command Button

Edit Satellite Information – To change frequency information of the antenna.

Satellite Information – Satellite information consists of frequency, symbol and NID(Network ID) of a transponder in tracking satellite. There are four groups of satellite information. ‘Vertical/RHCP’ is applied when IRD supply 13V, and ‘Horizontal/LHCP’ is applied when IRD supply 18V. ‘LOW’ is applied when DiSEqC signal is not detected from IRD, ‘HIGH’ is applied when DiSEqC signal is detected from IRD. If you select ‘Not Use’ or ‘Change Satellite’, two ‘HIGH’ groups are inactivated. If you select ‘Change Band’, two ‘High’ groups are activated and you can modify satellite information which is applied when DiSEqC signal is detected from IRD. After modifying information, press ‘Edit Satellite Information’ button, then new information is updated in the antenna.


Pol & Band Control – The power controls 13V, Vertical (RHCP) and 18V, Horizontal (LHCP) bands. The Band controls High and Low bands. (AUTO RRECOMMEDED)

AUTO & AUTO : 13V and 18V supplied to LNB without regard to IRD.
AUTO & 0KHz : Low band supplied to LNB without regard to IRD.
AUTO & 22KHz : High band supplied to LNB without regard to IRD.

13V & AUTO : 13V supplied to LNB without regard to IRD.
13V & 0KHz : 13V & Low band supplied to LNB without regard to IRD.
13V & 22KHz: 13V & High band supplied to LNB without regard to IRD.

18V & AUTO : 18V supplied to LNB without regard to IRD.
18V & 0KHz : 18V & Low band supplied to LNB without regard to IRD,
18V & 22KHz : 18V & High band supplied to LNB without regard to IRD.


Set Tracking Information of Satellite [Secondary]

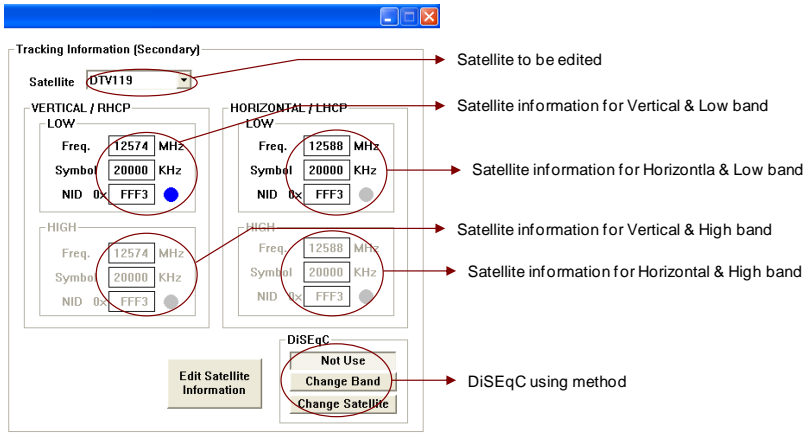

Command Button

Edit Satellite Information – To change frequency information of the antenna.

Move Antenna and Execute Antenna Diagnosis

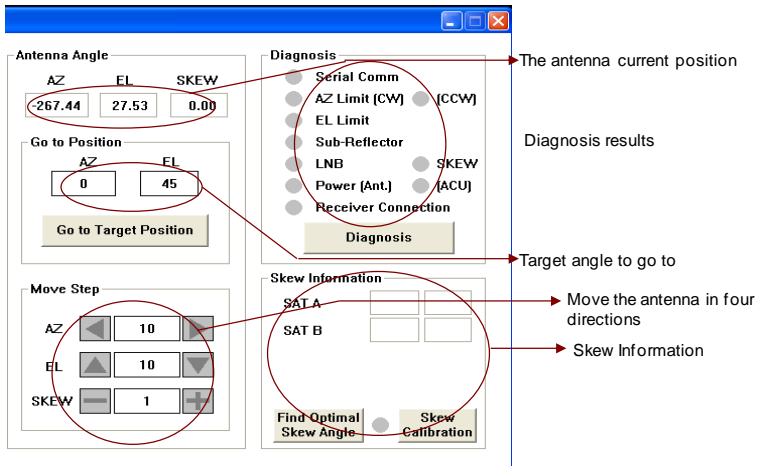

Angle of Antenna

Two kinds of antenna movement is available. One is to move to the target position and the other is to move by certain amount of angle. The current position (angle) of the antenna is displayed as “Current” and to move to the target position, push “Go to target Position” button after keying in desired angle into “Target”. To move to a certain amount of angle only, move antenna to direction of up or down, and CW or CCW by using ▲ ▼ ◀ ▶ buttons after keying in the desired angle into the AZ and EL in the “Mover Step” box. Rotate LNB to direct the skew angle by using ⏪ ⏩ button.

Self-Diagnosis


If “Diagnosis” button is pressed to carry out self- diagnosis of antenna, it displays the result of self-diagnosis after carrying it out. Blue circle means the antenna is normal; red represents abnormal and green represents the antenna is under diagnosis.

Command Button

Go to Target Position – To move the antenna to the present position.

Diagnosis – To diagnose the antenna (BLUE – Passed, RED – Failed, GREEN – Under diagnosis)

Set Antenna Parameters for Control

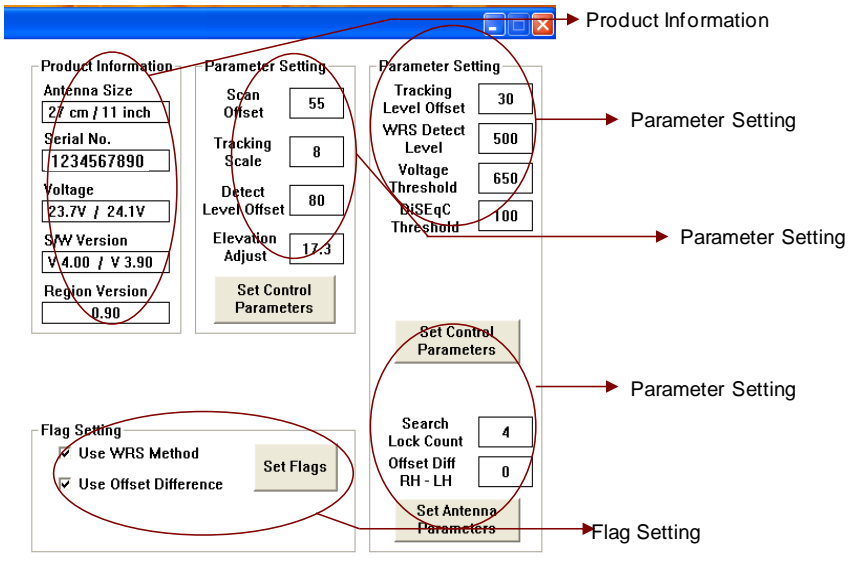

Command Buttons

Set Control Parameter– To register parameters values.

Set Flags – To set flag setting for WRS Method or Offset Difference.

Product Information – Antenna dish size. Serial NO, Voltage for antenna and ACU, Software version for ACU and Control.

Parameter Setting – To set antenna parameter values.

SCAN OFFSET : The actual angle between the marked point on sub-reflector and the datum.

TRACK SCALE : To control the tracking speed while antenna is tracking the satellite.

High track scale value resulting in high tracking speed.

DETECT LEVEL : The basic single detection level.

TRACKING LEVEL : The basic signal tracking level

EL ADJUST : The mechanical tolerance compensation of elevation limit.

WRS LEVEL : The basic WRS detection level.

VOLTAGE THRESHOLD :The value to identify Vertical/Horizontal or RHCP/LHCP

DISEQC THRESHOLD : The value to identify 22KHz tone.

OFFSET DIFFERENCE : The difference value between RHCP/LHCP and SCAN OFFSET .

USE WRS : To apply WRS while antenna is searching for satellite.

USE OFFSET DIFFERENCE : To apply Offset Difference.

Troubleshooting

Symptom	Possible cause*							
	1	2	3	4	5	6	7	8
Antenna not functioning	X							
No picture on TV set			X		X	X		X
Intermittent picture for short intervals		X	X	X	X	X		X
System works at the dock but not underway		X						
System will not find satellite		X	X	X	X	X	X	X
'Snowy' television picture				X				

Note : * for an explanation of possible cause and their remedies refer to the following paragraphs

1. Blown fuse, low power or wiring

Check that the in-line quick blow fuse (if fitted) has not blown or the circuit breaker has not tripped. Replace fuse with one of the same type and rating. If you have extended the power cable from the antenna unit, check that there is no power loss. Check the system wiring and connections.

2. Satellite signal blocked

Satellite signals can be blocked or degraded by buildings, other boats or equipment on your boat. Check to see if the antenna has a clear view of the sky.

3. Outside satellite coverage zone

Your system will provide excellent reception within the antenna coverage area for your satellite television service. However, signal quality may degrade as you approach the edges of this zone.

4. Radar interference

The energy levels radiated by radar units can overload the antenna a front-end circuits. Make sure that your antenna is installed as described in page 9; 'Selection of Installation Site'.

5. Incorrect or loose RF connectors

As part of the regular maintenance recommended by Intellian Technologies, Inc., all connections should be checked to ensure that they have not become loose. A loose RF connector can reduce signal quality.

6. Multi-switch interference

If you have multiple satellite receiver (IRD) connected to your system, make sure that you are using an active not passive multi-switch.

7. Satellite receiver (IRD) troubleshooting

Your satellite receiver (IRD) may be the cause of less than ideal operation.

- 1) Check the satellite receiver's (IRD's) configuration to ensure that it is programmed for the area in which you are operation.
- 2) Unplug the satellite receiver (IRD) from the power supply for 1 second. Reconnect and allow the system to initialize.

8. LNB fault

If you have an LNB fault, it may require replacing. Contact your local dealer, national distributor or Intellian Technologies, Inc. product support for further assistance.

Preparation for Transportation

This is to describe how to fix the antenna internally for transportation, and the following procedures to fix antenna shall be strictly observed to protect it from being damaged during transportation.


1. Refer to the drawing.
2. Rotate antenna left and right slowly till the limit switch is pressed.



WARNING

Don't rotate it quickly, or you may damage the antenna limit system.

3. Turn the antenna by 360° to the reverse direction.
4. Insert the P.E Foam to back side of the dish and tie pedestal with two cable tie to fix the antenna in position
5. Cover upper part of radome being careful for it's not touching the reflector, and then assemble upper part of radome.
6. Pack Intellian i9/i9P into the original package box.

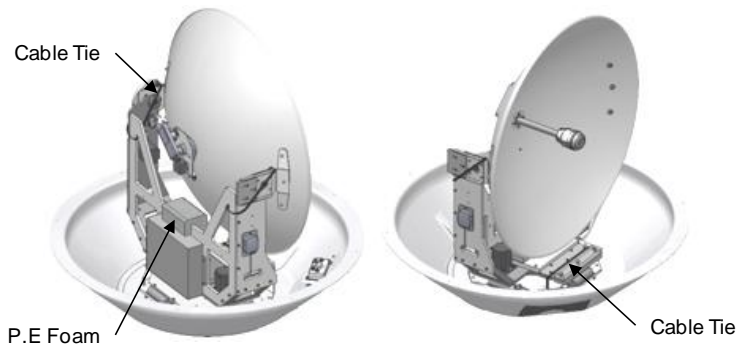

Warranty

This product is guaranteed by Intellian Technologies Inc., against defect due to faulty workmanship or materials and this guarantee covers for 2-year parts and 1-year labor for labor performed at Intellian Technologies, Inc. service center from the date of purchase of the product.

You are requested to present a copy of the purchase receipt issued by Intellian Technologies, Inc. that presents the date of purchase for after sales service under warranty. In case of failure to present the date of purchase, the warranty period is to be calculated to 30 days after the manufacturing production date.

If you discover a defect, Intellian Technologies, Inc. will, at its option, repair, replace or refund the purchase price of the product at no charge to you, provided you return it during the warranty period, transportation charges prepaid, to the factory direct. Please attach your name, address, telephone number, a description of the problem and a copy of the bill of sale or sales receipt as proof of date of original retail purchase, to each product returned to warranty service. Alternatively, you may bring the product to an Authorized Intellian Technologies, Inc. dealer/distributor for repair.

This Limited Warranty does not apply if the product has been damaged by accident, abuse, misuse or misapplication or has been modified without the written permission of Intellian Technologies, Inc.; if any Intellian Technologies, Inc. serial number has been removed or defaced; or if any factory-sealed part of the system has been opened without authorization

Appendix : Technical specification

General

Approvals	
CE – conforms to	EU Directive 89/336/EEC
FCC – verified to	CFR47:Part 15
Dimensions	
Satellite antenna unit	108cm (42.5") x 110cm(43.3")
Antenna dish diameter	85cm(33.5")
Antenna control unit	17.8cm(7")x21.68cm(8.5")x5.38cm(2.1")
Weight	
Satellite antenna unit	55kg (121.2 lbs)
Antenna control unit	1.2kg (2.6 lbs)
Environmental	
Operating temperature range	-25°C to +55°C
Storage temperature range	-30°C to +70°C
Humidity limit	95% R.H
Operating voltage	10.8 ~ 15.6 V DC
Power consumption	Typ. 30W, Max. 50W

Antenna system performance

Frequency	Ku-band(10.7 to 12.75 GHz)
Minimum EIRP	44dBW
Azimuth range	680°
Elevation range	-15° ~ +90°
Ship's motion	Roll $\pm 25^\circ$ Pitch $\pm 15^\circ$
Roll and pitch response rate	30° per second
Turn rate	30° per second

Intellian Technologies™

Communicate Smarter

Intellian Technologies, Inc.

HQ Dongik Building 7th Flr.,
98 Nonhyun-Dong, Gangnam-gu,
Seoul 135-010, Korea
Tel : +82-2-515-4923
Fax: +82-2-545-4903

Factory SK Ventium 104-501,
522 Dangeong-Dong, Gunpo-Si,
Kyunggi-Do 435-776, Korea
Phone: +82-31-436-1488
Fax: +82-31-436-1489

R&D Center SK Ventium 104-601,
522 Dangeong-Dong, Gunpo-Si,
Kyunggi-Do 435-776, Korea
Phone: +82-31-436-2280
Fax: +82-31-436-2284

Intellian Technologies USA, Inc.

9261 Irvine Blvd.
Irvine, CA 92618 USA
Phone: +1-949-916-4411
Fax: +1-949-271-4183

E-Mail : customersupport@Intelliantech.com

Homepage : <http://www.Intelliantech.com>