


# FACSIMILE RECEIVER FAX-410

## Operator's Guide

The purpose of this Operator's Guide is to provide the basic operating procedures for this equipment. For more detailed information see the Operator's Manual.

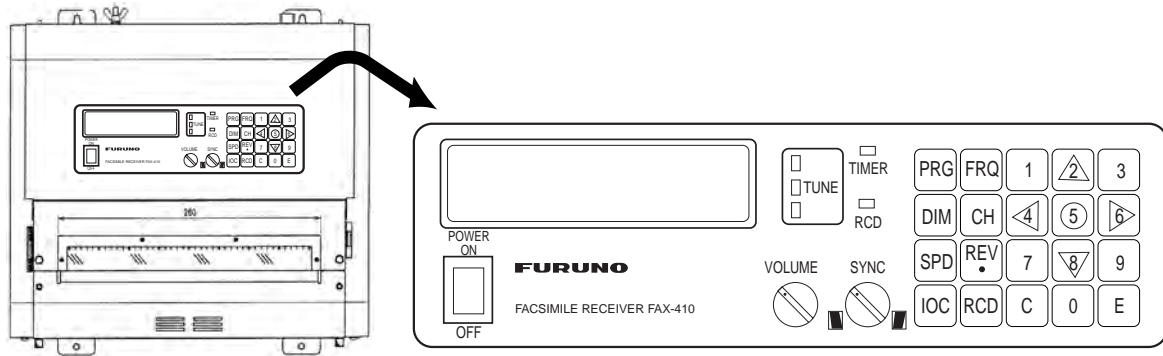

Control	Description	Control	Description
POWER	Turn power on or off.	IOC	Choose IOC (Index of Cooperation).
VOLUME	Adjust volume of receive signal.	RCD	Start and stop recording.
SYNC	Fine tune the phasing signal.	C	<ul style="list-style-type: none"> <li>Clear data in setting mode.</li> <li>Switch from setting mode to standby mode.</li> </ul>
PRG	<ul style="list-style-type: none"> <li>Enable a setting mode (in combination with numeric key).</li> <li>Return to previous screen in a setting mode.</li> </ul>	E	Confirm setting.
FRQ	<ul style="list-style-type: none"> <li>Change from channel mode to frequency mode.</li> <li>Set frequency in frequency mode.</li> </ul>	2	Raise channel in channel mode, or raise frequency in frequency mode.
DIM	Adjust backlight of LCD, in four levels.	4	Manual phasing (leftward) in recording. Each press shifts the recording leftward by 2.5% of the paper width.
CH	<ul style="list-style-type: none"> <li>Change from frequency mode to channel mode.</li> <li>Set channel in channel mode.</li> </ul>	5	Display date and time.
SPD	Choose recording speed.	6	Manual phasing (rightward) in recording. Each press shifts the recording rightward by 2.5% of the paper width.
REV	<ul style="list-style-type: none"> <li>Reverse recording format (from black on white to white on black and vice versa).</li> <li>Enter decimal point in frequency.</li> </ul>	8	Lower channel in channel mode, or lower frequency in frequency mode.



## Automatic Receiving

---

1. Press the **CH** key to show the channel display.

```
C000  JMH  3622.5
S120  I576
```

2. Press the **▲** or **▼** key to choose channel desired.

## Manual Receiving

---

1. Press the **CH** key to show the channel display.
2. Press the **▲** or **▼** key to choose channel desired.
3. Press the **RCD** key to start receiving.

## Stopping Receiving

---

Press the **RCD** key.

## Timer Reception

---

### Registering timer programs

1. Press the **PRG** key and the **2** key.

```
TIMER  RCV : 1-OFF
2-ON  3-RCL  4-STR
```

2. Press the **4** key.

```
STORE  TIMER  REG
SET  REG  NO. 0-F
```

3. Use the **▲** or **▼** key to choose timer program number.

```
R1  SET  CHANNEL
No. in 3 FIGURES
```

4. Enter a channel number and then press the **E** key to confirm number.

```
R1  C000  SET  DAY
of THE WEEK by ▲▼
```

5. Set the day of the week which to receive the program, using the **▲** or **▼** key. Choose the asterisk (\*) to get a broadcast daily.

6. Press the **E** key.

```
R1  C000  MON
SET  START/STOP
```

7. Enter start and end time, in 24-hour notation, using the numeric keys.
8. Press the **E** key. (The start and end times should be two minutes before and after actual time respectively to allow for detection of the start and stop signals.)

### Choosing timer programs for timer reception

1. Press the **PRG** key and the **2** key.

```
TIMER  RCV : 1-OFF
2-ON  3-RCL  4-STR
```

2. Press the **2** key.

```
SET  REG No. 0-F
PUSH ▲/▼&▶& E KEY
```

3. Use the **▲** or **▼** key to choose timer program number and press the **▶** key.

```
TIMER  RCV NO.: 4
0123
```

4. To choose another program, repeat step 3.
5. After choosing all programs necessary, press the **E** key.