

FURUNO

OPERATOR'S MANUAL

CLASS A AIS

Model **FA-170**

PRODUCT NAME: U-AIS TRANSPONDER

ECF

(Elemental Chlorine Free)

The paper used in this manual
is elemental chlorine free.

FURUNO ELECTRIC CO., LTD.

9-52 Ashihara-cho,
Nishinomiya, 662-8580, JAPAN

• FURUNO Authorized Distributor/Dealer

All rights reserved. Printed in Japan

Pub. No. OME-44900-C

(TASU) FA-170

A : NOV. 2015

C : SEP. 22, 2017



0 0 0 1 9 1 0 8 9 1 2

IMPORTANT NOTICES

General

- This manual has been authored with simplified grammar, to meet the needs of international users.
- The operator of this equipment must read and follow the descriptions in this manual. Wrong operation or maintenance can cancel the warranty or cause injury.
- Do not copy any part of this manual without written permission from FURUNO.
- If this manual is lost or worn, contact your dealer about replacement.
- The contents of this manual and equipment specifications can change without notice.
- The example screens (or illustrations) shown in this manual can be different from the screens you see on your display. The screens you see depend on your system configuration and equipment settings.
- Save this manual for future reference.
- Any modification of the equipment (including software) by persons not authorized by FURUNO will cancel the warranty.
- The following concern acts as our importer in Europe, as defined in DECISION No 768/2008/EC.
 - Name: FURUNO EUROPE B.V.
 - Address: Ridderhaven 19B, 2984 BT Ridderkerk, The Netherlands
- All brand and product names are trademarks, registered trademarks or service marks of their respective holders.

How to discard this product


Discard this product according to local regulations for the disposal of industrial waste. For disposal in the USA, see the homepage of the Electronics Industries Alliance (<http://www.eiae.org/>) for the correct method of disposal.

How to discard a used battery

Some FURUNO products have a battery(ies). To see if your product has a battery, see the chapter on Maintenance. Follow the instructions below if a battery is used. Tape the + and - terminals of battery before disposal to prevent fire, heat generation caused by short circuit.


In the European Union

The crossed-out trash can symbol indicates that all types of batteries must not be discarded in standard trash, or at a trash site. Take the used batteries to a battery collection site according to your national legislation and the Batteries Directive 2006/66/EU.

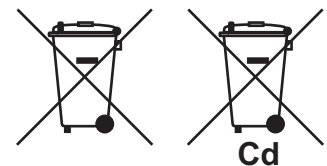

In the USA

The Mobius loop symbol (three chasing arrows) indicates that Ni-Cd and lead-acid rechargeable batteries must be recycled. Take the used batteries to a battery collection site according to local laws.

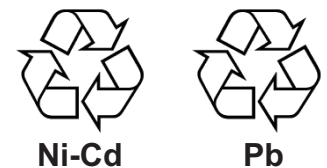



In the other countries

There are no international standards for the battery recycle symbol. The number of symbols can increase when the other countries make their own recycle symbols in the future.




SAFETY INSTRUCTIONS

The operator must read the safety instructions before attempting to operate this equipment.


 WARNING	Indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.
 CAUTION	Indicates a potentially hazardous situation which, if not avoided, can result in minor or moderate injury.

 Warning, Caution	 Prohibitive Action	 Mandatory Action
--	--	--

WARNING


 **ELECTRICAL SHOCK HAZARD**
Do not open the equipment.

Only qualified personnel should work inside the equipment.


 **Do not approach the antenna closer than listed below when it is transmitting.**

The antenna emits radio waves that can be harmful to the human body.


RF power density on antenna aperture	Distance
100 W/m ²	N/A
10 W/m ²	0.04 m
2 W/m ²	0.09 m

 **Immediately turn off the power at the switchboard if water leaks into the equipment or something is dropped in the equipment.**


Continued use of the equipment can cause fire or electrical shock. Contact a FURUNO agent for service.

 **Do not disassemble or modify the equipment.**

Fire, electrical shock or serious injury can result.


 **Do not place liquid-filled containers on the top of the equipment.**

Fire or electrical shock can result if a liquid spills into the equipment.


 **Use the proper fuse.**

Use of the wrong fuse can cause fire or permanent damage to the equipment.


WARNING

 **Immediately turn off the power at the switchboard if the equipment is emitting smoke or fire.**

Continued use of the equipment can cause fire or electrical shock. Contact a FURUNO agent for service.

 **Make sure no rain or water splash leaks into the equipment.**


Fire or electrical shock can result if water leaks in the equipment.

 **Do not operate the equipment with wet hands.**

Electrical shock can result.

WARNING LABEL

A warning label is attached to the AC-DC power supply. Do not remove the label. If the label is missing or damaged, contact a FURUNO agent or dealer about replacement.

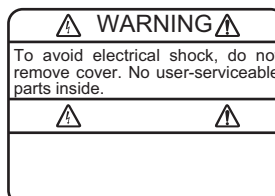

Unit: PR-240 Power Supply
Name: Warning Label (1)
Type: 86-003-1011-3
CodeNo.: 100-263-233-10

About the TFT LCD


The TFT LCD is constructed using the latest LCD techniques, and displays 99.99% of its pixels. The remaining 0.01% of the pixels may drop out or blink, however this is not an indication of malfunction.

SYSTEM OVERVIEW

System overview

The Automatic Identification System (AIS) was originally developed to aid the Vessel Traffic Services (VTS) by use of a VHF transponder working on Digital Selective Call (DSC) at VHF CH70, and is still in use along the UK coastal areas and others. Some time later the IMO developed a Universal AIS using the new sophisticated technology called Self-Organized Time Division Multiple Access (SOTDMA) based on a VHF Data Link (VDL).

The system operates in three modes – autonomous (continuous operation in all areas), assigned (data transmission interval remotely controlled by authority in traffic monitoring service) and polled (in response to interrogation from a ship or authority). It is synchronized with GPS time to avoid conflict among multiple users (IMO minimum 2000 reports per minute and IEC requires 4500 reports on two channels). The VHF channels 87B and 88B are commonly used and in addition there are local AIS frequencies. Shipborne AIS transponders exchange various data as specified by the IMO and ITU on either frequency automatically set up by the frequency management telecom-mand received by the DSC receiver on ship.

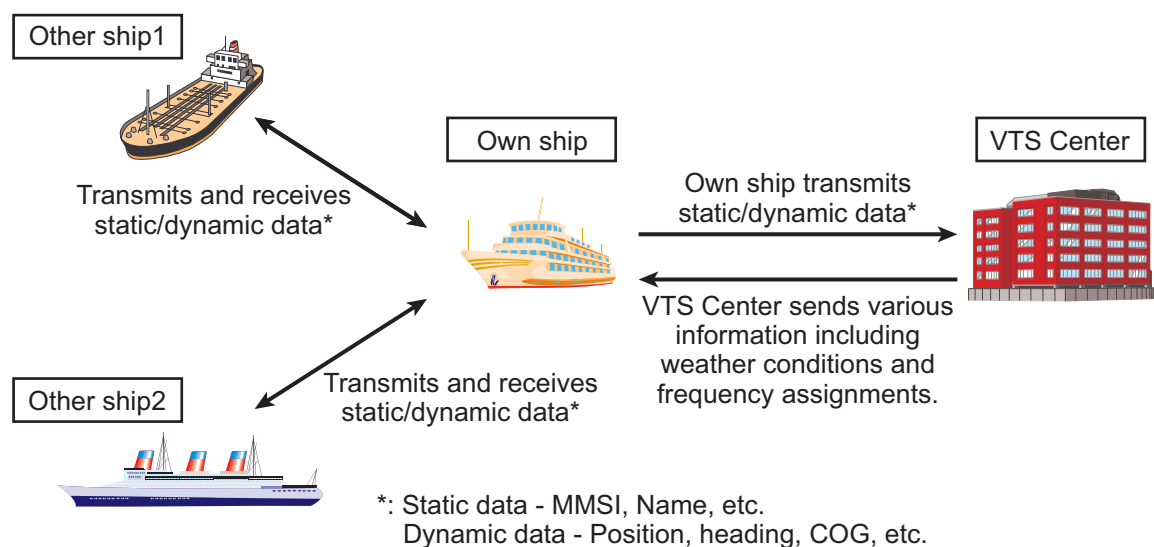

AIS system

Not all ships carry AIS

The Officer of the Watch (OOW) should always be aware that other ships, and in particular leisure craft, fishing boats and warships, and some coastal shore stations (including Vessel Traffic Service centers) might not be fitted with AIS.

The OOW should also be aware that AIS fitted on other ships as a mandatory carriage requirement might be switched off by the master if its use might compromise the security of the vessel. Thus, users are therefore cautioned to always bear in mind that information provided by AIS may not be giving a complete or correct “picture” of shipping traffic in their vicinity.

Use of AIS in collision avoidance

As an anti-collision aid, the AIS has the following advantages over radar:

- Information provided in near real-time
- Capable of instant presentation of target course alterations
- Not subject to target swap
- Not subject to target loss in clutter
- Not subject to target loss due to abrupt maneuvers
- Able to “detect” ships within VHF/FM coverage, including in some circumstances, around bends and behind islands.

When using the AIS for anti-collision purposes it is important to remember that the AIS is an additional source of navigation information. It does not replace other navigational systems. The AIS may not be giving a complete or correct “picture” of shipping traffic in its vicinity.

The use of the AIS does not negate the responsibility of the OOW to comply with all collision regulation requirements, especially the maintaining of a proper look-out. The prudent navigator uses all aids available to navigate the ship.

Erroneous information

Erroneous information implies a risk to other ships as well as your own. Poorly configured or improperly calibrated sensors might lead to incorrect information being transmitted. It is the user’s responsibility to ensure that all information entered into the system is correct and up to date.

TABLE OF CONTENTS

FOREWORD	vii
SYSTEM CONFIGURATION	ix
1. OPERATION	1-1
1.1 Description of Controls	1-1
1.2 How to Turn the Power On and Off	1-2
1.3 How to Adjust the Panel and Display Brilliance.....	1-3
1.4 Display Overview.....	1-4
1.5 Menu Overview.....	1-5
1.5.1 Menu operating procedure	1-5
1.5.2 How to select a menu option	1-6
1.5.3 How to enter numeric data	1-6
1.5.4 How to use the software keyboard for alphanumeric input	1-6
1.6 How to Enter Voyage-Related Data	1-7
1.7 How to Set the Notification	1-10
1.8 How to Select a Display.....	1-11
1.8.1 Plotter display	1-12
1.8.2 Target list.....	1-14
1.8.3 Dangerous (target) list.....	1-15
1.8.4 How to interpret the [TARGET DETAIL] screen	1-16
1.8.5 Own ship data	1-18
1.8.6 Alert display	1-19
1.9 Messages	1-20
1.9.1 How to send a message.....	1-20
1.9.2 How to receive messages	1-22
1.9.3 How to use the message box (MSG BOX).....	1-22
1.10 Regional Operating Channels	1-24
1.10.1 How to view channel information.....	1-24
1.10.2 How to edit/view regional channels	1-25
1.11 How to Enable/Disable the Key Beep.....	1-28
1.12 Long Range	1-28
1.12.1 How to set up long range response.....	1-28
1.12.2 How to broadcast own ship data	1-29
1.13 Pilot Plug (FA-1703, option)	1-30
1.14 Viewing Initial Settings.....	1-31
1.15 Setting for Time Difference.....	1-32
2. INLAND AIS OPERATION	2-1
2.1 How to Activate the Inland AIS	2-1
2.2 Selecting AIS Mode	2-2
2.3 How to Enter Voyage-Related Data	2-3
2.4 Static Data	2-8
2.5 Target List and Dangerous Target List.....	2-9
2.5.1 Target list.....	2-9
2.5.2 Dangerous (target) list.....	2-11
2.5.3 How to interpret the [TARGET DETAIL] screen	2-11
2.6 Inland AIS Specific Messaging	2-14
2.6.1 How to send a text message	2-14
2.6.2 How to view a sent text message	2-16
2.6.3 ETA and RTA messages	2-16
2.6.4 No. of persons message	2-20
2.6.5 EMMA warning message	2-21

TABLE OF CONTENTS

2.6.6	Water level message.....	2-22
2.7	Viewing Initial Settings	2-23
2.8	Setting for Time Difference	2-24
2.9	How to Select Menu Language	2-24
3.	MAINTENANCE, TROUBLESHOOTING.....	3-1
3.1	Maintenance.....	3-1
3.2	Replacement of Fuse	3-2
3.3	Troubleshooting	3-2
3.4	Diagnostics.....	3-3
3.4.1	Monitor unit test.....	3-3
3.4.2	Transponder test.....	3-4
3.4.3	VHF communication test.....	3-5
3.4.4	TX on/off log.....	3-6
3.5	Alerts	3-7
3.6	GPS Monitor.....	3-8
3.7	Displaying Sensor Status	3-9
3.8	How to Restore Default Settings.....	3-10
3.9	AIS-SART Test Indication in Target List	3-10
	APPENDIX 1 MENU TREE	AP-1
	APPENDIX 2 ALERTS, IDS, MEANINGS AND MEASURES.....	AP-7
	APPENDIX 3 PARTS LIST/LOCATION.....	AP-10
	APPENDIX 4 CHANNEL LISTS AND ERI CODES	AP-11
	APPENDIX 5 ABBREVIATIONS, UNITS AND SYMBOLS	AP-13
	APPENDIX 6 RADIO REGULATORY INFORMATION	AP-18
	SPECIFICATIONS	SP-1
	INDEX.....	IN-1

FOREWORD

A Word to the Owner of the FA-170

FURUNO Electric Company thanks you for purchasing the FA-170 AIS Transponder. We are confident you will discover why the FURUNO name has become synonymous with quality and reliability.

Since 1948, FURUNO Electric Company has enjoyed an enviable reputation for quality and reliability throughout the world. This dedication to excellence is furthered by our extensive global network of agents and dealers.

Your equipment is designed and constructed to meet the rigorous demands of the marine environment. However, no machine can perform its intended function unless properly operated and maintained. Please carefully read and follow the operation and maintenance procedures in this manual.

We would appreciate feedback from you, the end-user, about whether we are achieving our purposes.

Thank you for considering and purchasing FURUNO.

Features

The FA-170 is a universal AIS (Automatic Identification System) for open sea and inland waterways, capable of exchanging navigation and ship data between own ship and other ships or coastal stations.

It complies with IMO MSC.74(69) Annex 3, IMO MSC.302(87), A.694, ITU-R M.1371-5 and DSC ITU-R M.825. It also complies with IEC 61924-2, IEC 61993-2 (Type testing standard) and IEC 60945 Ed. 4 (EMC and environmental conditions).

The FA-170 consists of VHF and GPS antennas, a transponder unit, a monitor unit, and several associated units. The transponder contains a VHF transmitter, two TDMA receivers on two parallel VHF channels, a DSC channel 70 receiver, interface, communication processor, and internal GPS receiver. The internal GPS is a 12-channel all-in-view receiver with a differential capability, and provides UTC reference for system synchronization to eliminate clash among multiple users. It also gives position, COG and SOG when the external GPS fails.

The main features are:

- Safety of navigation by automatically exchanging navigational data between ships and between ship and coast
- Static data:
 - MMSI (Maritime Mobile Service Identity)
 - IMO number (where available)
 - Call sign & name
 - Length and beam
 - Type of ship
 - Location of position-fixing antenna on the ship

FOREWORD

- Dynamic data:
 - Ship's position with accuracy indication and integrity status
 - Universal Time Coordinated (UTC)
 - Course over ground (COG)
 - Speed over ground (SOG)
 - Heading
 - Rate of turn (ROT) where available
- Voyage-related data
 - Ship's draught
 - Navigational status (manual input)
 - Hazardous cargo (type)
 - Destination and ETA (at master's discretion)
- Short safety-related messages, free messages
- LCD panel satisfies the IMO minimum requirements plus simple plotting modes
- Interfaces for radar, ECDIS, PC for future networking expansion
- GPS/VHF combined antenna for easy installation available
- Built-in GPS receiver for UTC synchronization and backup position-fixing device
- The Inland AIS feature is based on CCNR (Vessel Tracking and Tracing Standard for Inland Navigation). Inland AIS receives and sends SOLAS AIS information, and interfaces automatic data input such as blue sign, draught (in centimeters), air draught (height from waterline), hazardous cargo blue cone indication, euro ship identifier and inland ship type. Further, the inland AIS sends ETA (Estimated Time of Arrival) to lock, bridge, terminal, etc. and displays response as RTA (Requested Time of Arrival) from the lock, bridge or terminal. Information receivable from land stations include EMMA warning, water level data, etc.

Program Numbers


Unit & PC board	Program No.	Version No.	Date of modification
Monitor Unit (MAIN: 20P8200D)	0550256	01.xx	
Transponder Unit (R-MOD: 05P0892)	0550255	01.xx	
Transponder Unit (GPS: 20P8211)	48504650	xx	

xx: Minor modification

CE Declarations

With regards to CE declarations, please refer to our website (www.furuno.com), for further information about RoHS conformity declarations.

SYSTEM CONFIGURATION

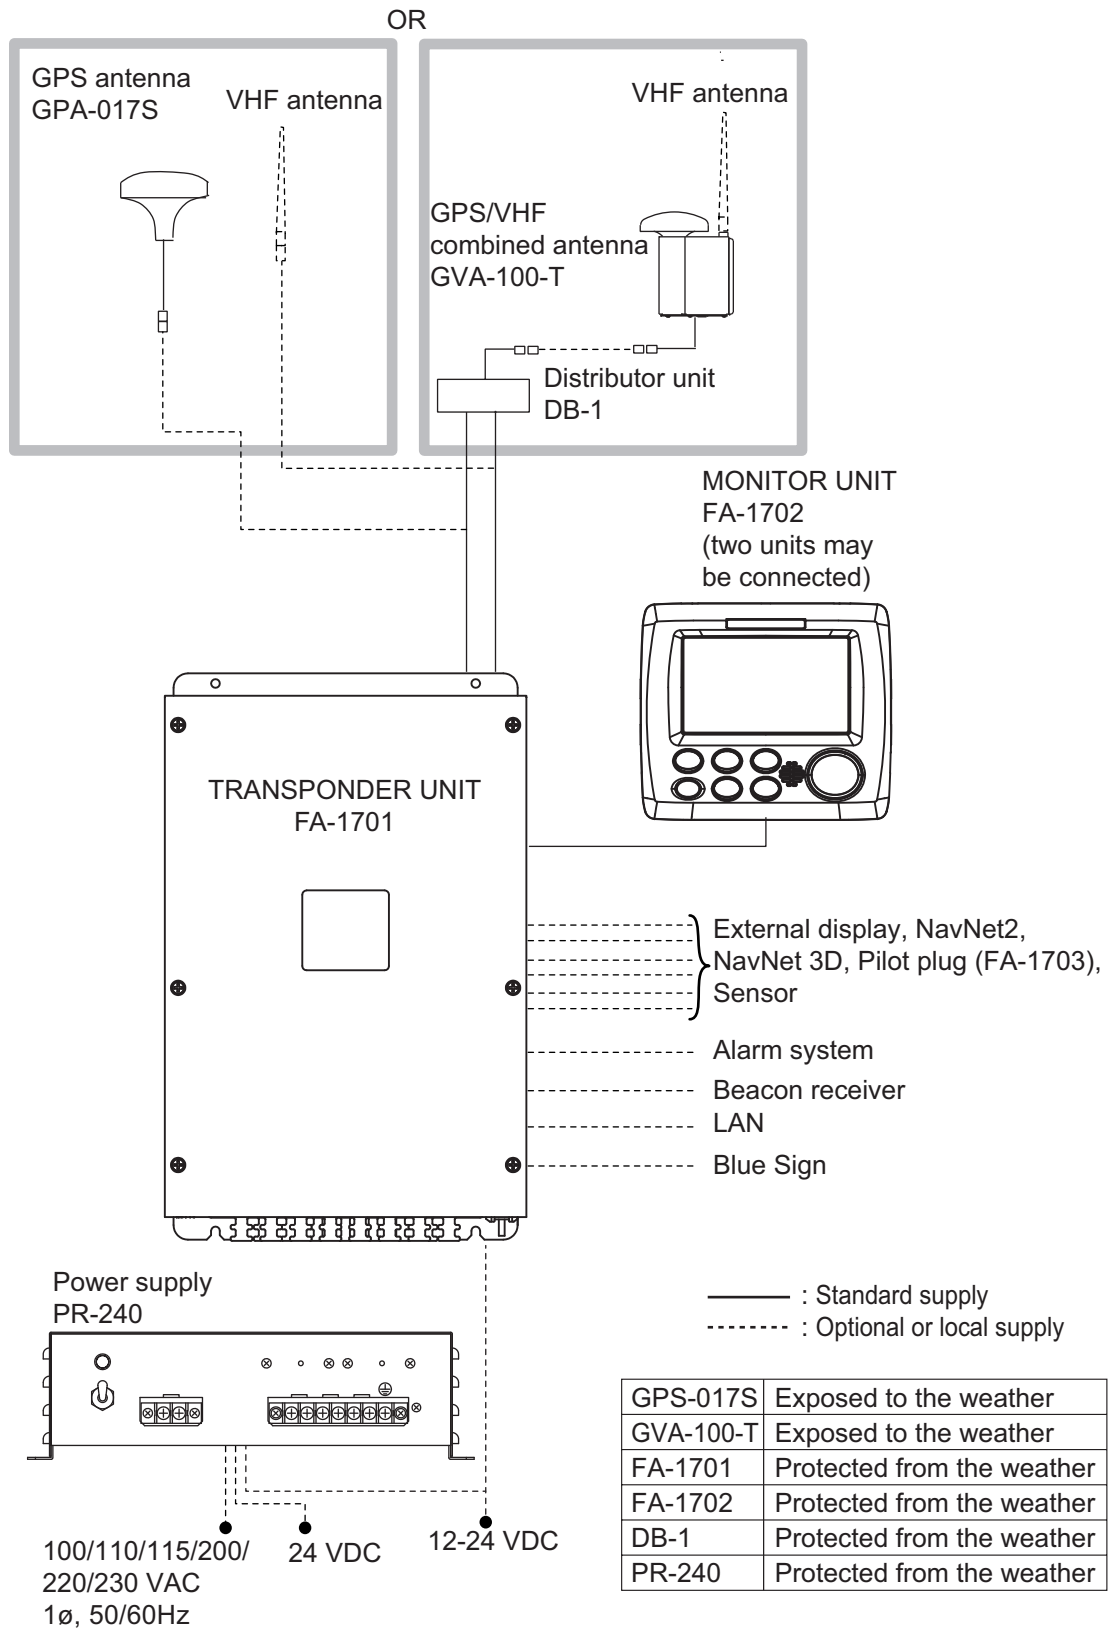


This page is intentionally left blank.

1. OPERATION

1.1 Description of Controls




No.	Key name	Function(s) when pressed
1	BRILL key	<ul style="list-style-type: none"> Displays brilliance setting pop-up window. Switches between Day and Night display modes.
2	DISP key	<ul style="list-style-type: none"> Cycles through display screens. Switches between Day and Night display modes when brilliance pop-up window is active. Closes all active menu windows and returns to the last used display screen.
3	MENU/ESC key	<ul style="list-style-type: none"> Opens the menu. Goes back one layer in the menu. Closes the settings screen, when displayed, and returns to the menu.
4	Power key 	<ul style="list-style-type: none"> Short press to turn the unit on. Long press to turn the unit off.
5	NAV STATUS key	Opens the [NAV STATUS] settings window.
6	ENT/ACK key	<ul style="list-style-type: none"> Confirms the currently selected item on the menu. Confirms adjusted settings. Acknowledge alerts.
7	Cursorpad	<ul style="list-style-type: none"> Move the selection cursor. Plotter display: ◀ or ▶ changes display range. TARGET LIST display: ◀ or ▶ changes pages. OWN INFORMATION display: ◀ or ▶ switches between information tabs. ALERT display: ◀ or ▶ switches between the alert list and the alert log. ▲ or ▼ selects an alert.


Note: The nominal viewing distance is 70 cm.


This manual uses the following terminology for the sake of brevity:

Terminology	Example	Meaning
Select	Select [MSG].	Use the Cursorpad to select [MSG].
◀, ▲, ▶, ▼	Press ▶.	Press the corresponding arrow on the Cursorpad.

1.2 How to Turn the Power On and Off

Press the power key  to turn the equipment on. When powered, the equipment sounds a beep then proceeds in the sequence shown below.

To turn the power off, press and hold the power key .

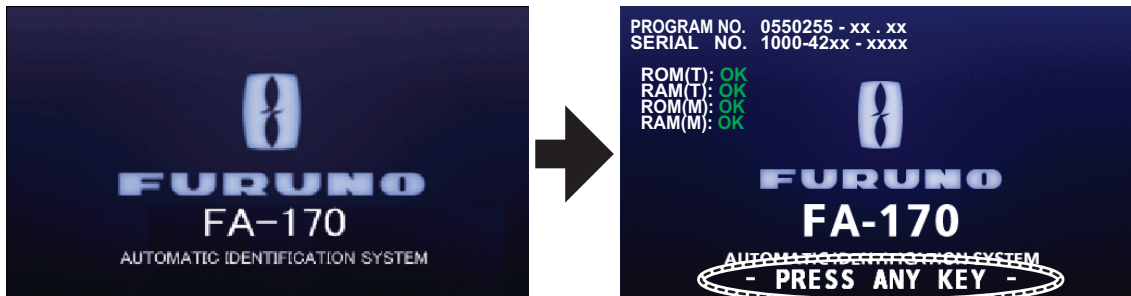

This indication flashes to show the unit is ready for use. The automatic startup test results are displayed when tests are completed.

Indication	Description
PROGRAM NUMBER	Displays the program number for this FA-170. The indication "XX.XX" is replaced with the version number.
SERIAL NUMBER	Displays the serial number for this FA-170.
ROM(T) / RAM(T)	Displays the ROM/RAM test results for the connected FA-1701.
ROM(M) / RAM(M)	Displays the ROM/RAM test results for the FA-1702.

The startup screen displays the program version number, serial number and the results of the ROM and RAM data test, showing "OK" or "NG" (No Good) as the result. The message "- PRESS ANY KEY -" flashes to indicate that the test is complete. Press any key to close the test results. If "NG" appears for any of the check results after the startup test is completed, contact your dealer for advice.

When no errors occur at startup, the plotter display is shown after the test is completed.

If there is no response from the transponder unit or AIS symbols do not appear, the message "COMMUNICATION ERROR" appears on the screen. Press any key to erase the message. Check the connection between the monitor unit and the transponder unit.

The FA-170 should be powered while underway or at anchor. The master may switch off the AIS if he believes that the continual operation of the AIS might compromise the safety or security of his ship. The AIS should be restarted when it is safe to do so.

The equipment transmits own ship static data within two minutes of start-up and it is transmitted at six-minute intervals thereafter. Static data includes MMSI number, IMO number, call sign, ship name, ship length and width, ship type and GPS antenna position.

In addition to static data, ship's dynamic data is also transmitted. This data includes position with quality indication, SOG, COG, rate of turn, heading, etc. Dynamic data is transmitted every 2 seconds to 3 minutes depending on ship's speed and course change. Voyage-related data, such as ship's draught, hazardous cargo, destination and estimated time of arrival, are also transmitted at six-minute intervals.

The FA-170 starts receiving data from AIS-equipped ships as soon as it is turned on, and those ships' locations are shown on the plotter display with the AIS symbol. (To learn more about the plotter display, see section 1.8.) With connection of a radar or ECDIS, the AIS target symbols may be overlaid on the radar or ECDIS.

Note 1: If no navigation sensor is installed or a sensor such as a gyrocompass has failed, the AIS automatically transmits “not available data” to AIS-equipped ships.

Note 2: The reporting intervals are as follows:


Ship's navigational status	Nominal reporting interval
Ship at anchor or moored or aground or not under command and not moving faster than 3 kn	3 minutes
Ship at anchor or moored or aground or not under command and moving faster than 3 kn	10 seconds
Ship speed 0-14 kn	10 seconds
Ship speed 0-14 kn and changing course	3 1/3 seconds
Ship speed 14-23 kn	6 seconds
Ship speed 14-23 kn and changing course	2 seconds
Ship speed faster than 23 kn	2 seconds
Ship speed faster than 23 kn and changing course	2 seconds

Note 3: The screen refreshes slower in low ambient temperature. (See the specifications at the back of this manual for detailed information on recommended ambient temperatures.)

1.3 How to Adjust the Panel and Display Brilliance

The panel and display brilliance may be adjusted as follows:

1. Press the **BRILL** key to show the [BRILL LEVEL SETUP] pop up window. If there is no operation within five seconds, the pop up window automatically closes.

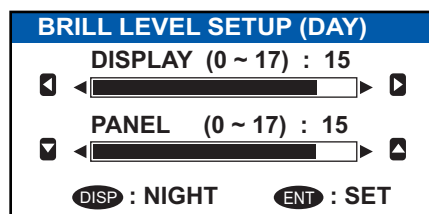

2. Press **▲** or **▼** to adjust the panel brilliance; **◀** or **▶** to adjust the display brilliance. The default panel and display brilliance settings are 15 and 15, respectively. To restore default settings see section 3.8.)

Note: The display brilliance can also be adjusted by pressing the **BRILL** key several times to cycle through brilliance levels.

3. Press the **ENT/ACK** key to close the setting screen and apply the settings.


How to switch between day and night displays

You can change the background and text color to suit the time of day.

1. Press the **BRILL** key to show the [BRILL LEVEL SETUP] pop up window.
2. Press the **DISP** key while the pop up window is shown. The pop up window closes and the display settings change.
3. Repeat the procedure to reverse the settings.

1.4 Display Overview

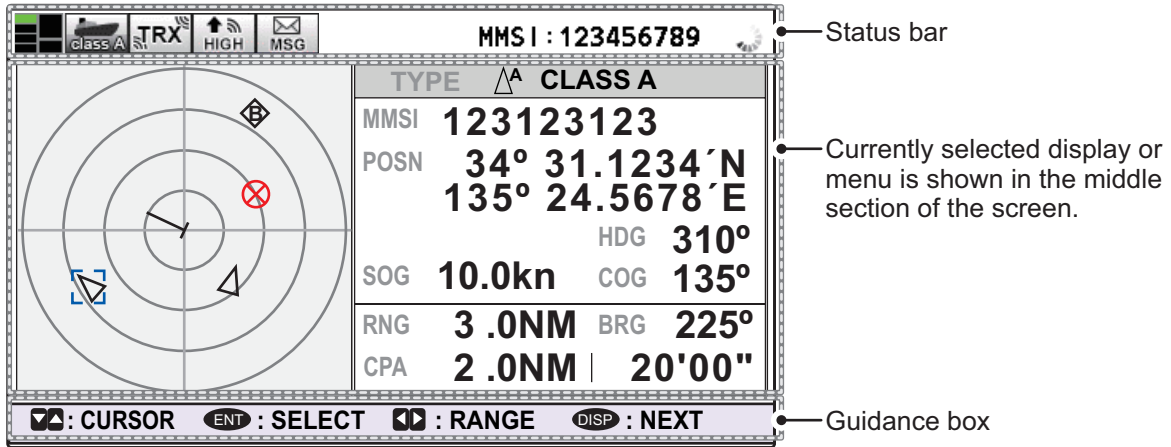


The FA-170 display is made up of three major areas, as indicated in the Plotter display example figure below.



The guidance box contents change according to the currently selected display or menu.

The status bar shows various icons indicating the status of the equipment and shows the vessel's own MMSI. The icons which can be displayed in the status bar are listed in the table below, along with a brief description.

Icon	Icon name	Description
	Operational status	The dotted line rotates in a clockwise motion to indicate that the equipment is working normally.
	Contents mini-map	Shows the location of the currently selected menu/display, indicated as a green box in the mini-map. The figure below shows the "locations", as displayed in the mini-map. <div style="text-align: center; margin-top: 10px;"> <p>Plotter — [] — Menu Target list — [] — Own (ship) information — [] — Alert — [] — NAV STATUS</p> </div>
	Class A AIS mode	Displayed when the equipment is using the Class A AIS mode.
	SOLAS AIS mode	Displayed when the equipment is using the SOLAS AIS mode.
	INLAND AIS mode	Displayed when the equipment is using the INLAND AIS mode.
	RX (Receive)	Displayed when both A and B channels are set to receive mode (includes OFF). Shown only with CLASS A and INLAND AIS modes.
	TRX (Transmit)	Displayed when either channel A or B are set to transmit mode.
	HIGH (power)	Displayed when the transmit power level is set to [HIGH].

Icon	Icon name	Description
	LOW (power)	Displayed when the transmit power level is set to [LOW].
	SEND	Displayed during message transmission for all messages, except routine messages.
	MSG	Displayed when there are unread messages.
MMSI	MMSI	Own ship MMSI.


1.5 Menu Overview

You can access the various functions of your FA-170 from the menu. If you get lost in operation, press the **MENU/ESC** key until you return to the main menu. A complete menu tree is provided in "MENU TREE" on page AP-1.


Note: Inland AIS mode menus may differ from the menus shown in this chapter. For INLAND AIS mode, see "INLAND AIS OPERATION" on page 2-1.

1.5.1 Menu operating procedure


1. Press the **MENU/ESC** key to display the main menu.

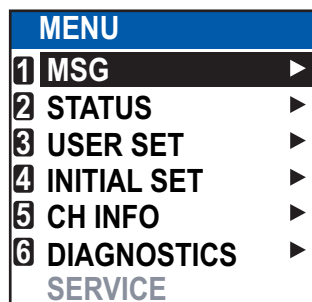

2. Select a main menu item, then press the **ENT/ACK** key.
3. Select a sub-menu then press the **ENT/ACK** key.
There are two types of sub-menus: option selection and data input. (Some sub-menus combine both.) Below are examples of each type of sub-menu.

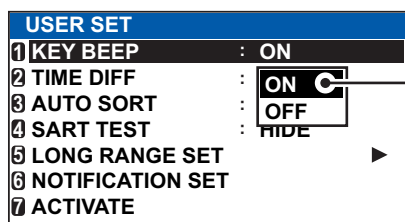

Options window

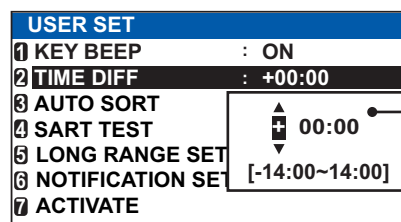


Data input window (numerical)

4. Select a menu item then press the **ENT/ACK** key.
5. Depending on the menu selected, select an option or input alphanumeric data, then press the **ENT/ACK** key.
6. Press the **DISP** key to close the menu.

1.5.2 How to select a menu option

The procedure below shows how to select an option from a menu.


- 1) A window showing the options for the item selected is overlaid on the sub-menu. For example, the options for [KEY BEEP] are as shown below.

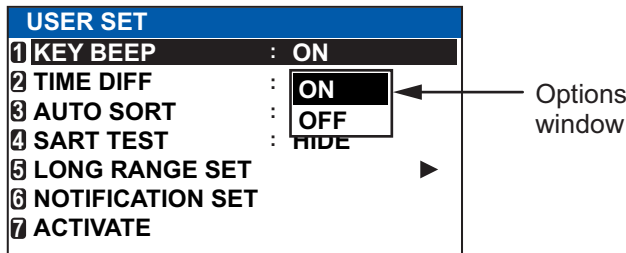

- 2) Press ▲ or ▼ to select option desired, then press the ENT/ACK key.

1.5.3 How to enter numeric data


The procedure below shows how to enter numeric data.

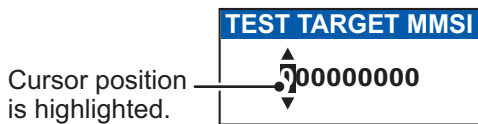

- 1) Select the appropriate numeric character. Press ▲ to display numeric characters cyclically in ascending order. Press ▼ to display numeric characters cyclically in descending order.
- 2) Press ◀ or ▶ to shift the cursor.
- 3) Repeat steps 1) and 2) to finish entering data.
- 4) After entering all data, press the ENT/ACK key to register input.

1.5.4 How to use the software keyboard for alphanumeric input

The software keyboard appears when alphanumeric input is possible. Software keyboard operation requires the use of the Cursorpad and the ENT/ACK key.

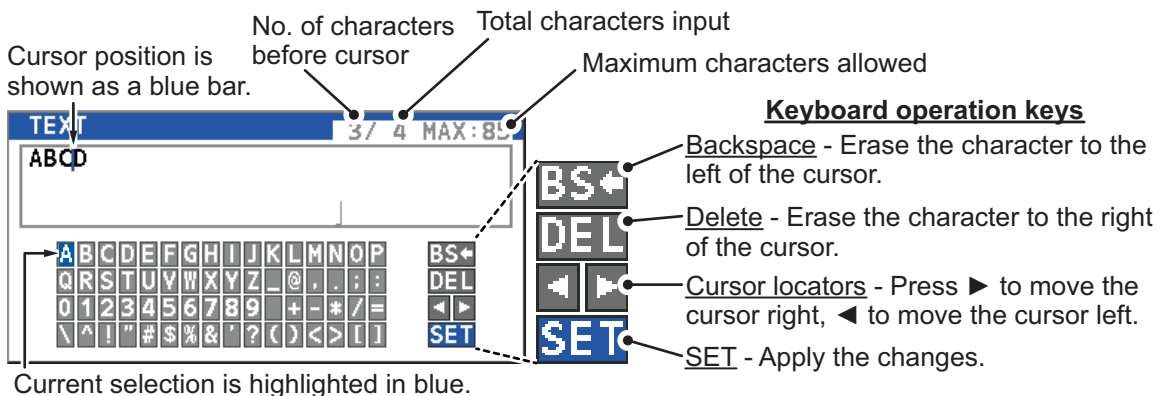

1. Referring to the figure above, press the arrow keys to select a character or keyboard operation.
2. Press the ENT/ACK key to confirm your selection.
3. Repeat steps 1 and 2 to complete the alphanumeric input.
4. Select [SET], then press the ENT/ACK key.

1.6 How to Enter Voyage-Related Data

There are six items on the [NAV STATUS] menu that you will need to enter at the start of a voyage.

- Navigational status
- Destination
- Cargo type
- No. of persons
- ETA(LT/UTC) (Arrival time)
- Draught

1. Press the **NAV STATUS** key to open the [NAV STATUS] menu.
The [NAV STATUS] setting is selected by default

NAV STATUS	
NAV STATUS	: 12 PWR-DRIVEN VESSEL PUSHING AHEAD OR TOWING ALONGSIDE
DESTINATION	: KOBE [DESTINATION LIST]
ETA[UTC]	: 12/MAY 12:32
CARGO TYPE	: 24 WIG CARRYING DG, HS, OR, MP(OS)
DRAUGHT	: 0.0m
NO. OF PERSONS	: 1
[CURSOR] : CURSOR [ENT] : SELECT [TAB] : TAB	

2. If your navigational status is different from that shown, follow the procedure below. If it is the same as shown, go to step 3.
 - 1) Press the **ENT/ACK** key. The [NAV STATUS] options pop up window appears.
 - 2) Input the appropriate status, then press the **ENT/ACK** key. Refer to the data below to select appropriate navigational status.

- 00: UNDERWAY USING ENGINE
- 01: AT ANCHOR
- 02: NOT UNDER COMMAND
- 03: RESTRICTED MANEUVERABILITY
- 04: CONSTRAINED BY HER DRAUGHT
- 05: MOORED
- 06: AGROUND
- 07: ENGAGED IN FISHING
- 08: UNDERWAY SAILING
- 09: RESERVED FOR HIGH SPEED CRAFT (HSC)*1
- 10: RESERVED FOR WING IN GROUND (WIG)*2
- 11: PWR-DRIVEN VESSEL TOWING ASTERN
- 12: PWR-DRIVEN VESSEL PUSHING AHEAD OR TOWING ALONGSIDE
- 13: RESERVED FOR FUTURE USE
- 14: AIS-SART (ACTIVE), MOB-AIS, EPIRB-AIS*3
- 15: DEFAULT (ALSO USED BY SART, MOB, EPIRB UNDER TEST)

*1: RESERVED FOR FUTURE AMENDMENT OF NAVIGATIONAL STATUS FOR SHIPS CARRYING DG, HS, OR MP, OR IMO HAZARD OR POLLUTANT CATEGORY C, HIGH SPEED CRAFT (HSC)

*2: RESERVED FOR FUTURE AMENDMENT OF NAVIGATIONAL STATUS FOR SHIPS CARRYING DANGEROUS GOODS (DG), HARMFUL SUBSTANCES (HS) OR MARINE POLLUTANTS (MP), OR IMO HAZARD OR POLLUTANT CATEGORY A, WING IN GROUND (WIG)

*3: Not selectable for this type of equipment.

3. Select [DESTINATION], then press the **ENT/ACK** key. The software keyboard appears for direct input.
Enter the desired destination then press the **ENT/ACK** key. You can use up to 20 alphanumeric characters and enter up to 20 destinations.
A list of destinations can also be accessed by selecting [DESTINATION LIST].

Operation selection bar -----

DESTINATION LIST	
<SET><EDIT>	<CUT> <COPY> <PASTE>
DESTINATION	
01:	SEATTLE
02:	OSAKA
03:	SAN FRANCISCO
04:	YOKOHAMA
05:	BRISBANE
06:	ABERDEEN
07:	= NO ENTRY =
08:	= NO ENTRY =
[CURSOR] : CURSOR [ENT] : EXEC [FUNC] : FUNC [MENU] : BACK	

Destinations

1. OPERATION

Referring to operation descriptions in the table below, press ◀ or ▶ to select an operation, press ▲ or ▼ to select an entry in the list, then press the **ENT/ACK** key to confirm the selection.

Operation	Description
<SET>	Set the current selection as the destination.
<EDIT>	Rename the selected destination.
<CUT>	Cut the current selection to temporary memory, leaving the entry empty. The destination can now be pasted as a different entry.
<COPY>	Copy the current selection to temporary memory. The destination can now be pasted as a different entry.
<PASTE>	Paste the entry in temporary memory. Note 1: Only one entry can be stored in temporary memory at a time. If you <CUT> two entries successively, the first is deleted. Note 2: Entries over-written with <PASTE> cannot be restored.


4. Select [ETA (LT/UTC)], then press the **ENT/ACK** key. The settings pop up window shown below appears.



Note 1: The ETA indication appears as "ETA [LT]" when a time offset is set from [TIME DIFF] in the [USER SET] menu. When the setting for [TIME DIFF] is not changed from the default (+00:00) setting, the ETA indication appears as "ETA [UTC]".

Note 2: Where a GPS is not connected, or the signal is lost/interrupted, the ETA indication appears as ETA [UTC]. Further, the settings pop up window displays "NOTE: INPUT THE UTC" at the bottom of the pop up window.

5. Set the ETA date and time, referring to the figure above, then press the **ENT/ACK** key.
6. Select [CARGO TYPE], then press the **ENT/ACK** key. The settings pop up window shown below appears.

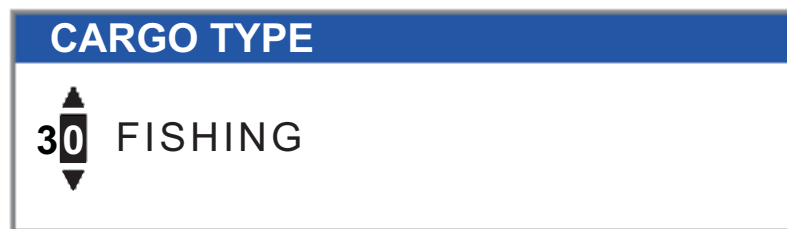

7. Select type of vessel/cargo, referring to the table on the following page, then press the **ENT/ACK** key.


Note 1: Only the second digit for the type of vessel is entered here; the first digit is entered on the [INITIAL SET] menu, during installation.

Note 2: When [Tanker] is selected and the Nav status is [Moored], output power is automatically switched to 1 W when SOG is less than 3 knots. Further, in the above condition, when SOG becomes higher than 3 knots, a beep sounds. (The pop-up message "TX POWER CHANGED" also appears to notify you that the Tx power has changed). To erase the pop-up message, press the **ENT/ACK** key or reduce SOG to below 3 knots.


10	FUTURE USE ALL SHIPS OF THIS TYPE	60	PASSENGER SHIPS ALL SHIPS OF THIS TYPE
11	FUTURE USE CARRYING DG, HS, OR MP(X)	61	PASSENGER SHIPS CARRYING DG, HS, OR MP(X)
12	FUTURE USE CARRYING DG, HS, OR MP(Y)	62	PASSENGER SHIPS CARRYING DG, HS, OR MP(Y)
13	FUTURE USE CARRYING DG, HS, OR MP(Z)	63	PASSENGER SHIPS CARRYING DG, HS, OR MP(Z)
14	FUTURE USE CARRYING DG, HS, OR MP(OS)	64	PASSENGER SHIPS CARRYING DG, HS, OR MP(OS)
15	FUTURE USE	65	PASSENGER SHIPS FUTURE USE
16	FUTURE USE	66	PASSENGER SHIPS FUTURE USE
17	FUTURE USE	67	PASSENGER SHIPS FUTURE USE
18	FUTURE USE	68	PASSENGER SHIPS FUTURE USE
19	FUTURE USE NO ADDITIONAL INFORMATION	69	PASSENGER SHIPS NO ADDITIONAL INFORMATION
20	WIG ALL SHIPS OF THIS TYPE	70	CARGO SHIPS ALL SHIPS OF THIS TYPE
21	WIG CARRYING DG, HS, OR MP(X)	71	CARGO SHIPS CARRYING DG, HS, OR MP(X)
22	WIG CARRYING DG, HS, OR MP(Y)	72	CARGO SHIPS CARRYING DG, HS, OR MP(Y)
23	WIG CARRYING DG, HS, OR MP(Z)	73	CARGO SHIPS CARRYING DG, HS, OR MP(Z)
24	WIG CARRYING DG, HS, OR MP(OS)	74	CARGO SHIPS CARRYING DG, HS, OR MP(OS)
25	WIG FUTURE USE	75	CARGO SHIPS FUTURE USE
26	WIG FUTURE USE	76	CARGO SHIPS FUTURE USE
27	WIG FUTURE USE	77	CARGO SHIPS FUTURE USE
28	WIG FUTURE USE	78	CARGO SHIPS FUTURE USE
29	WIG NO ADDITIONAL INFORMATION	79	CARGO SHIPS NO ADDITIONAL INFORMATION
30	FISHING	80	TANKER(S) ALL SHIPS OF THIS TYPE
31	TOWING	81	TANKER(S) CARRYING DG, HS, OR MP(X)
32	LENGTH OF THE TOW EXCEEDS 200M OR BREADTH EXCEEDS 25M	82	TANKER(S) CARRYING DG, HS, OR MP(Y)
33	ENGAGED IN DREDGING OR UNDERWATER OPERATIONS	83	TANKER(S) CARRYING DG, HS, OR MP(Z)
34	ENGAGED IN DIVING OPERATIONS	84	TANKER(S) CARRYING DG, HS, OR MP(OS)
35	ENGAGED IN MILITARY OPERATIONS	85	TANKER(S) FUTURE USE
36	SAILING	86	TANKER(S) FUTURE USE
37	PLEASURE CRAFT	87	TANKER(S) FUTURE USE
38	FUTURE USE	88	TANKER(S) FUTURE USE
39	FUTURE USE	89	TANKER(S) NO ADDITIONAL INFORMATION
40	HSC ALL SHIPS OF THIS TYPE	90	OTHER TYPE OF SHIP ALL SHIPS OF THIS TYPE
41	HSC CARRYING DG, HS, OR MP(X)	91	OTHER TYPE OF SHIP CARRYING DG, HS, OR MP(X)
42	HSC CARRYING DG, HS, OR MP(Y)	92	OTHER TYPE OF SHIP CARRYING DG, HS, OR MP(Y)
43	HSC CARRYING DG, HS, OR MP(Z)	93	OTHER TYPE OF SHIP CARRYING DG, HS, OR MP(Z)
44	HSC CARRYING DG, HS, OR MP(OS)	94	OTHER TYPE OF SHIP CARRYING DG, HS, OR MP(OS)
45	HSC FUTURE USE	95	OTHER TYPE OF SHIP FUTURE USE
46	HSC FUTURE USE	96	OTHER TYPE OF SHIP FUTURE USE
47	HSC FUTURE USE	97	OTHER TYPE OF SHIP FUTURE USE
48	HSC FUTURE USE	98	OTHER TYPE OF SHIP FUTURE USE
49	HSC NO ADDITIONAL INFORMATION	99	OTHER TYPE OF SHIP NO ADDITIONAL INFORMATION
50	PILOT VESSEL		
51	SEARCH AND RESCUE VESSELS		
52	TUGS		
53	PORT TENDERS		
54	VESSELS WITH ANTI-POLLUTION FACILITIES OR EQUIPMENT		
55	LAW ENFORCEMENT VESSELS		
56	SPARE-FOR ASSIGNMENTS TO LOCAL VESSELS		
57	SPARE-FOR ASSIGNMENTS TO LOCAL VESSELS		
58	MEDICAL TRANSPORTS		
59	SHIPS & AIRCRAFT OF STATES NOT PARTIES TO AN ARMED CONFLICT		

WIG: Wing in ground
HSC: High speed craft
DG: Dangerous goods
HS: Harmful substances
MP: Marine pollutants
0-9: Undefined

8. Select [DRAUGHT], then press the **ENT/ACK** key.
9. Input the ship's draught (setting range: 0 m to 25.5 m) then press the **ENT/ACK** key.

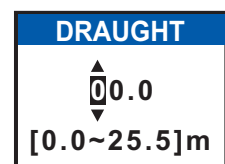

10. Select [NO. OF PERSONS], then press the **ENT/ACK** key.

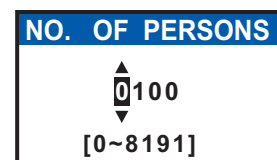

11. Input total number of persons aboard the ship (setting range: 0-8191) then press the **ENT/ACK** key. If the total number of person aboard the ship is more than [8191], the indication is fixed at [8191].
12. Press the **DISP** key to close the menu.

1.7 How to Set the Notification

The [NOTIFICATION SET] menu is used to set the following items:

- Enable or disable the alert buzzer.
- Notifications for received [ADDRESSED] and [BROADCAST] messages.
- Notifications for collision detection.

To change the settings in the [NOTIFICATION SET] menu, do the following:

1. Press the **MENU/ESC** key to open the main menu.
2. Select [USER SET], then press the **ENT/ACK** key.
3. Select [NOTIFICATION SET], then press the **ENT/ACK** key. The [NOTIFICATION SET] screen appears.
4. Select the [BUZZER] item below [ALERT], then press the **ENT/ACK** key. The settings pop up window appears.
5. Select [ON] to enable the alert buzzer, or select [OFF] to disable the alert buzzer, then press the **ENT/ACK** to confirm the setting.
6. Select the [ADDRESSED] item below [RX MESSAGE], then press the **ENT/ACK** key. The settings pop up window appears.
7. Select the appropriate setting, referring to the table below, then press the **ENT/ACK** key.


NOTIFICATION SET	
[ALERT]	
BUZZER	: ON
[RX MESSAGE]	
ADDRESSED	: POPUP
BROADCAST	: POPUP + BUZZER
[COLLISION DETECT]	
INDICATION	: POPUP
CPA THRESHOLD	: 6.0NM
TCPA THRESHOLD	: 60min
: CURSOR : SELECT : BACK	

Setting	Description
POPUP + BUZZER	Enable both the pop up indication and the buzzer.
POPUP	Enable only the pop up indication. (No buzzer.)
OFF	Disable notifications.

8. Set the notifications for [BROADCAST] RX messages and [COLLISION DETECT] in the same manner.
9. Select the [CPA THRESHOLD] item in [COLLISION DETECT], then press the **ENT/ACK** key to show the setting window for [CPA THRESHOLD] is as shown.
10. Press **▲** or **▼** to set a range, then press the **ENT/ACK** key. The available ranges are 0.0 NM to 6.0 NM.
11. Select the [TCPA THRESHOLD] item in [COLLISION DETECT], then press the **ENT/ACK** key to show the setting window for [TCPA THRESHOLD] is as shown.
Note: When both CPA and TCPA are below the [CPA THRESHOLD] and [TCPA THRESHOLD] setting values, the collision alarms is available.
12. Press **▲** or **▼** to set a time, then press the **ENT/ACK** key. The available time is 0 min to 60 min.
13. Press the **DISP** key to close the menu.

1.8 How to Select a Display

Use the **DISP** key to select a display. Each time the key is pressed, the display changes in the sequence shown below.

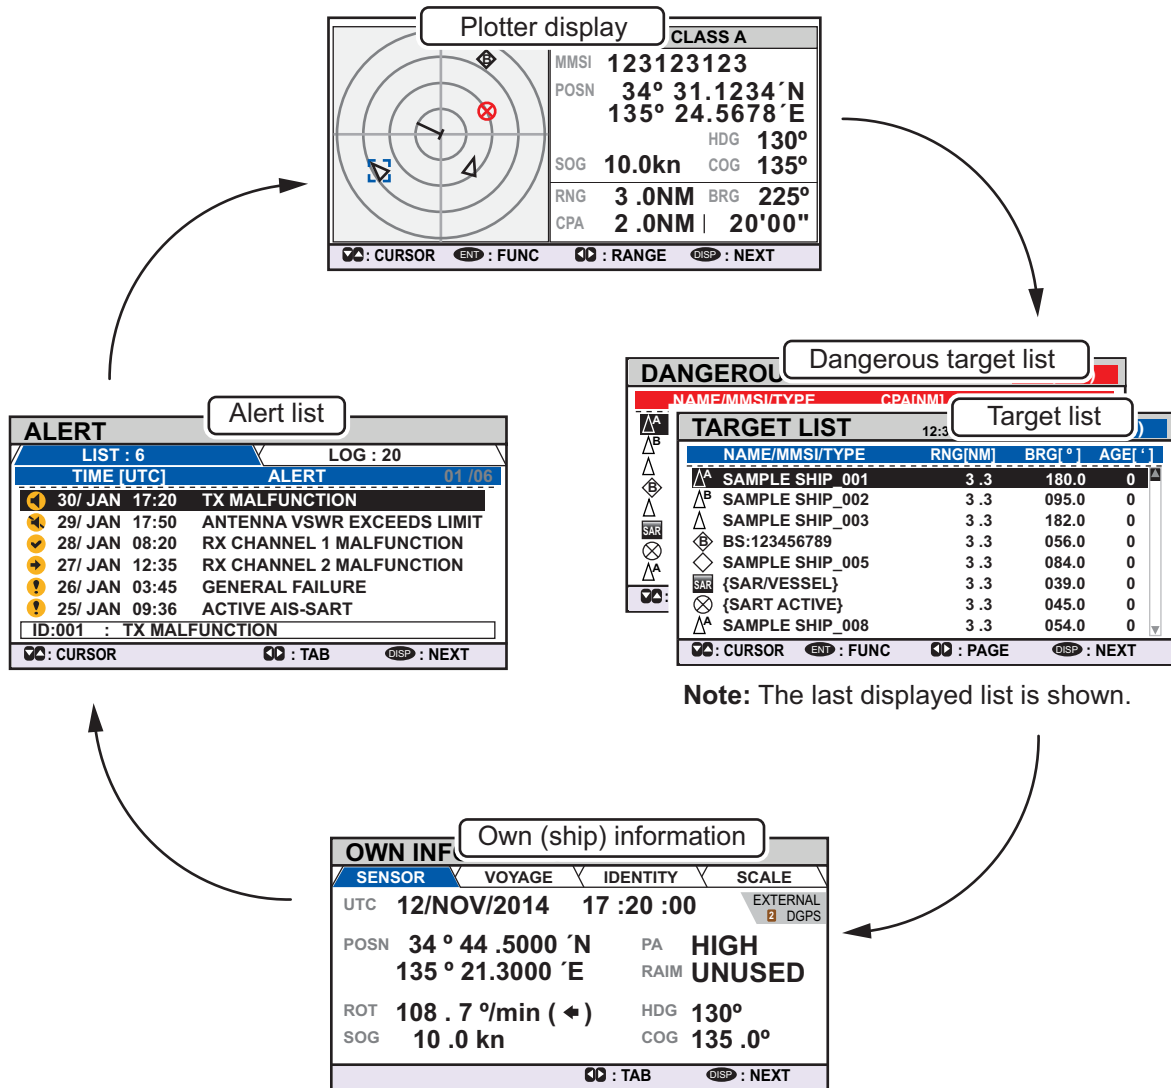

The [DANGEROUS LIST] and [TARGET LIST] are displayed dependent on which list was last displayed. For example, if the [DANGEROUS LIST] is viewed at any time, the [TARGET LIST] is hidden in the above cycle and can only be viewed by sorting the [DANGEROUS LIST]. See section 1.8.2 for details.

1.8.1 Plotter display

The plotter display, which automatically appears after the power-on sequence, shows various information for AIS-equipped ships, AIS-SARTs, etc. within the range selected. The display is fixed at a north-up orientation.

Data for ship target

A target marker (hollow triangle) indicates the presence of a vessel equipped with AIS in a certain location and course. To view detailed information about a vessel, see paragraph 1.8.2.

If two or more targets occupy a similar position, the display priority order is: selected target (surrounded by a broken box, as shown in the example below) > non-selected target.

Target type
(CLASS A, CLASS B, BS, AtoN, SAR, AIS-SART, MOB-AIS, EPIRB-AIS, INLAND)

Key guidance bar

MMSI: 123456789

TYPE CLASS A

MMSI: 123123123

POSN 34° 31.1234' N
135° 24.5678' E

HDG 310°

SOG 10.0kn COG 135°

RNG 3.0NM BRG 225°

CPA 2.0NM | 20'00"

DANGER is displayed here when a target is calculated to be on a collision course with your vessel. If no signal is received from target, **LOST** is displayed. The target data is deleted seven minutes after the loss of signal from the target.

↘	Own ship symbol
⚓	Selected target
⊗	AIS-SART
△	Target (black)
◆	Base station

MMSI: Target's MMSI
NAME: Target vessel's name (if available)
POSN: Target's last known position
HDG: Target's heading
SOG: Target's Speed Over Ground
COG: Target's Course Over Ground
RNG: Range to target from own ship
BRG: Bearing to target
CPA: Range and time to approach to the target from own ship

For a full list of AIS icons, and their meanings, see Appendix 5, at the back of this manual.

How to operate the plotter display


1. Press the **DISP** key to show the plotter display.
2. Press ◀ or ▶ to select a range. The available ranges are (in nm): 0.125, 0.25, 0.5, 0.75, 1.5, 3, 6, 12, and 24.
3. Press ▲ or ▼ to select a target. The selected target is highlighted in a blue colored broken box. Further, the selected target's basic data are displayed on the right-side of the screen.
4. To view a target's detailed data, or to sort the target list, select the desired target, then press the **ENT/ACK** key. The [FUNCTION] pop up window appears.

FUNCTION		
◀ : SORT (NORMAL)	⏏ : NEW MSG	▶ : SORT (DANGER)
	ENT : VIEW DETAIL	
	⏏ : NAME REQUEST	

- [SORT (NORMAL)]: Press ◀ to display and sort the [TARGET LIST] into range order.

- [SORT (DANGER)]: Press ► to display and sort the [DANGEROUS TARGET LIST] in range order.

Note: When [SORT (DANGER)] is selected, all non-dangerous targets are hidden on the plotter display and the plotter screen is surrounded by a red box, as shown in the figure below.

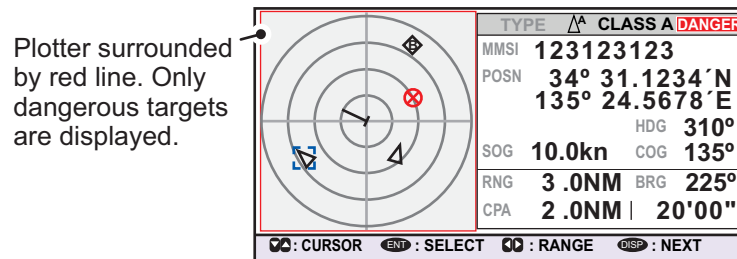

To show any targets which were hidden by this option, select [SORT (NORMAL)] from the [FUNCTION] pop up window.

- [VIEW DETAIL]: Press the **ENT/ACK** key to open the [TARGET DETAIL] screen.
- [NEW MSG]: Press ▲ to open the text input window to create an AIS message to send to the selected target.
- [NAME REQUEST]: Press ▼ to send a name request to the target vessel's AIS.
Note: Name requests cannot be sent to the same target within a short period, regardless of target. If you have requested the name of a target too soon after the last request, the pop up message "CANNOT REQUEST NAME" appears. Wait a short while before requesting the name again.

Note 1: A target is declared a lost target under the conditions shown in the table below. A target is erased from the screen seven minutes (For AIS-SART, 18 minutes) after no signal is received from the target.

Ship's navigational status	Target declared as lost target after:
Class A	
Ship at anchor or moored or aground or not under command and not moving faster than 3 kn.	7 minutes
Ship at anchor or moored or aground or not under command and moving at more than 3 kn.	50 seconds
0 to 14 kn speed	50 seconds
0 to 14 kn speed with course change	50 seconds
14 to 23 kn speed	30 seconds
14 to 23 kn speed with course change	30 seconds
Speed higher than 23 kn	10 seconds
Speed higher than 23 kn with course change	10 seconds
Class B	
Speed over ground less than 2 kn	7 minutes
Speed over ground 2 kn or higher	150 seconds

Note 2: When a target is considered to be on a collision course, the audible alert sounds (if active). Take suitable measures to avoid collision.

Note 3: "DANGER" appears next to the target type when a target is considered to be on a collision course. Further, when a target becomes a lost target, "LOST" appears next to the target type.

1.8.2 Target list

The [TARGET LIST] can store up to 2048 AIS targets and AIS-SARTs being detected by the FA-170. Targets are displayed across several pages, in the order which they are detected. The list can be sorted in range order, from closest to farthest.

Note: The last viewed list is displayed when the **DISP** key is pressed to show either the [TARGET LIST] or the [DANGEROUS LIST]. To view the [TARGET LIST] when the [DANGEROUS LIST] is displayed, follow the procedure outlined in step 3 on the following page.

1. Press the **DISP** key until the [TARGET LIST] is displayed.

Time at which the list was last sorted.

Selected target is highlighted.

Currently displayed target group. Total detected targets is displayed in brackets.

Target type symbols. See Appendix 5 of the operator's manual for a full list of AIS symbols and their meanings.

NAME/MMSI/TYPE: Target's MMSI, name or type is displayed. Where name data is available, the vessel name is displayed. **RNG[km]**: Range from OS to target. **BRG[°]**: Bearing to target. **AGE[']**: Time (in minutes) since the target data was last updated.

NAME/MMSI/TYPE	RNG[km]	BRG[°]	AGE[']
▲ SAMPLE SHIP_001	3.3	180.0	0
▲ SAMPLE SHIP_002	3.3	095.0	0
▲ SAMPLE SHIP_003	3.3	182.0	0
◇ BS:123456789	3.3	056.0	0
◇ SAMPLE SHIP_005	3.3	084.0	0
▲ [SAR/VESSEL]	3.3	039.0	0
▲ [SAR/AIRCRAFT]	3.3	045.0	0
▲ SAMPLE SHIP_008	3.3	054.0	0

The [NAME/MMSI/TYPE] column of the [TARGET LIST] displays the target vessel's type in the following formats:

Where the target type is CLASS A/CLASS B/AtoN

The name of the vessel is displayed when the name data is available. Where the name data is not available, the vessel's MMSI is displayed.

Where the target type is SAR(VESSEL/AIRCRAFT)/SART/MOB/EPIRB

The format in which data is displayed is listed in the table below.

TYPE	Display format	TYPE	Display format
SAR vessel	"SAR/VESSEL"	MOB Active	"MOB ACTIVE"
SAR aircraft	"SAR/AIRCRAFT"	MOB Test	"MOB TEST"
SART Active	"SART ACTIVE"	EPIRB Active	"EPIRB ACTIVE"
SART Test	"SART TEST"	EPIRB Test	"EPIRB TEST"

Where the target type is BASE STATION

"BS:(Base station's MMSI)" is displayed.

Note 1: If there is no data for the target selected, the fields are displayed as "=NO TARGET=".

Note 2: Targets are automatically sorted in range order (closest to farthest) when no key is operated for 30 seconds. Target order is then updated every five seconds.

Active AIS-SARTs take priority and are displayed at the top of the list.

Note 3: When [AUTO SORT] on the [USER SET] menu is [OFF], the range and bearing to a target are updated. However, target order is not updated. To manually sort targets, see step 2.

Note 4: To select a target on the plotter display, press ▲ or ▼ to select the target then press the **ENT/ACK** key. Press ▲ to cycle through targets from nearest to furthest; ▼ to cycle through targets from furthest to nearest.

- Press ▼ or ▲ to scroll through the first 100 targets, press ◀ or ▶ to scroll through the targets in groups of 8 (next/previous 8 targets).
The indication "NEXT 100 TARGETS" appears at the bottom of the list if more targets are available. Select the indication, then press the **ENT/ACK** key to show the next 100 targets.
The indication "PREVIOUS 100 TARGETS" appears at the top of the list if there is one or more pages of targets before the one currently displayed. Select the indication, then press the **ENT/ACK** key to show the previous 100 targets.
- To view target data, or to sort the target list, select the desired target, then press the **ENT/ACK** key. The target list options pop up window is displayed.

FUNCTION		
◀ : SORT (NORMAL)	▲ : NEW MSG ENT : VIEW DETAIL ▼ : NAME REQUEST	▶ : SORT (DANGER)

- [SORT (NORMAL)]: Press ◀ to sort the [TARGET LIST] into range order. The closest target is displayed at the top of the list.
- [SORT (DANGER)]: Press ▶ to display and sort the [DANGEROUS TARGET]LIST in range order. The closest target is displayed at the top of the list.
- [VIEW DETAIL]: Press the **ENT/ACK** key to open the [TARGET DETAIL] screen.
- [NEW MSG]: Press ▲ to open the text input window to create an AIS message to send to the selected target.
- [NAME REQUEST]: Press ▼ to send a name request to the target vessel's AIS.
Name requests cannot be sent to the same target within a short period, regardless of target. If you have requested the name of a target too soon after the last request, or the target is out of range, or the target has set their AIS to RX only mode, the pop up message "CANNOT REQUEST NAME" is displayed. Wait a short while before requesting the name again.

- Press the **DISP** key to close the menu.

1.8.3 Dangerous (target) list

Dangerous targets are targets which are calculated to be on a collision course with your vessel. When a dangerous target is detected, the target and its available details can be viewed in the [DANGEROUS TARGET LIST].

Note: The operations available from the [DANGEROUS TARGET LIST] are the same as the [TARGET LIST] operations. To view the [DANGEROUS LIST] when the [TARGET LIST] is displayed, follow the procedure outlined in step 3 of section 1.8.2.

Time at which the list was last sorted.

DANGEROUS LIST		12:32:01	1-8 (201)
NAME/MMSI/TYPE	CPA[NM]	TCPA	AGE[']
▲ SAMPLE SHIP_002	3.3	-10'00"	0
▲ SAMPLE SHIP_003	3.4	-10'00"	0
▲ SAMPLE SHIP_004	3.5	-15'00"	0
3S:123456789	3.6	-20'30"	0
▲ SAMPLE SHIP_005	3.7	-25'30"	0
SAR/VESEL}	3.8	-10'00"	0
SAR/AIRCRAFT}	3.9	-15'00"	0
▲ SAMPLE SHIP_008	3.1	-20'00"	0

Selected target is highlighted.

▲ : CURSOR ENT : FUNC ◀ : PAGE DISP : NEXT

NAME/MMSI/TYPE: Target's MMSI, name or type is displayed. Where name data is available, the vessel name is displayed.

CPA[NM]: Range to approach to the target from own ship.

TCPA: Time to approach to the target from own ship.

AGE[']: Time (in minutes) since the target data was last updated.


Target type symbols. See Appendix 5 for a full list of AIS symbols and their meanings.

Note: If there are no dangerous targets detected, list shows the message "=NO TARGET=".

1.8.4 How to interpret the [TARGET DETAIL] screen

The [TARGET DETAIL] screen shows available detailed information about the selected target.

Lost and dangerous targets have the appropriate icon displayed at the top right, as indicated in the lost target example below.

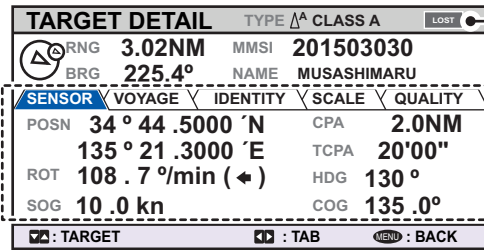

The **LOST** icon is displayed for lost targets.

The **DANGER** icon is displayed for dangerous targets.

When data input to the FA-170 is interrupted or stopped, indications for all tabs appear as "----".

There are five tabs available for viewing; [SENSOR], [VOYAGE], [IDENTITY], [SCALE] and [QUALITY]. Press ◀ or ▶ to select a tab and show its information.

The selected target's bearing ([BRG]), range ([RNG]), [MMSI] and [NAME] are displayed at the top of the screen regardless of the selected tab. For lost or dangerous targets, the appropriate icon is displayed at the top right of the screen.

The information displayed on each tab varies, depending on the type of target selected.

The tables on the following pages list each tab's contents, along with a brief description.

SENSOR tab

Contents	Description
POSN	Target's last known position. Displayed for all target types.
ROT	Target's Rate Of Turn. Displayed only for CLASS A, SART, MOB and EPIRB target types.
ALT	Altitude. Displayed only for SAR VESSEL and SAR AIRCRAFT target types.
SOG	Target's Speed Over Ground. Displayed only for CLASS A, CLASS B, SAR VESSEL, SAR AIRCRAFT, SART, MOB and EPIB target types.
COG	Target's Course Over Ground. Displayed only for CLASS A, CLASS B, SAR VESSEL, SAR AIRCRAFT, SART, MOB and EPIB target types.
HDG	Target's last known heading. Displayed only for CLASS A, CLASS B, SART, MOB and EPIRB target types.
CPA	Range to target. Displayed for all target types.
TCPA	Time to approach to target. Displayed for all target types.

VOYAGE tab

The VOYAGE tab is only displayed for CLASS A target types.

Contents	Description
NAV STATUS	Target's navigational status (see section 1.6 for details).
DESTINATION	Target's destination.
ETA	Target's Estimated Time of Arrival at the above destination.

IDENTITY tab

The IDENTITY tab is only displayed for CLASS A, CLASS B, SAR VESSEL, SAR AIRCRAFT and AtoN target types.

Contents	Description
CALL SIGN	Target's call sign. Not displayed for AtoN target types.
IMO NO.	Target's International Maritime Organization registration number.
TYPE OF SHIP	Target's ship type. Displayed only for CLASS A and CLASS B target types.
REAL AtoN	Displayed as "YES" for physical aids to navigation, "NO" for virtual aids to navigation. Displayed only for AtoN target types.
TYPE OF AtoN	The type of aids to navigation. Displayed only for AtoN target types.
VENDER ID	Target's AIS maker's ID. Displayed only for CLASS B target types.

SCALE tab

The SCALE tab is only displayed for SAR VESSEL, SAR AIRCRAFT and AtoN target types.

Contents	Description
SHIP SIZE(LENGTH, BEAM)	Target's ship size (length, beam). Displayed for all above target types.
ANT POSN(X,Y)	Position of target's antenna. Displayed for all above target types.
DRAUGHT	Target ship's draught. Displayed only for CLASS A target types.
PI	Off-position indicator. Displayed only for AtoN target types.

QUALITY tab

The QUALITY tab is displayed for all target types.


Contents	Description	
PA	Position Accuracy for target ship. (HIGH: High accuracy, LOW: Low accuracy.)	
RAIM	Target's RAIM status. (USED: Using RAIM, UNUSED: Not using RAIM.)	
TIME STAMP	Time at which the target was last detected. Not displayed for AIS base stations.	
POSN QUALITY	Target's position quality. Possible position qualities are shown in the list below:	
	Quality indication	Meaning
	[NO POSITION]	Position data not available.
	[MANUAL POSITION]	Position data is input manually.
	[DEAD RECKONING POSITION]	Position calculated by dead reckoning.
	[OUTDATED POSITION > 200 M]	More than 200 m from last estimated position.
	[POSITION > 10 M]	Difference of more than 10 m from last estimated position.
	[POSITION WITH RAIM > 10 M]	Difference of more than 10 m from last estimated position.
	[POSITION < 10 M]	Difference of less than 10 m from last estimated position.
	[POSITION WITH RAIM < 10 M]	Difference of less than 10 m from last estimated position.
[VALID POSN WITH NO TIME STAMP]	No time stamp available.	

1. OPERATION

1.8.5 Own ship data

The [OWN INFORMATION] display shows your ship's data across four tabs. The information displayed is shown in the figure below. This data should be checked once per voyage or once per month, whichever is shorter. Data may be changed only on the authority of the master.

The Officer of the Watch should periodically check position, SOG and sensor information for quality.

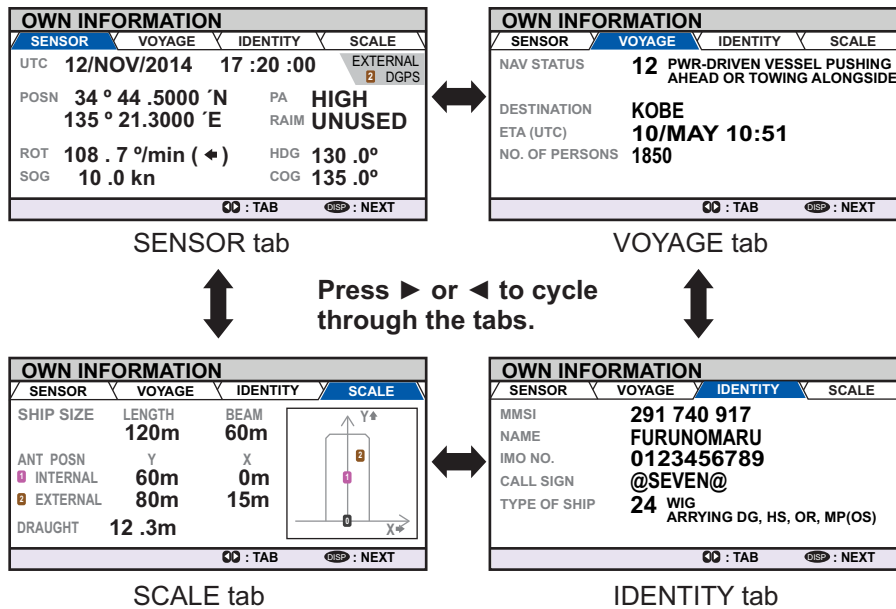

The table below list each tab's contents along with a brief description.

Tab	Item	Description
[SENSOR]	[UTC], [LT]	Date and time. [UTC]: Universal Time, Coordinated. [LT]: Local time. Note: For more information on these indications, see section 1.15.
	[POSN]	OS (Own Ship) position.
	[ROT]	Rate of Turn.
	[SOG]	Speed Over Ground.
	[PA]	Positioning accuracy.
	[RAIM]	RAIM status. [USED]: RAIM is currently in use. [UNUSED]: RAIM is not currently in use.
	[HDG]	Heading.
	[COG]	Course Over Ground.
[VOYAGE]	GPS status	GPS currently in use.
	[NAV STATUS]	Current navigational status.
	[DESTINATION]	Current destination.
	[ETA [UTC]], [ETA [LT]]	Estimate Time of Arrival (ETA) at the destination.
	[NO. OF PERSONS]	Number of people aboard your vessel.

Tab	Item	Description
[IDENTITY]	[MMSI]	Own ship's MMSI.
	[NAME]	Own ship's name.
	[IMO NO.]	Own ship's IMO number.
	[CALL SIGN]	Own ship's call sign.
	[TYPE OF SHIP]	Own ship's vessel type. See section 1.6, step 7 for details.
[SCALE]	[SHIP SIZE]	Own ship's length and beam.
	[ANT POSN]	Antenna position. [INTERNAL]: position of internal antenna. [EXTERNAL]: position of external antenna.
	[DRAUGHT]	Own ship's draught.

Sensor priority

When the signal is not received from the sensor, if the multiple sensors are connected, the sensor in use is switched according to the priority shown as the table below.

OWN INFORMATION			
SENSOR	VOYAGE	IDENTITY	SCALE
UTC	12/NOV/2014	17:20:00	EXTERNAL 2 DGPS
POSN	34° 44.5000' N 135° 21.3000' E	PA HIGH RAIM UNUSED	
ROT	108.7°/min (←)	HDG 130°	
SOG	10.0 kn	COG 135.0°	
TAB		DISP: NEXT	

— Sensor in use

Priority	Sensor in use		Indication on [SENSOR] tab
High	1	External DGNSS in use (corrected)	EXTERNAL DGPS
	2	Internal DGNSS in use (corrected; Message 17)	INTERNAL DGPS
	3	Internal DGNSS in use (corrected; beacon)	
	4	External EPFS in use (uncorrected)	EXTERNAL GPS
	5	Internal GNSS in use (uncorrected)	INTERNAL GPS
Low	6	No position	NO FIX

1.8.6 Alert display

The alert display shows the date and time alerts were generated. For further details, see section 3.5.

1.9 Messages

You may send and receive messages via VHF channels, to a specified MMSI or all AIS-equipped ships in the area. Messages can be sent to warn of safety of navigation; for example, an iceberg sighted. Routine messages are also permitted.

Short safety-related messages are only an additional means to broadcast safety information. They do not remove the requirements of the GMDSS.

When a message is received, the equipment beeps and pop up appears, indicating the type of message received.

Sent messages are stored in the [MSG BOX] (message box) under the [OUTBOX] tab.

Received messages are stored in the [MSG BOX] under the [INBOX] tab.

The FA-170 can store up to 20 transmitted and up to 20 received messages. When the [INBOX] or [OUTBOX] becomes full, the oldest message in the box is automatically deleted to make room for the latest.


1.9.1 How to send a message

This procedure applies to Class A AIS, for Inland AIS, see section 2.6.1.


1. Press the **MENU/ESC** key to open the main menu.
2. Select [MSG], then press the **ENT/ACK** key.



3. [NEW MSG] is selected. Press the **ENT/ACK** key. The [NEW MSG] screen appears.

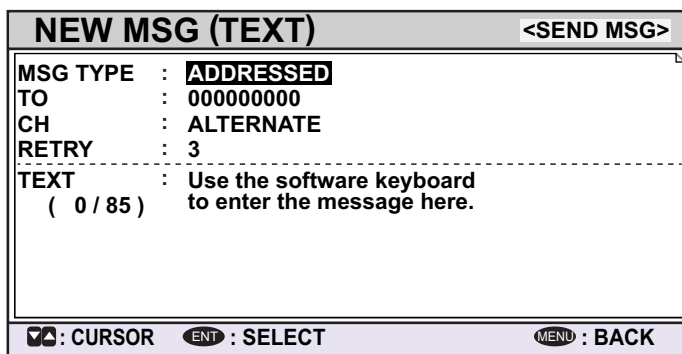


4. [MSG TYPE] is selected, press the **ENT/ACK** key to change the type of message you wish to send. The options pop up shown below appears.

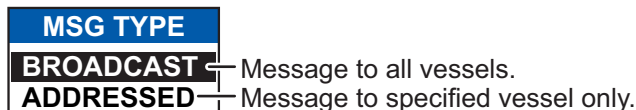

5. Select the appropriate message type, then press the **ENT/ACK** key. For broadcast messages, skip to step 8.
6. Select [TO], then press the **ENT/ACK** key. A numerical settings pop up appears.
7. Input the MMSI of the ship you wish to send this message to, then press the **ENT/ACK** key to close the pop up. See section 1.5 for how to input data.

8. Select [CH] (Channel), then press the **ENT/ACK** key. The channel select options pop up appears.

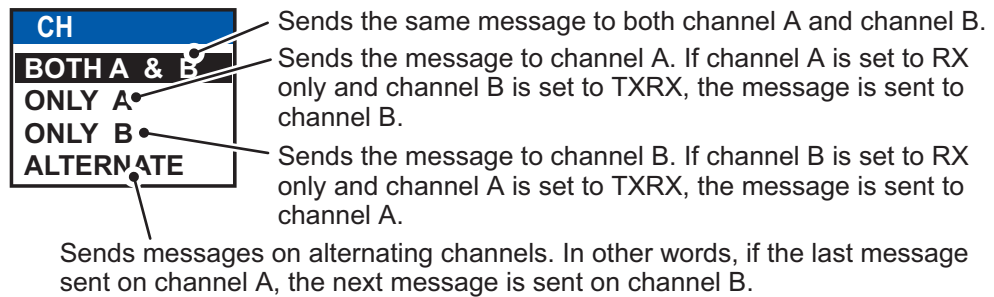

9. Select the appropriate option, then press the **ENT/ACK** key.
For broadcast messages, skip to step 12.
10. Select [RETRY], then press the **ENT/ACK** key. The retry attempts setting pop up appears.
11. Press ▲ to increase the retry attempts, ▼ to decrease the retry attempts. The maximum setting for retries is 3. Press the **ENT/ACK** key to apply the setting and close the pop up.
12. Press ▼ to highlight the message text, then press the **ENT/ACK** to display the software keyboard.
13. Input the new message text, referring to section 1.5.4. The maximum number of characters allowed is as follows:
- BROADCAST: 90 characters.
 - ADDRESSED: 85 characters.
14. Press ▲ or ▼ to highlight [<SEND MSG>] at the top right of the screen, then press the **ENT/ACK** key. A confirmation pop up appears.
15. Select [YES] to send the message or [NO] to cancel the message, then press the **ENT/ACK** key.

Note: The following pop up messages may be displayed during sending or after the message has been sent.

Pop up message	Description
MESSAGE SENT SUCCESSFULLY.	Displayed after a message is sent successfully.
NO TEXT IN MESSAGE	Displayed when the message body is blank and <SEND MSG> is selected.
FAILED TO SEND MESSAGE. (CODE:X)	The message failed to send. The code (indicated as "X" in the example to the left) indicates the reason for the failure. "CODE:1" indicates that the message was not acknowledged by the recipient. "CODE:2" indicates that the message failed to send.

1.9.2 How to receive messages

When a message is received, the equipment beeps and a pop up message appears on the screen. The table below lists the possible messages with a brief description. To enable/disable these pop ups, see section 1.7.


Pop up message	Description
TEXT MESSAGE RECEIVED.	Displayed when a broadcast message is received.
TEXT MESSAGE RECEIVED. MMSI/NAME.	Displayed when an addressed message is received. MMSI appears by default, however, where name data is available, the vessel name is also displayed.

1.9.3 How to use the message box (MSG BOX)

How to view a received message


To view message contents, follow the procedure below.

1. Press the **ENT/ACK** to close the pop up window.
2. Press the **MENU/ESC** key to show the main menu.
3. Select [MSG], then press the **ENT/ACK** key.
4. Select [MSG BOX], then press the **ENT/ACK** key. The [OUTBOX] tab is displayed by default. Press **▶** to display the [INBOX] tab.

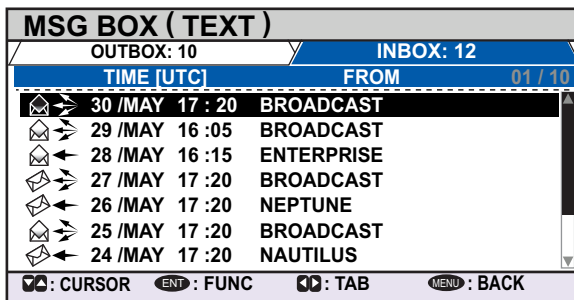

Indication	Meaning
☑	This message has been viewed.
✉	This message is unviewed.
↔	Broadcast message
←	Addressed message

5. Select the message you wish to view, then press the **ENT/ACK** key. The message options pop up window shown below appears.

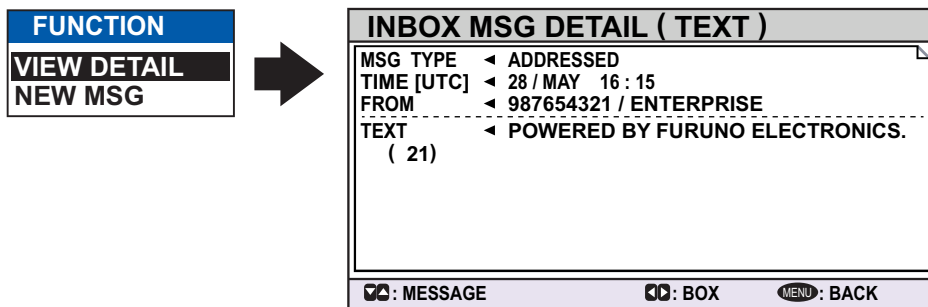

Select [VIEW DETAIL], then press the **ENT/ACK** key to display the received message's contents. The figure above shows an example of a received message. Select [NEW MSG], then press the **ENT/ACK** key to send a message back to this message's sender.

6. Press **▲** or **▼** to view other messages, press **◀** or **▶** to switch between viewing an [INBOX] message and an [OUTBOX] message.
7. Press the **DISP** key to close the menu.

How to view sent messages

1. Press the **ENT/ACK** to close the pop up window.
2. Press the **MENU/ESC** key to show the main menu.
3. Select [MSG], then press the **ENT/ACK** key.
4. Select [MSG BOX], then press the **ENT/ACK** key. The [OUTBOX] tab is displayed by default.

MSG BOX (TEXT)		
OUTBOX: 10		INBOX: 12
TIME [UTC]	TO	01 / 10
OK	←	30 / MAY 18 : 25 BROADCAST
NO ACK	←	29 / MAY 16 : 05 BROADCAST
NO ACK	→	28 / MAY 16 : 15 TITANIC
OK	→	27 / MAY 17 : 20 NAUTILUS
OK	←	26 / MAY 17 : 20 BROADCAST
NO ACK	←	25 / MAY 17 : 20 BROADCAST
NO ACK	→	24 / MAY 17 : 20 MUSASHIMARU
CURSOR : ENT : FUNC TAB : MENU : BACK		

Indication	Meaning
OK	This message was sent successfully.
X NG	This message was not sent.
NO ACK	Waiting for recipient to acknowledged this message.
←	Broadcast message
→	Addressed message

5. To view the contents of a message, highlight the message then press the **ENT/ACK** key. The message options pop up window appears. Select [VIEW DETAIL] to display the received message's contents. The figure below shows an example of a received message. Select [NEW MSG] to send another message to the recipient.

OUTBOX MSG DETAIL (TEXT)	
MSG TYPE	← ADDRESSED
TIME [UTC]	← 28 / MAY 16 : 15
TO	← 123456789 / TITANIC

TEXT	← ICEBERG COORDINATES RECEIVED. THANK YOU!
(39 / 85)	
MESSAGE : BOX : MENU : BACK	

6. Press ▲ or ▼ to view other messages, press ◀ or ▶ to switch between viewing an [INBOX] message and an [OUTBOX] message.
7. Press the **DISP** key to close the menu.

1.10 Regional Operating Channels

AIS operates primarily on two dedicated VHF channels, CH 2087 and CH2088. Where these channels are not available regionally, the AIS is capable of being automatically switched to designated alternate channels by means of a message from a shore facility. Where no shore based AIS or GMDSS sea area A1 station is in place, the AIS should be switched manually as in paragraph 1.10.2.

A regional operating area is set with the procedure shown below. The most recent eight areas are memorized.

- Automatic setting of VHF DSC (channel 70) from shore-based AIS.
- Automatic setting by AIS message from shore-based AIS.
- Setting by shipboard system such as ECDIS.
- Manual setting

The default area is as follows:

- Tx power: 12.5 W
- Channel no. 2087, 2088
- Tx/Rx mode: Tx/Rx

1.10.1 How to view channel information

Do the following to view current channel information. To edit channel information, see paragraph 1.10.2.

1. Press the **MENU/ESC** key to open the menu.
2. Select [CH INFO]. The [CH INFO] pop up window appears.

The screenshot shows a menu titled "CH INFO" with a sub-menu "1 REGION LIST". The "REGION LIST" menu contains the following items:

PWR	◀ HIGH
CH A	◀ 2087
CH B	◀ 2088
TX / RX A	◀ TXRX
TX / RX B	◀ TX

Annotations on the right side of the image:

- Select to display the regional channel list.
- Current channel's details.
- PWR:** Power.
- CH A:** Channel used for channel A.
- CH B:** Channel used for channel B.
- TX / RX A:** Channel A TX/RX settings.
- TX / RX B:** Channel B TX/RX settings.


3. Press the **DISP** key to close the display.

1.10.2 How to edit/view regional channels

You may display the status of regional operating areas currently memorized in the equipment. Nine of any combination of AIS message from shore-based AIS, DSC message, manual settings and commands from ECDIS or a PC may be registered and one will be [HIGH SEA].

- AIS and DSC messages registered within last two hours cannot be edited.
- An item labeled [HIGH SEA] cannot be edited. ([HIGH SEA] are data used for international waters not controlled by shore-based AIS.)
- If two areas overlap one another the older data is deleted.
- Data older than 24 hours is deleted.
- Area data is deleted when it is more than 500 miles from the area for which it was registered.

1. Press the **MENU/ESC** key to open the menu.
2. Select [CH INFO], then press the **ENT/ACK** key.
3. Select [REGION LIST] then press the **ENT/ACK** key. The REGION LIST has four pages of data related to each region, displayed on the left-side of the screen as shown in the figure below. The right side of the screen displays your current position, current region and the selected region. Press ◀ or ▶ to change pages.

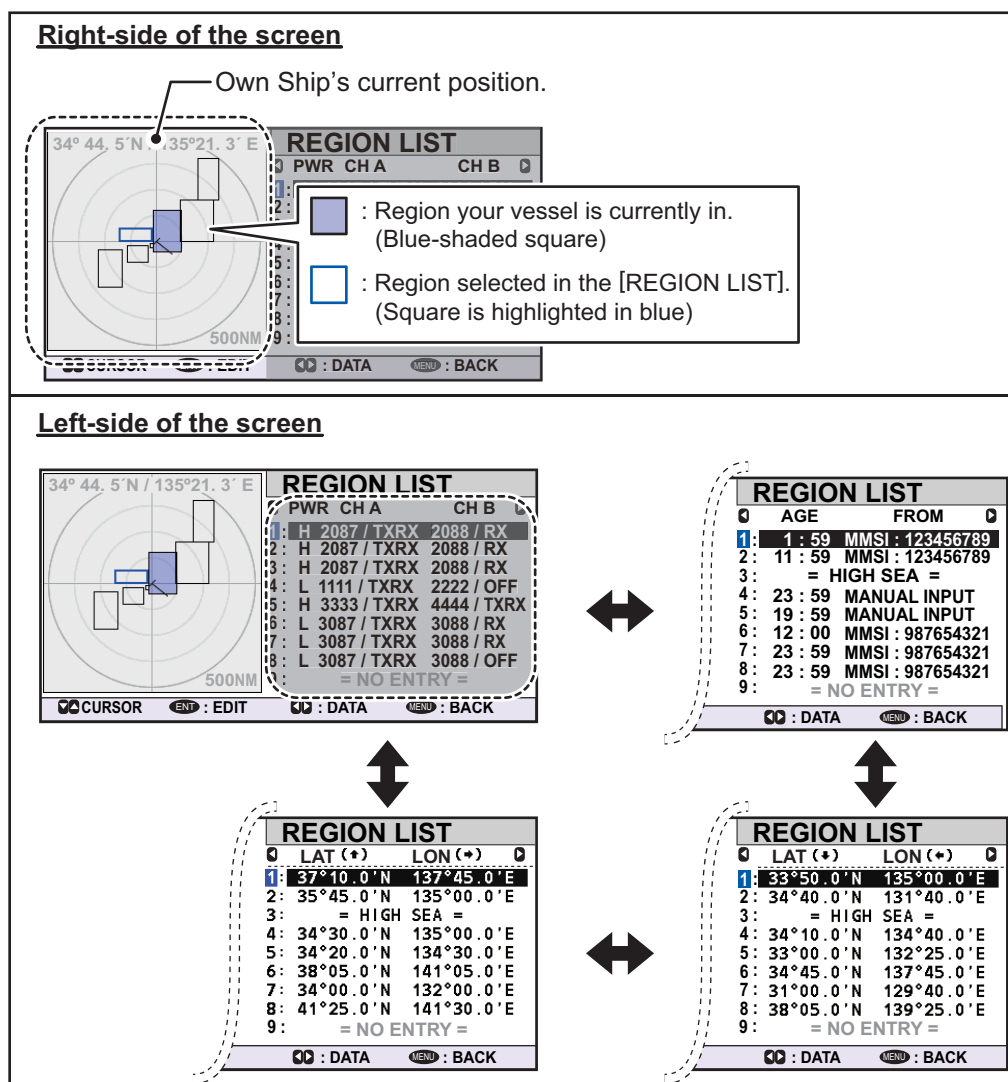


1. OPERATION

The data displayed on each page of the [REGION LIST] is described in the table below.

Data	Description
Region number	Up to eight regions can be assigned and set up. The ninth region is reserved for open seas and is displayed as "= HIGH SEA =". The region you are currently in is highlighted in blue (no. 1 in the example on the previous page).
PWR	<ul style="list-style-type: none"> H: High power TX setting. L: Low power TX setting.
CH A/CH B	Channel A/B's frequency and TX/RX settings.
AGE	Time since the channel was registered.
FROM	Cause/origin of the last change.
LAT/LON	Latitude and Longitude of the region's corners.


- Select the desired region number. You can select a region to edit from any page in the [REGION LIST]. The selected region is highlighted in blue on the plotter screen.
- Press the **ENT/ACK** key to show the selected region's details. The region is highlighted in light red on the plotter screen, as shown in the figure below.

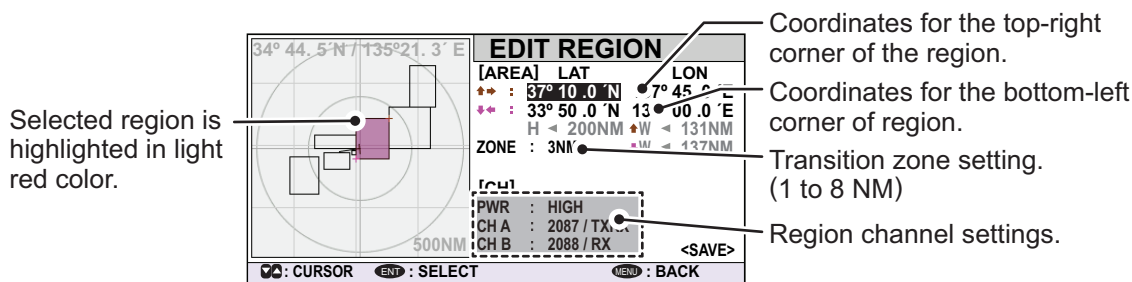

- The [LAT] setting for the top-right corner of the region is already selected; press the **ENT/ACK** key. Input the latitude for the top-right position (northeast point) of the AIS operating area then press the **ENT/ACK** key.
- Press **▶** to select the [LON] setting for the top-right corner, then press the **ENT/ACK** key. Input the longitude for the right-top position (northeast point) of the AIS operating area then press the **ENT/ACK** key.
- Press **▶** to select the [LAT] setting for the bottom-left corner, then press the **ENT/ACK** key. Enter latitude for the bottom-left position (southwest point) of the AIS operating area then press the **ENT/ACK** key.
- Press **▶** to select the [LON] setting for the bottom-left corner, then press the **ENT/ACK** key. Enter longitude for the bottom-left position (southwest point) of the AIS operating area then press the **ENT/ACK** key.


Note: The overall area for the selected region is displayed in height (H) and width (W) values, in gray text. If the set region is less than 20 nautical miles or more than 200 nautical miles long/wide, the height and width values are displayed in red text. Adjust the dimensions so the length/width of the region is more than 20 nautical miles and less than 200 nautical miles.

10. Press ► to select the setting for [ZONE], then press the **ENT/ACK** key. A numerical input pop up window appears. The transition zone works as a buffer between your current region and the regions immediately adjacent to your current region. When any vessel enters the transition zone, messages sent from the adjacent region channel A are received via your region's channel B. This helps to locate vessels in adjacent regions.

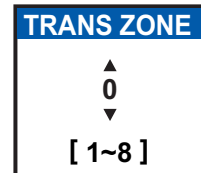

11. Input the size of the transition zone for this region, then press the **ENT/ACK** key.

12. Press ► to select [PWR], then press the **ENT/ACK** key to show the channel power options.

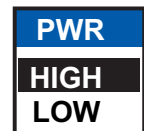


13. Select [HIGH] or [LOW] power desired then press the **ENT/ACK** key.

14. Select the channel indication for [CH A], then press the **ENT/ACK** key. A numerical input pop up window appears.



15. Input the channel number for [CH A] then press the **ENT/ACK** key.

16. Press ► to select the transmit/receive settings, then press the **ENT/ACK** key. An options pop up window appears.

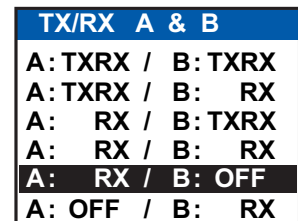

17. Select the appropriate setting, then press the **ENT/ACK** key.

[TXRX]: Transmit and receive.

[RX]: Receive only.

[OFF]: Disable the channel.

18. Press ► to select [<SAVE>], then press the **ENT/ACK** key. A confirmation pop up window appears.

Select [YES] to apply the new settings and return to the [REGION LIST], [NO] to cancel the new settings and return to editing the region.


Note: If you enter invalid data, a pop up message stating the reason for the error appears. The table on the following page lists the pop up messages for these errors and the recommended action for each error.

Pop up error message	Recommended action
INVALID CHANNEL	Check the channel setting, re-input the settings.
INVALID REGION SIZE.	Check the region size is less than 200 NM and more than 20 NM. Adjust your region size.
INVALID REGION. ADJUST SIZE OR LOCATION.	Check your region size and location, there is at least one other region overlapping. Resize or relocate your region.
INVALID OPERATION: REGION CANNOT BE OVERWRITTEN.	Check the overlapping regions. Adjust your region size or location.

1.11 How to Enable/Disable the Key Beep

You can turn off the beep, which sounds for valid key input.

1. Press the **MENU/ESC** key to open the menu.
2. Select [USER SET], then press the **ENT/ACK** key.

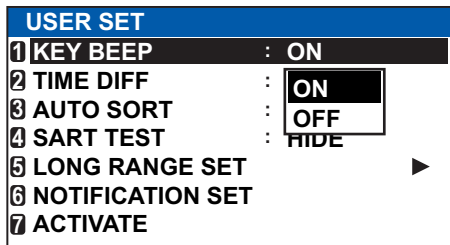

3. [KEY BEEP] is already selected, press the **ENT/ACK** key.
4. Select [ON] or [OFF] as appropriate then press the **ENT/ACK** key.
5. Press the **DISP** key to close the menu.

1.12 Long Range


The long range function sets the following:

- How to reply to a request for own ship data from a distant station (for example, an Inmarsat C station).
- Whether to transmit your ship's position to a satellite via the AIS VHF communication link or not.

1.12.1 How to set up long range response

Select how to reply to a request for own ship data from a distant station, for example, an Inmarsat C station. The available options are [AUTO] (automatically) or [MANUAL] (manually).


1. Press the **MENU/ESC** key to open the menu.
2. Select [USER SET], then press the **ENT/ACK** key.
3. Select [LONG RANGE SET], then press the **ENT/ACK** key.

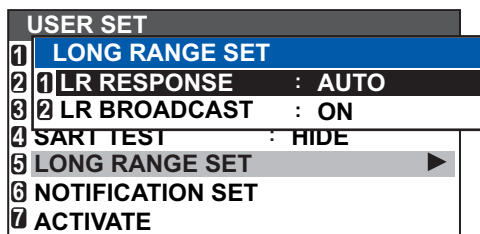

4. Select [LR RESPONSE] then press the **ENT/ACK** key.
5. Select [AUTO] (auto reply) or [MANUAL] (manual reply) as appropriate then press the **ENT/ACK** key.
6. Press the **DISP** key to close the menu.


Manual reply

For manual reply, the requesting ship's MMSI, name and information requested appear. Select [REFUSE], then press the **ENT/ACK** key to send no data, or select [REPLY], then press the **ENT/ACK** to send data. The screen then changes according to your selection.

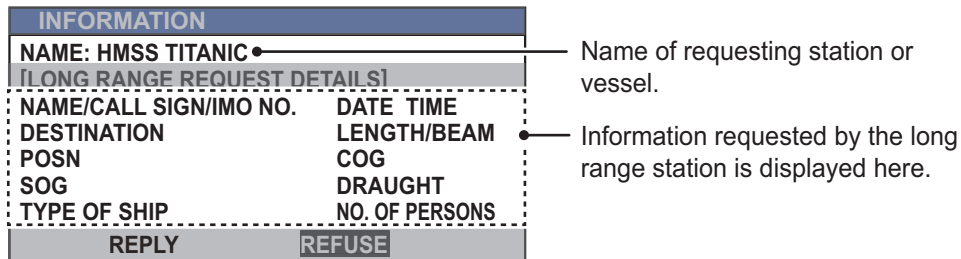

Automatic reply

For automatic reply, the pop up message shown below appears when an automatic reply is sent. Requested data is automatically transmitted. Press the **ENT/ACK** key to close the message.

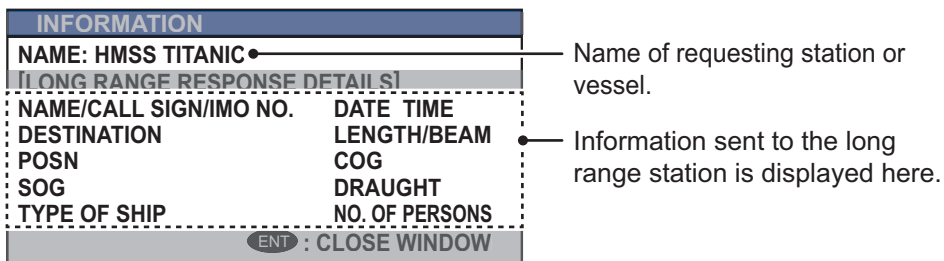

1.12.2 How to broadcast own ship data

You can broadcast own ship data to a satellite via the AIS VHF communication link.

1. Press the **MENU/ESC** key to open the menu.
2. Select [USER SET] then press the **ENT/ACK** key.
3. Select [LONG RANGE SET] then press the **ENT/ACK** key.
4. Select [LR BROADCAST] then press the **ENT/ACK** key.
5. Select [ON] or [OFF] as appropriate then press the **ENT/ACK** key.
[ON] sends your ship's position, and other data to a satellite via the AIS VHF communication link.
6. Press the **DISP** key to close the menu.

Note: The availability of this function depends of equipment specifications. The menu is not shown unless so equipped.

1.13 Pilot Plug (FA-1703, option)

A pilot plug, which is connected between the AIS and a PC, is required to feed AIS information to a PC. The plug is required for the ships passing through the Panama Canal and the Saint Lawrence Seaway. The specifications for the pilot plug are as shown below.

Item	Specifications
Baud rate	38400 bps Note: The following setting is required for the FA-170. If the pilot does not function, check these the following items. <ul style="list-style-type: none"> • COM port settings: [INITIAL SET] menu → [I/O PORT]. The selected port for the pilot plug must be set to [EXT DISPLAY]. • Check the pilot plug connection at both the FA-170 and the connected PC.
Type	AMP 206486-1 (9-pin, male)
Signal connection	TX-A: Pin 1 TX-B: Pin 4 RX-A: Pin 5 RX-B: Pin 6 SHIELD: Pin 9


Connector for AIS

206486-1



Connector for PC

206485-1

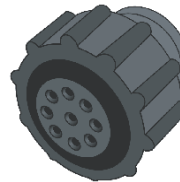

Pilot Plug connectors for FA-1703

1.14 Viewing Initial Settings

The [INITIAL SET] menu, which is locked with a password to prevent accidental changes to the ship's details, is where the installer enters ship's MMSI, internal and external antenna positions, ship type, I/O port settings and network settings. You can view the settings on this menu as follows.

1. Press the **MENU/ESC** to open the menu.
2. Select [INITIAL SET], then Press the **ENT/ACK** key.
3. Select item to view then press the **ENT/ACK** key.

Note: The availability of some functions depends on the equipment specifications of your vessel. Some items are not displayed unless the vessel is equipped accordingly.

Password access is required to change these settings. Contact your local dealer to change the settings if required.

INITIAL SET

- 1 SHIP'S INFORMATION
- 2 ANTENNA POSITION
- 3 ALERT ENABLE
- 4 I / O PORT
- 5 PORT PRIORITY
- 6 NETWORK : LOCK
- 7 FDIT

The [INITIAL SET] menu is preset at installation and the [EDIT] function requires password access. To change these settings, contact your local dealer.

Displayed as "NETWORK (NAVNET)" when the network type is set to [NAVNET].

SHIP'S INFORMATION

MMSI ◀ 234567891
 NAME ◀ PERSEPHONE
 IMO NO. ◀ 987654321
 CALL SIGN ◀ @SEVEN@
 TYPE OF SHIP ◀ 24 (WIG)
 CARRYING DG, HS, OR, MP(OS)

[LONG RANGE]
 CH C ◀ 0075
 CH D ◀ 0076

MENU : BACK

ANTENNA POSITION

[SHIP SIZE] LENGTH BEAM
 ◀ 120m 60m

[ANT POSN] Y X
 INTERNAL ◀ 60m 0m
 EXTERNAL ◀ 80m 15m

[ANT POSN] #A, B# #C, D#
 INTERNAL ◀ 60, 60 30, 30
 EXTERNAL ◀ 40, 80 45, 15

MENU : BACK

ALERT ENABLE

WARNING1 WARNING2
 ENABLE: 8 DISABLE: 0 ENABLE: 10 DISABLE: 0

001	014	005	011
002	026	007	025
003	029	008	032
004	030	009	035
010			

001 : TX MALFUNCTION

MENU : BACK

I / O PORT

PORT	MODE	SPEED
COM1	◀ LONG RANGE	38400baud
COM2	◀ EXT DISPLAY	38400baud
COM3	◀ EXT DISPLAY	38400baud
COM4	◀ EXT DISPLAY	38400baud
COM5	◀ EXT DISPLAY	38400baud
COM6	◀ EXT DISPLAY	38400baud
SENSOR1	◀ SENSOR	4800baud
SENSOR2	◀ SENSOR	4800baud
SENSOR3	◀ SENSOR	4800baud

MENU : BACK

PORT PRIORITY

PRIORITY	LL / SOG / COG	HDG	ROT
1st	◀ SENSOR1	SENSOR3	SENSOR3
2nd	◀ SENSOR2	SENSOR1	SENSOR1
3rd	◀ SENSOR3	SENSOR2	SENSOR2
4th	◀ COM4	COM6	COM6
5th	◀ COM5	COM4	COM4
6th	◀ COM6	COM5	COM5
7th	◀ LAN	LAN	LAN

MENU : BACK

NETWORK

IP ADDRESS ◀ 172 . 031 . 024 . 004
 SUBNET MASK ◀ 255 . 255 . 000 . 000
 GATEWAY ◀ 000 . 000 . 000 . 000
 OWN SFI ◀ A10001

[RX SFI]
 LL/SOG/COG ◀ GP0001
 HDG ◀ GP0002
 ROT ◀ GP0002

MENU : BACK

4. Press the **DISP** key to close the menu.


1.15 Setting for Time Difference

You can set the time difference from UTC (Coordinated Universal Time) to show the local time.

1. Press the **MENU/ESC** key to open the menu.
2. Select [USER SET] then press the **ENT/ACK** key.

USER SET		
1	KEY BEEP	: ON
2	TIME DIFF	: +00 : 00
3	AUTO SORT	: ON
4	SART TEST	: HIDE
5	LONG RANGE SET	▶
6	NOTIFICATION SET	
7	ACTIVATE	

3. Select [TIME DIFF], then press the **ENT/ACK** key. The settings pop up window is displayed.



4. Select the desired time difference then press the **ENT/ACK** key. You can change the value with ▲ or ▼, the digit with ▶ or ◀. The setting range is -14:00 to +14:00.
5. Press the **DISP** key to close the menu.

Note: When a UTC time offset is set, the time display indication for messages and NAV STATUS screen is indicated as "LT" (Local Time). When there is no offset, the time display indication for messages and the NAV STATUS screen is indicated as "UTC" (Coordinated Universal Time).

2. INLAND AIS OPERATION

This section provides the operating procedures for the Inland AIS feature, which allows use of the AIS transponder on inland waterways or the open sea. Only those procedures that are different from the Class A AIS transponder are presented.

Ships with Inland AIS transponders on board autonomously determine their actual position using the Global Positioning System (GPS), which is part of the AIS transponder. Furthermore they broadcast their ID and position to other ships over a distance of 10 to 30 kilometers (depending on the geographical environment). Other ships in the area receive this information and are able to display their own position and that of other ships. Inland AIS helps the skipper in his direct nautical decisions, especially in critical situations, like the approach of a bend or a constriction.

Further, authorities have the possibility to allow electronic submission of cargo lists, for example, for transports of dangerous cargo. The standard for "Electronic Reporting" (ERI) allows the digital, language independent submission of cargo or passenger reports from ships or agencies to authorities. In combination with electronic data exchange between the authorities of different countries this results in less reporting for the skippers. On the other hand all cargo information is available to authorities in case of an accident.

2.1 How to Activate the Inland AIS

Input your key number (received from dealer) to activate the Inland AIS. (If the key was input during the installation, activation key input is not necessary.)

1. Press the **MENU/ESC** key to open the menu.
2. Select [USER SET] then press the **ENT/ACK** key.
3. Select [ACTIVATE] then press the **ENT/ACK** key.

ACTIVATE	
DEVICE ID	◀ AB-12-C3-ZD-AA-N4
ACTIVATE KEY	: ██████████ INACTIVATED

ENT : SELECT MENU : BACK

4. Press the **ENT/ACK** key to display the alphanumeric pop up window. The selected digit cycles through digits in the following order when ▲ is pressed: 1, 2 ... 9, 0, A, B, C ... X, Y, Z, 1, 2... press ▼ to cycle through digits in the opposite direction. Press ► or ◀ to move the selection cursor.
5. Input the activation key, then press the **ENT/ACK** key.

If you entered the activation key correctly, the indication "ACTIVATED!" appears then the system is automatically restarted. The FA-170 starts up with the SOLAS mode active.

2.2 Selecting AIS Mode

The Inland AIS has two operating modes: Inland (inland waterways) and SOLAS (SOLAS compliant class A AIS transponder). Select desired mode as follows:

1. Press the **NAV STATUS** key to open the [NAV STATUS] menu.

NAV STATUS		
VOYAGE	SHIP'S INFO	SCALE
NAV STATUS	: 12	PWR-DRIVEN VESSEL PUSHING AHEAD OR TOWING ALONGSIDE
DESTINATION	: KOBE	[SOLAS LIST] [INLAND LIST]
ETA (UTC)	: 10 / MAY 10 : 51	
AIS MODE	: SOLAS	
DYNAMIC INFO RATE	: AUTO	
: CURSOR : SELECT : TAB		

2. Press ▼ to select [AIS MODE] then press the **ENT/ACK** key. The mode selection pop up window appears.



3. Select [SOLAS] or [INLAND] as appropriate then press the **ENT/ACK** key. The AIS mode icon at the top of the screen changes to display the selected mode.



Inland mode active



SOLAS mode active

You are asked if you are sure to reboot the system. Select [YES] then press the **ENT/ACK** key to reboot the unit.

Notes on Inland AIS operation

- IMO No. is transmitted with all zeros.
- The draught used in Inland AIS is "Inland draught".

2.3 How to Enter Voyage-Related Data

Before you embark on a voyage using Inland AIS, set the various related data (see the list below) on the [NAV STATUS] menu.

- Navigational status
 - Destination
 - Arrival time
 - AIS mode currently in use
 - Rate at which your vessel's dynamic information is transmitted
 - ERI code
 - No. of blue cones (for hazardous cargo)
 - Cargo status
 - No. of persons
 - Length and beam of ship
 - Draught
1. Press the **NAV STATUS** key.
The [NAV STATUS] setting is selected by default.

NAV STATUS		
VOYAGE	SHIP'S INFO	SCALE
NAV STATUS	: 12	PWR-DRIVEN VESSEL PUSHING AHEAD OR TOWING ALONGSIDE
DESTINATION	: KOBE	[SOLAS LIST] [INLAND LIST]
ETA (UTC)	: 10 / MAY 10 : 51	
AIS MODE	: SOLAS	
DYNAMIC INFO RATE	: AUTO	
: CURSOR : SELECT : TAB		

2. If your navigational status is different from that shown, follow the procedure below. If it is the same as shown, go to step 3.
 - 1) Press the **ENT/ACK** key. The [NAV STATUS] options pop up window appears.
 - 2) Input the appropriate status, then press the **ENT/ACK** key. Refer to the data below to select appropriate navigational status.

- 00: UNDERWAY USING ENGINE
- 01: AT ANCHOR
- 02: NOT UNDER COMMAND
- 03: RESTRICTED MANEUVERABILITY
- 04: CONSTRAINED BY HER DRAUGHT
- 05: MOORED
- 06: AGROUND
- 07: ENGAGED IN FISHING
- 08: UNDERWAY SAILING
- 09: RESERVED FOR HIGH SPEED CRAFT (HSC)*1
- 10: RESERVED FOR WING IN GROUND (WIG)*2
- 11: PWR-DRIVEN VESSEL TOWING ASTERN
- 12: PWR-DRIVEN VESSEL PUSHING AHEAD OR TOWING ALONGSIDE
- 13: RESERVED FOR FUTURE USE
- 14: AIS-SART (ACTIVE), MOB-AIS, EPIRB-AIS*3
- 15: DEFAULT (ALSO USED BY SART, MOB, EPIRB UNDER TEST)

*1: RESERVED FOR FUTURE AMENDMENT OF NAVIGATIONAL STATUS FOR SHIPS CARRYING DG, HS, OR MP, OR IMO HAZARD OR POLLUTANT CATEGORY C, HIGH SPEED CRAFT (HSC)



*2: RESERVED FOR FUTURE AMENDMENT OF NAVIGATIONAL STATUS FOR SHIPS CARRYING DANGEROUS GOODS (DG), HARMFUL SUBSTANCES (HS) OR MARINE POLLUTANTS (MP), OR IMO HAZARD OR POLLUTANT CATEGORY A, WING IN GROUND (WIG)

*3: Not selectable for this type of equipment.

3. Select [DESTINATION], then press the **ENT/ACK** key. The software keyboard appears for direct input. See section 1.5.4 for how to use the software keyboard. Enter the desired destination then press the **ENT/ACK** key. You can use up to 20 alphanumeric characters and enter up to 20 destinations.

2. INLAND AIS OPERATION


A list of destinations can also be accessed by selecting [SOLAS LIST] (displayed as DESTINATION LIST once accessed, as shown in the figure below) or [INLAND LIST] as appropriate for your AIS mode.

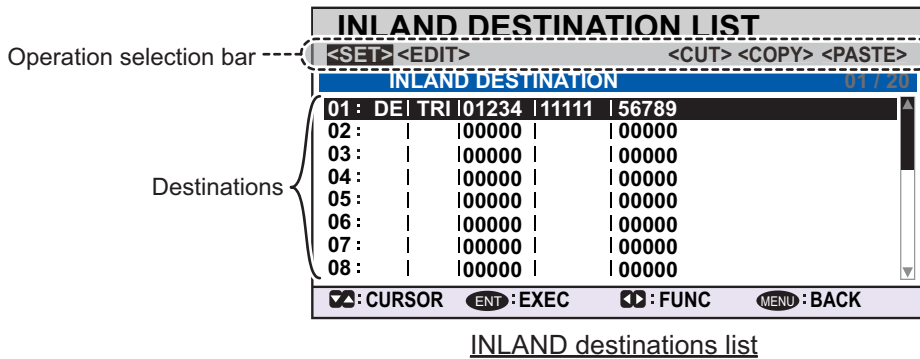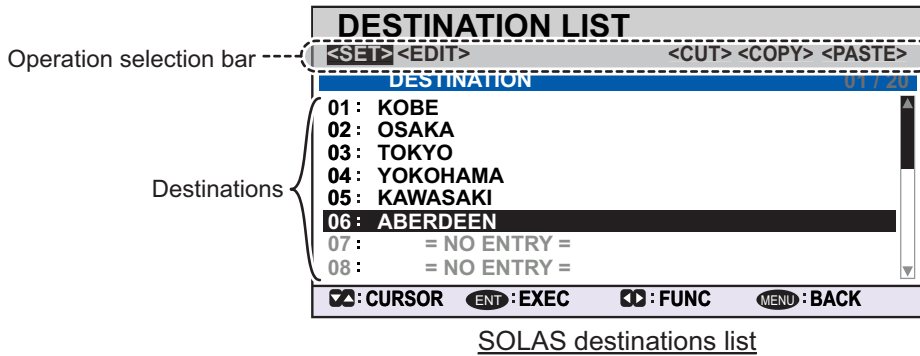

Referring to operation descriptions in the table below, press ◀ or ▶ to select an operation, press ▲ or ▼ to select an entry in the list, then press the **ENT/ACK** key to confirm the selection.

Operation	Description
<SET>	Set the currently selection as the destination.
<EDIT>	Rename the selected destination. The software keyboard appears when <EDIT> is selected. See section 1.5.4 for how to use the software keyboard.
<CUT>	Cut the current selection to temporary memory, leaving the entry empty. The destination can now be pasted as a different entry. Note: Only one entry can be stored in temporary memory at a time. If you <CUT> two entries successively, the first is deleted.
<COPY>	Copy the current selection to temporary memory. The destination can now be pasted as a different entry.
<PASTE>	Paste the entry stored in temporary memory to the selected destination number. Note: Entries over-written with <PASTE> cannot be restored.

- Select [ETA (LT/UTC)], then press the **ENT/ACK** key. The settings pop up window shown below appears.

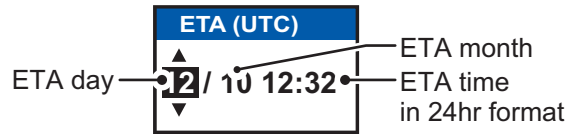

Note 1: The ETA indication appears as "ETA [LT]" when there a time offset is set from [TIME DIFF] in the [USER SET] menu. When the setting for [TIME DIFF] is not changed from the default (+00:00) setting, the ETA indication appears as "ETA [UTC]".

Note 2: Where a GPS is not connected, or the signal is lost/interrupted, the ETA indication appears as ETA [UTC]. Further, the settings pop up window displays "NOTE: INPUT THE UTC" at the bottom of the pop up window.

- Set the ETA date and time, referring to the figure on the previous page, then press the **ENT/ACK** key.
- Confirm that the AIS mode selected is correct for this voyage. If a mode change is necessary, change the mode (See section 2.2), then repeat this procedure after the system restarts. If no change is required, go to step 7.
- Select [DYNAMIC INFO RATE], then press the **ENT/ACK** key. The settings pop up window shown to the right appears.

If the report rate from a base station is used, this setting is ignored. For that reason, this setting is not always the same as the actual report rate.

DYNAMIC INFO RATE	
	AUTO
	10 sec
	5 sec
	2 sec

- Select the appropriate interval to send dynamic information, then press the **ENT/ACK** key.

Note 1: This setting is fixed to [AUTO] when [AIS MODE] is set to [SOLAS].

Note 2: The new settings take effect after approximately 8 minutes. In the meantime, the [AUTO] setting is used, regardless of the on-screen indication.
- Press ► to display the [SHIP'S INFO] tab.

NAV STATUS	
VOYAGE	SHIP'S INFO
ERI CODE	: 8160 TANKBARGE
BLUE CONES UN/LOADED	: UNKNOWN
CREW	: 254
PASSENGER	: 8190
PERSONNEL	: 254
NO. OF PERSONS	: 8191
[CURSOR] : CURSOR [ENT] : SELECT [TAB] : TAB	

- [ERI CODE] is selected. Press the **ENT/ACK** key to edit the ERI code type for this voyage.
For [SOLAS] mode, the [ERI CODE] item is replaced with [CARGO TYPE].
- Input the ERI code, referring to "ERI Codes" on page AP-12, then press the **ENT/ACK** key.

Note: When [Tanker] is selected and the Nav status is [Moored], output power is automatically switched to 1 W when SOG is less than 3 knots. Further, in the above condition, when SOG becomes higher than 3 knots, a beep sounds. (The

2. INLAND AIS OPERATION

pop-up message "TX POWER CHANGED" also appears to notify you that the Tx power has changed). To erase the pop-up message, press the **ENT/ACK** key or reduce SOG to below 3 knots.

For SOLAS mode, input the cargo type, referring to step 7 of section 1.6.

12. Select [BLUE CONES], then press the **ENT/ACK** key. The pop up window shown below appears.

BLUE CONES	
NO. OF CONES	0
NO. OF CONES	1
NO. OF CONES	2
NO. OF CONES	3
B-FLAG	
UNKNOWN	

Depending on the cargo, up to four "cones" have to be shown on the mast, in daylight with cones and nighttime with blue lights. The greater the number of the cones the more hazardous the cargo.

- Select [NO. OF CONES 0] if your ship is not carrying hazardous cargo.
- Select [B-FLAG] if your ship carries explosives or hazardous cargo that exceeds the hazard level expressed with cones.
- Select [UNKNOWN] if you are unsure of cargo type.

13. Set [BLUE CONES] as necessary, then press the **ENT/ACK** key.

14. Select [UN/LOADED], then press the **ENT/ACK** key. The pop up window shown to the right appears.

UN/LOADED
LOADED
UNLOADED

15. Select [LOADED] for vessel loaded with cargo, [UNLOADED] for vessel with no cargo, or [- -] if you are unsure of the loading status.

16. Select [CREW] is now selected, then press the **ENT/ACK** key.

17. Enter number of crew (0-254) then press the **ENT/ACK** key.

18. Select [PASSENGER], then press the **ENT/ACK** key.

19. Enter number of passengers (0-8190) then press the **ENT/ACK** key.

20. Select [PERSONNEL], then press the **ENT/ACK** key.

21. Enter number of shipboard personnel (persons other than passengers and crew, 0-254) then press the **ENT/ACK** key.


Note: The number of crew, passengers and shipboard personnel are sent in RFM55 messages.

22. [NO. OF PERSONS] is selected; press the **ENT/ACK** key.


23. Enter the total number of persons (sum of crew, passengers and shipboard personnel) on-board then press the **ENT/ACK** key.

Note: If the value entered for [CREW], [PASSENGER], [PERSONNEL] or [NO. OF PERSONS] exceeds the maximum setting listed in the steps above, the value appears as maximum for that item.

24. Press ► to display the [SCALE] tab.

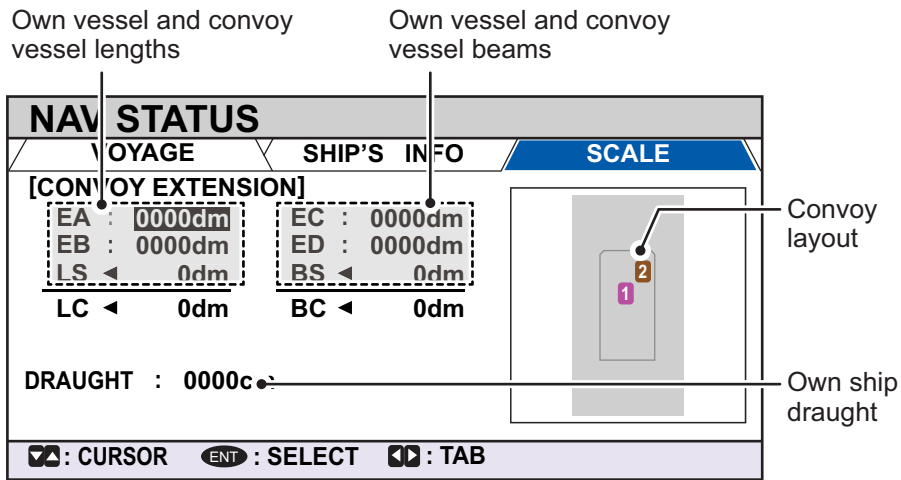


25. Referring to the table below, input the length and beam of your vessel and the convoy vessel. The values are displayed as decimeters.

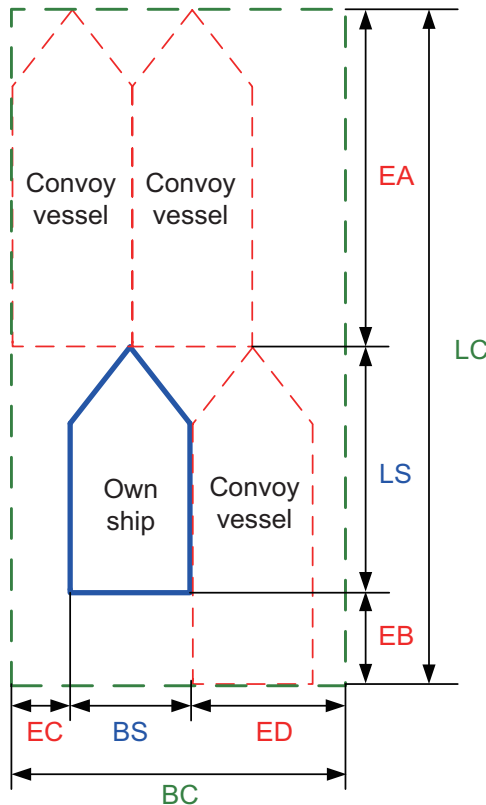

Menu item	Description
[EA]	Length of convoy vessel A.
[EB]	Length of convoy vessel B.
[EC]	Beam of convoy vessel A.
[ED]	Beam of convoy vessel B.
[LS]	Own ship length. (Display only, not available for input.)
[BS]	Own ship beam. (Display only, not available for input.)
[LC]	Shows the total length of the convoy. (Display only, not available for input.)
[BC]	Shows the total beam of the convoy. (Display only, not available for input.)

Press the arrow keys to move the selection cursor and highlight the item you wish to edit, then press the **ENT/ACK** key. A numerical input pop up window appears for the selected item.

26. Select [DRAUGHT], then press the **ENT/ACK** key to display the [DRAUGHT] setting pop up window. The setting range is [0] cm to [2000] cm.

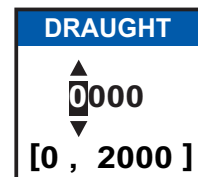


27. Input the draught, then press the **ENT/ACK** key.

28. Press the **DISP** key to close the menu.

2.4 Static Data

The [OWN INFORMATION] display shows your ship's data across four tabs. The information displayed is shown in the figure below. This data should be checked once per voyage or once per month, whichever is shorter. Data may be changed only on the authority of the master.

The Officer of the Watch should periodically check position, SOG and sensor information for quality.

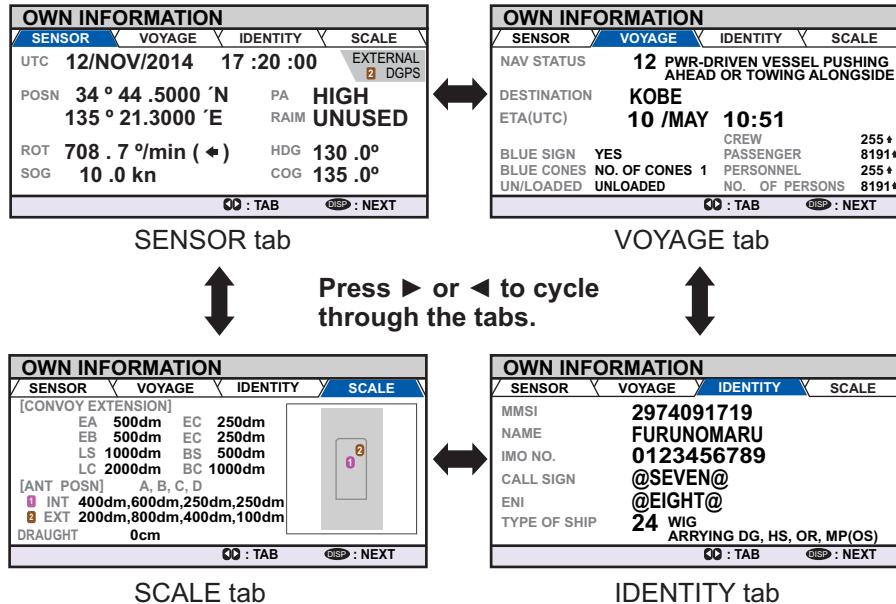

Note 1: The above displays are when INLAND mode is active. When SOLAS mode is active, they are same as in CLASS A AIS.

Note 2: The [TYPE OF SHIP] indication on the [IDENTITY] tab changes to display the ERI code when INLAND mode is active.

Update rate of dynamic ship information

Ship's dynamic conditions and nominal reporting interval

Ship's dynamic conditions	Nominal reporting interval
Ship at anchor or moored or aground or not under command and not moving faster than 3 kn	3 minutes
Ship at anchor or moored or aground or not under command and moving faster than 3 kn	10 seconds
Ship operating in SOLAS mode, moving 0-14 kn	10 seconds
Ship operating in SOLAS mode, moving 0-14 kn speed and changing course	3 1/3 seconds
Ship operating in SOLAS mode, moving 14-23 kn	6 seconds
Ship operating in SOLAS mode, moving 14-23 kn and changing course	2 seconds
Ship operating in SOLAS mode, moving faster than 23 kn	2 seconds
Ship operating in SOLAS mode, moving faster than 23 kn and changing course	2 seconds
Ship operating in inland waterway mode	Assigned between 2 seconds and 10 minutes

2.5 Target List and Dangerous Target List

2.5.1 Target list

The [TARGET LIST] can store up to 2048 AIS targets and AIS-SARTs being detected by the FA-170, in the order which they are detected. The list can be sorted in range order, from closest to farthest.

1. Press the **DISP** key until the [TARGET LIST] or [DANGEROUS LIST] appears.

Time at which the list was last sorted.

Selected target is highlighted.

Currently displayed target group. Total detected targets is displayed in brackets.

NAME/MMSI/TYPE: Target's MMSI, name or type is displayed. Where name data is available, the vessel name is displayed.

RNG[km]: Range from OS to target.

BRG[°]: Bearing to target.

AGE[']: Time (in minutes) since the target data was last updated.

Target type symbols. See Appendix 5 of the operator's manual for a full list of AIS symbols and their meanings.

NAME/MMSI/TYPE	RNG[km]	BRG[°]	AGE[']
SAMPLE SHIP_001	3.3	180.0	0
SAMPLE SHIP_002	3.3	095.0	0
SAMPLE SHIP_003	3.3	182.0	0
BS:123456789	3.3	056.0	0
SAMPLE SHIP_005	3.3	084.0	0
(SAR/VESSEL)	3.3	039.0	0
(SAR/AIRCRAFT)	3.3	045.0	0
SAMPLE SHIP_008	3.3	054.0	0

CURSOR END : FUNC PAGE DISP : NEXT

Note: The last views list ([DANGEROUS LIST] or [TARGET LIST]) is displayed.

Targets are displayed in groups of 100, however only eight targets are displayed on the screen at any time. The following operations are used in the TARGET LIST.

Operation	Description
Press ▲ or ▼.	Scroll up or down the list of targets. The selected target is highlighted.
Press ◀ or ▶.	Move to the next group of targets (next 8 targets).
Select [NEXT 100 TARGETS], then press the ENT/ACK key.	Move to the next page of the target list (next 100 targets). Note: Displayed only if more than 100 targets are detected.
Select [PREVIOUS 100 TARGETS], then press the ENT/ACK key.	Move to the previous page of the target list (last 100 targets). Note: Displayed only if more than 100 targets are detected.
Select a target, then press the ENT/ACK key.	Display the selected target's details. See section 1.8.4 for details.

The [NAME/MMSI/TYPE] column of the [TARGET LIST] displays the target vessel's type in the following formats:

For CLASS A/CLASS B/AtoN type targets

Where the vessel name is available, the name is displayed. Where no name data is available, the MMSI is displayed.

For SAR(VESSEL/AIRCRAFT)/SART/MOB/EPIRB type targets

TYPE	Display format
SAR Vessel	"SAR/VESSEL"
SAR Aircraft	"SAR/AIRCRAFT"
SART Active	"SART ACTIVE"
SART Test	"SART TEST"
MOB Active	"MOB ACTIVE"
MOB Test	"MOB TEST"
EPIRB Active	"EPIRB ACTIVE"
EPIRB Test	"EPIRB TEST"
AIS Base Station	"BS: (station's MMSI/name)"

Note 1: If there is no data for the target selected, the fields are displayed as "=NO TARGET=".

Note 2: Targets are automatically sorted in range order (closest to farthest) when no key is operated for 30 seconds. Target order is then updated every five seconds.

Active AIS-SARTs take priority and are displayed at the top of the list.

Note 3: When [AUTO SORT] on the [USER SET] menu is [OFF], the range and bearing to a target are updated. However, target order is not updated. To manually sort targets, see step 2.

Note 4: To select a target on the plotter display, press ▲ or ▼ to select the target then press the **ENT/ACK** key. Press ▲ to cycle through targets from nearest to furthest; ▼ to cycle through targets from furthest to nearest.

- To view target data, or to sort the target list, select the desired target, then press the **ENT/ACK** key. The target list options pop up window appears.




- [SORT (NORMAL)]: Press ◀ to display and sort the [TARGET LIST] into range order. The closest target is displayed at the top of the list.
- [SORT (DANGER)]: Press ▶ to display and sort the [DANGEROUS TARGET LIST] in range order. The closest target is displayed at the top of the list.
- [VIEW DETAIL]: Press the **ENT/ACK** key to open the [TARGET DETAIL] screen.
- [NEW MSG]: Press ▲ to open the text input window to create an AIS message to the selected target.
- [NAME REQUEST]: Press ▼ to send a name request to the target vessel's AIS.
Note: Name requests cannot be sent to the same target within a short period, regardless of target. If you have requested the name of a target too soon after the last request, or the target is out of range, or the target has set their AIS to RX only mode, the pop up message "CANNOT REQUEST NAME" is displayed. Wait a short while before requesting the name again.

- Press the **DISP** key to close the menu.

2.5.2 Dangerous (target) list

Dangerous targets are targets which are calculated to be on a collision course with your vessel. When a dangerous target is detected, the target and its available details can be viewed in the [DANGEROUS TARGET LIST].

The operations available from the [DANGEROUS TARGET LIST] are the same as the [TARGET LIST] operations. See section 2.5.1 and section 2.5.3 for details.

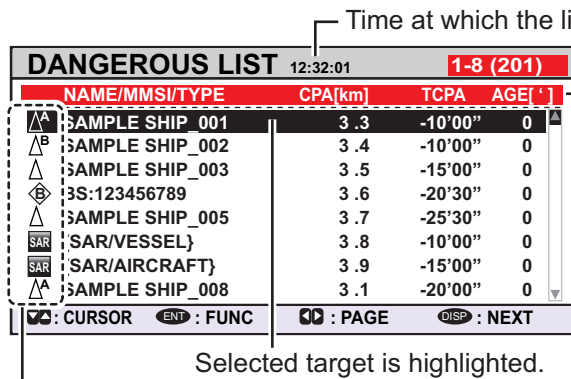

NAME/MMSI/TYPE: Target's MMSI, name or type is displayed. Where name data is available, the vessel name is displayed.

CPA[km]: Range to approach to the target from own ship.

TCPA: Time to approach to the target from own ship.

AGE[']: Time (in minutes) since the target data was last updated.


Target type symbols. See Appendix 5 for a full list of AIS symbols and their meanings.

Note: When no dangerous targets are detected, the list shows the message "= NO TARGET =".

2.5.3 How to interpret the [TARGET DETAIL] screen

The [TARGET DETAIL] screen shows available detailed information about the selected target.

Lost and dangerous targets have the appropriate icon displayed at the top right, as indicated in the lost target example below.

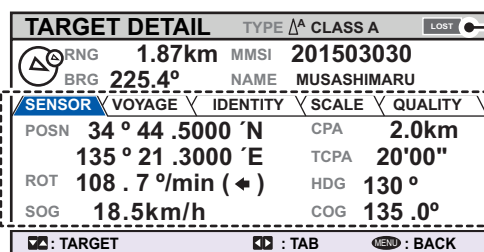

The **LOST** icon is displayed for lost targets.

The **DANGER** icon is displayed for dangerous targets.

When data input to the FA-170 is interrupted or stopped, indications for all tabs appear as "----".

There are five tabs available for viewing; [SENSOR], [VOYAGE], [IDENTITY], [SCALE] and [QUALITY]. Press ◀ or ▶ to change the tab currently displayed.

The selected target's bearing ([BRG]), range ([RNG]), [MMSI] and [NAME] are displayed at the top of the screen regardless of the selected tab. For lost or dangerous targets, the appropriate icon is displayed at the top right of the screen.

The information displayed on each tab varies, depending on the type of target selected.

The tables on the following pages list each tab's contents, along with a brief description.

SENSOR tab

Contents	Description
POSN	Target's last known position. Displayed for all target types.
ROT	Target's Rate Of Turn. Displayed only for CLASS A, SART, MOB and EPIRB target types.
ALT	Altitude. Displayed only for SAR VESSEL and SAR AIRCRAFT target types.
SOG	Target's Speed Over Ground. Displayed only for CLASS A, CLASS B, SAR VESSEL, SAR AIRCRAFT, SART, MOB and EPIB target types.
COG	Target's Course Over Ground. Displayed only for CLASS A, CLASS B, SAR VESSEL, SAR AIRCRAFT, SART, MOB and EPIB target types.
HDG	Target's last known heading. Displayed only for CLASS A, CLASS B, SART, MOB and EPIRB target types.
CPA	Range to target. Displayed for all target types.
TCPA	Time to approach to target. Displayed for all target types.

VOYAGE tab

The VOYAGE tab is only displayed for CLASS A target types and has two pages.

Contents	Description
NAV STATUS	Target's navigational status (see section 1.6 for details).
DESTINATION	Target's destination.
ETA	Target's Estimated Time of Arrival at the above destination.
BLUE SIGN	Indicates if the target is carrying hazardous cargo.
BLUE CONES	Indicates the number of blue cones (type of hazardous cargo) carried by the target.
UN/LOADED	Indicates if the target is loaded or unloaded.
CREW	Indicates the number of crew aboard the vessel/aircraft.
PASSENGERS	Indicates the number of passengers aboard the vessel/aircraft.
PERSONNEL	Indicates the number of personnel aboard the vessel/aircraft.
NO. OF PERSONS	Indicates the total number of people aboard the vessel/aircraft.

IDENTITY tab

The IDENTITY tab is only displayed for CLASS A, CLASS B, SAR VESSEL, SAR AIRCRAFT and AtoN target types.

Contents	Description
CALL SIGN	Target's call sign. Not displayed for AtoN target types.
IMO NO.	Target's International Maritime Organization registration number.
TYPE OF SHIP	Target's ship type. Displayed only for CLASS A and CLASS B target types.
REAL AtoN	Displayed as "YES" for physical aids to navigation, "NO" for virtual aids to navigation. Displayed only for AtoN target types.
TYPE OF AtoN	The type of aids to navigation. Displayed only for AtoN target types.
VENDER ID	Target's AIS maker's ID. Displayed only for CLASS B target types.
ENI	Target's ENI (Unique European Vessel Identification Number).
ERI CODE	Target's ERI (Electronic Reporting International ship type) code.

SCALE tab

The SCALE tab is only displayed for SAR VESSEL, SAR AIRCRAFT and AtoN target types.

Contents	Description
SHIP SIZE(LENGTH, BEAM)	Target's ship size (length, beam). Displayed for all above target types.
ANT POSN(X,Y)	Position of target's antenna. Displayed for all above target types.
DRAUGHT	Target ship's draught. Displayed only for CLASS A target types.
PI	Target's position. Displayed only for AtoN target types.
CONVOY	Target's convoy length and beam.

QUALITY tab

The QUALITY tab is displayed for all target types.


Contents	Description	
PA	Position Accuracy for target ship. (H: High accuracy, L: Low accuracy.)	
RAIM	Target's RAIM status. (USED: Using RAIM, UNUSED: Not using RAIM.)	
TIME STAMP	Time at which the target was last detected. Not displayed for AIS base stations.	
POSN QUALITY	Target's position quality. Possible position qualities are shown in the list below:	
	Quality indication	Meaning
	No position	Position data not available.
	Manual position	Position data is input manually.
	Dead reckoning position	Position calculated by dead reckoning.
	Outdated position > 200 m	More than 200 m from last estimated position.
	Position > 10 m	Difference of more than 10 m from last estimated position.
	Position with RAIM > 10 m	Difference of more than 10 m from last estimated position.
	Position < 10 m	Difference of less than 10 m from last estimated position.
	Position with RAIM < 10 m	Difference of less than 10 m from last estimated position.
Valid position with no time stamp	No time stamp available.	
HDG/SOG/ COG QUALITY	Target's gyro/speed sensor quality. Possible sensor qualities are shown in the list below:	
	Quality indication	Meaning
	HIGH	Target is equipped with sensors which meet the requirements of the VTT Standard for Inland Navigation.
LOW	Target is not equipped with sensors which meet the requirements of the VTT Standard for Inland Navigation.	

2.6 Inland AIS Specific Messaging

All sent and received messages are stored in their respective message box. Refer to the appropriate section below for how to view messages once they are sent or received.

2.6.1 How to send a text message


1. Press the **MENU/ESC** key to open the menu.
2. Select [MSG], then press the **ENT/ACK** key.

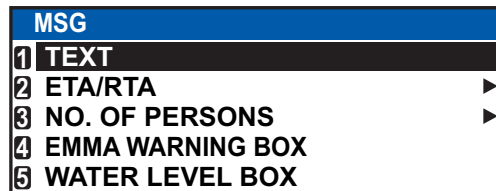


3. [TEXT] is selected, press the **ENT/ACK** key.



4. Select [NEW MSG], then press the **ENT/ACK** key.

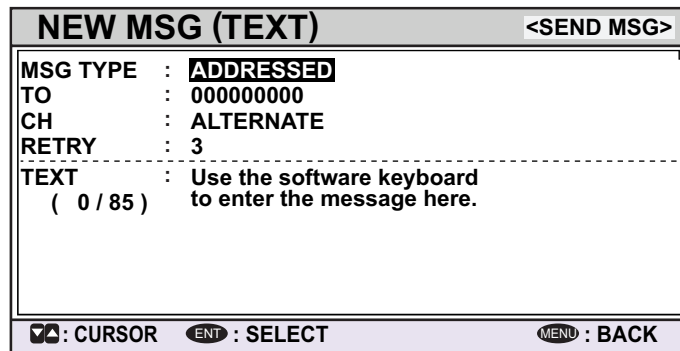


5. [MSG TYPE] is selected, press the **ENT/ACK** key to change the type of message you wish to send. The options pop up shown below appears.
6. Select the appropriate message type, then press the **ENT/ACK** key.

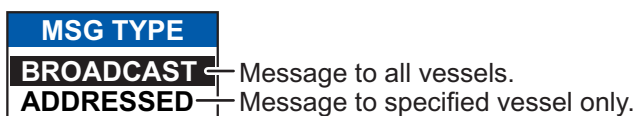

For broadcast messages, skip to step 9.

7. Select [TO], then press the **ENT/ACK** key. A numerical settings pop up appears.
8. Input the MMSI of the ship you wish to send this message to, then press the **ENT/ACK** key to close the pop up. See section 1.5 for how to input data.


9. Select [CH] (Channel), then press the **ENT/ACK** key. The channel select options pop up appears.

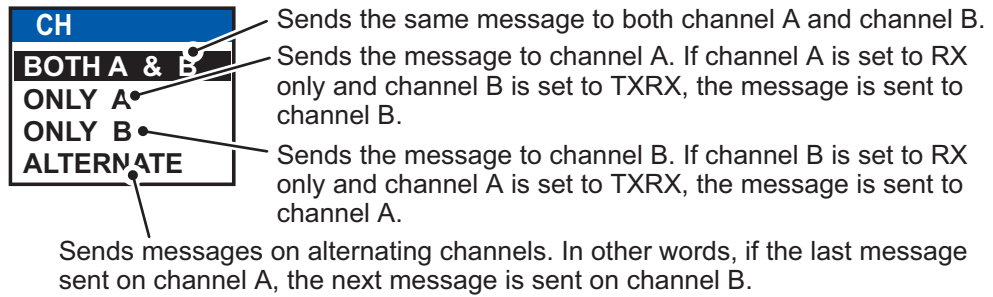

10. Select the appropriate option, then press the **ENT/ACK** key.
For broadcast messages, skip to step 13.
11. Select [RETRY], then press the **ENT/ACK** key. The retry attempts setting pop up appears.
12. Press **▲** to increase the retry attempts, **▼** to decrease the retry attempts. The maximum setting for retries is 3. Press the **ENT/ACK** key to apply the setting and close the pop up.
13. Press **▼** to highlight the message text, then press the **ENT/ACK** to display the software keyboard.
14. Input the new message text, referring to section 1.5.4. The maximum number of characters allowed is as follows:
- BROADCAST: 90 characters.
 - ADDRESSED: 85 characters.
15. Press **▲** or **▼** to highlight [<SEND MSG>] at the top right of the screen, then press the **ENT/ACK** key. A confirmation pop up appears.
16. Select [YES] to send the message or [NO] to cancel the message, then press the **ENT/ACK** key.

2.6.2 How to view a sent text message

1. Press the **MENU/ESC** key to open the menu.
2. Select [MSG], then press the **ENT/ACK** key.

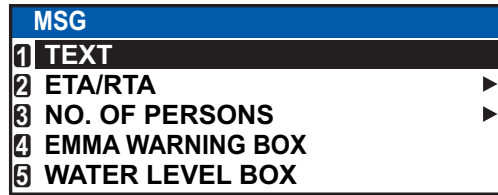

3. Select [TEXT], then press the **ENT/ACK** key.
4. Select [MSG BOX], then press the **ENT/ACK** key. The message box appears.

MSG BOX (TEXT)		
OUTBOX: 10	INBOX: 12	
TIME [UTC]	TO	01 / 10
OK ←	30 / MAY 18 : 25	BROADCAST
NG ←	29 / MAY 16 : 05	BROADCAST
NG →	28 / MAY 16 : 15	TITANIC
OK →	27 / MAY 17 : 20	NAUTILUS
OK ←	26 / MAY 17 : 20	BROADCAST
NG ←	25 / MAY 17 : 20	BROADCAST
NG →	24 / MAY 17 : 20	MUSASHIMARU

CURSOR: CURSOR ENT: FUNC TAB: TAB MENU: BACK

Indication	Meaning
OK	This message was sent successfully.
NG	This message was not sent.
NO ACK	Waiting for recipient to acknowledged this message.
↔	Broadcast message
→	Addressed message

5. Select the message you wish to view, then press the **ENT/ACK** key. The message options pop up window shown below appears.

FUNCTION

VIEW DETAIL

NEW MSG

➔

INBOX MSG DETAIL (TEXT)

MSG TYPE ← ADDRESSED

TIME [UTC] ← 28 / MAY 16 : 15

FROM ← 987654321 / ENTERPRISE

TEXT ← POWERED BY FURUNO ELECTRONICS.

(21)

MESSAGE: MESSAGE BOX: BOX MENU: BACK

Select [VIEW DETAIL], then press the **ENT/ACK** key to display the received message's contents. The figure above shows an example of a received message. Select [NEW MSG], then press the **ENT/ACK** key to send a message back to this message's sender.

6. Press ▲ or ▼ to view other messages, press ◀ or ▶ to switch between viewing an [INBOX] message and an [OUTBOX] message.
7. Press the **DISP** key to close the menu.

2.6.3 ETA and RTA messages

The purpose of an ETA message is to apply for a time slot at a lock, bridge or terminal. (Hereafter "lock" refers to lock, bridge or terminal.) The message contains your ship's ETA at the lock, air draught, the number of assisting tugboats required and the particulars of the lock (country code, location code, etc.).

Upon receipt of your ETA message, the lock authority responds with an RTA (Requested Time of Arrival) message, usually within 15 minutes of receipt of the ETA message. The RTA message contains lock operational status, requested time of arrival and the particulars of the lock (country code, location code, etc.).

How to send an ETA message

1. Press the **MENU/ESC** key to open the menu.
2. Select [MSG], then press the **ENT/ACK** key.
3. Select [ETA/RTA], then press the **ENT/ACK** key.




The [NEW MSG] option in the [ETA/RTA] pop up window is not available for selection in [SOLAS] mode.

4. Select [NEW MSG], then press the **ENT/ACK** key.

NEW MSG (ETA)		<SEND MSG>
TO	: 00000000	
CH	: ALTERNATE	
RETRY	: 3	

DESTINATION	: DE TRI 01234 11111 56789	
COUNTRY CODE	◀ DE	LOCATION CODE ◀ TRI
FAIRWAY NO.	◀ 01234	TERMINAL CODE ◀ 11111
FAIRWAY HECT	◀ 56789	
ETA[UTC]	: 12/MAY 12:32	
AIR DRAUGHT	: 0.0cm	
NO. OF TUGBOATS	: 0	
⏏: CURSOR ⏎: SELECT ⏏: MENU: BACK		

5. [TO] is selected. Press the **ENT/ACK** key. to display the MMSI settings pop up window.
6. Enter the MMSI of the lock/bridge/terminal you want to pass through then press the **ENT/ACK** key.
7. Select [CH], then press the **ENT/ACK** key.

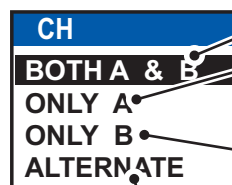

Sends the same message to both channel A and channel B.
 Sends the message to channel A. If channel A is set to RX only and channel B is set to TXRX, the message is sent to channel B.
 Sends the message to channel B. If channel B is set to RX only and channel A is set to TXRX, the message is sent to channel A.


Sends messages on alternating channels. In other words, if the last message sent on channel A, the next message is sent on channel B.

8. Select the channel over which to send the message then press the **ENT/ACK** key.
9. Select [RETRY], then press the **ENT/ACK** key. The retry attempts setting pop up appears.
10. Press ▲ to increase the retry attempts, ▼ to decrease the retry attempts. The maximum setting for retries is 3. Press the **ENT/ACK** key to apply the setting and close the pop up.
11. Select [DESTINATION] then press the **ENT/ACK** key. The [INLAND DESTINATION LIST] appears.

INLAND DESTINATION LIST			
<SET> <EDIT>		<CUT> <COPY> <PASTE>	
INLAND DESTINATION			
01:	DE TRI 01234 11111 56789		
02:	00000 00000		
03:	00000 00000		
04:	00000 00000		
05:	00000 00000		
06:	00000 00000		
07:	00000 00000		
08:	00000 00000		
⏏: CURSOR ⏎: EXEC ⏏: FUNC ⏏: MENU: BACK			

2. INLAND AIS OPERATION

- Referring to section 2.3, select or edit an existing destination or create a new destination. The figure below shows an example destination and the edit pop up windows.

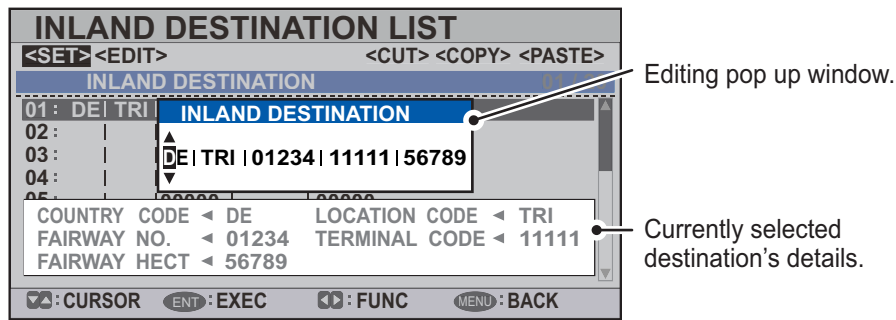

When setting an destination for the [INLAND DESTINATION LIST] the following details are required.

- Country code: The UN country code of your destination. (Referring to ISO 3166.)
- Three letter location code.
- Fairway number and hectometer.
- Terminal code.

Note: For location codes, fairway numbers (and hectometers) and terminal codes, refer to the ERI (Electronic Reporting International) Guide Part IV Annex 2 for examples.

- Input or edit the destination as appropriate, then press the **ENT/ACK** key. Press ▲ to increase the value (or the next character, in alphabetical order), press ▼ decrease the value (or the previous character, in alphabetical order). Press ► to move the selection cursor to the right, ◀ to move the cursor to the left.
- Select [<SET>], then press the **ENT/ACK** key.
- Select [ETA (UTC)], then press the **ENT/ACK** key. The settings pop up window shown below appears.



- Select [AIR DRAUGHT], then press the **ENT/ACK** key.
- Enter your ship's air draught then press the **ENT/ACK** key. (Air draught is the vertical distance measured from the ship's waterline to the highest point on the ship.)
- Select [NO. OF TUGBOATS], then press the **ENT/ACK** key.
- Enter the no. of assisting tugboats (0-6) your ship requires then press the **ENT/ACK** key. Enter [0] for none.
- Press ▲ or ▼ to highlight [<SEND MSG>] at the top right of the screen, then press the **ENT/ACK** key. The system will now attempt to send the message.

How to view sent ETA messages and received RTA messages

A lock authority responds to an ETA message with an RTA message. An RTA message contains the date and time the lock authority requests that your ship arrive to the lock, lock status and the particulars of the lock (country code, location code, etc.)

When an RTA message is received, a pop up showing the message "RTA MESSAGE RECEIVED." appears. The pop up also shows the sender's MMSI ID, or the sender's name if it is included in the message.

To view past messages, do the following:

1. Press the **MENU/ESC** key to open the menu.
2. Select [MSG], then press the **ENT/ACK** key.
3. Select [ETA/RTA], then press the **ENT/ACK** key.
4. Select [MSG BOX], then press the **ENT/ACK** key. The message box appears.

MSG BOX (ETA/RTA)		
OUTBOX(ETA): 10		INBOX(RTA): 12
TIME [UTC]	FROM 01 / 10	
30 / MAY 17 : 20	BROADCAST	
29 / MAY 16 : 05	BROADCAST	
28 / MAY 16 : 15	ENTERPRISE	
27 / MAY 17 : 20	BROADCAST	
26 / MAY 17 : 20	NEPTUNE	
25 / MAY 17 : 20	BROADCAST	
24 / MAY 17 : 20	NAUTILUS	

: CURSOR
 : FUNC
 : TAB
 : BACK

Indication	Meaning
	This message has been viewed.
	This message is unviewed.
	Broadcast message
	Addressed message

Press ◀ or ▶ to switch between the [OUTBOX(ETA)] and [INBOX(RTA)] tabs.

5. Select the message you wish to view, then press the **ENT/ACK** key. The message options pop up window shown below appears.

FUNCTION
VIEW DETAIL
NEW MSG



INBOX MSG DETAIL (RTA)	
MSG TYPE	◀ RTA
TIME [UTC]	◀ 30 / AUG 18 : 30
FROM	◀ MMSI / Sender's name appears here

DESTINATION	◀ DE TRI 01234 1111 56789
COUNTRY CODE	◀ DE LOCATION CODE
FAIRWAY NO.	◀ 01234 TERMINAL CODE
FAIRWAY HECT	◀ 56789
ETA[UTC]	◀ 12/MAY 12:32
STATUS	◀ LIMITED OPERATION

: MESSAGE
 : BOX
 : BACK

Select [VIEW DETAIL], then press the **ENT/ACK** key to display the received message's contents. The figure above shows an example of a received message.

Select [NEW MSG], then press the **ENT/ACK** key to send a message back to this message's sender.

6. Press ▲ or ▼ to view other messages, press ◀ or ▶ to switch between viewing an [INBOX] message and an [OUTBOX] message.
7. Press the **DISP** key to close the menu.


2.6.4 No. of persons message

A number of persons message informs authorities or ships how many persons (passengers, crew, shipboard personnel) you have on board your ship. Send this message on request or in case of an accident or other event.


1. Press the **MENU/ESC** key to open the menu.
2. Select [MSG] then press the **ENT/ACK** key.
3. Select [NO. OF PERSONS] then press the **ENT/ACK** key.




4. Select [NEW MSG], then press the **ENT/ACK** key.

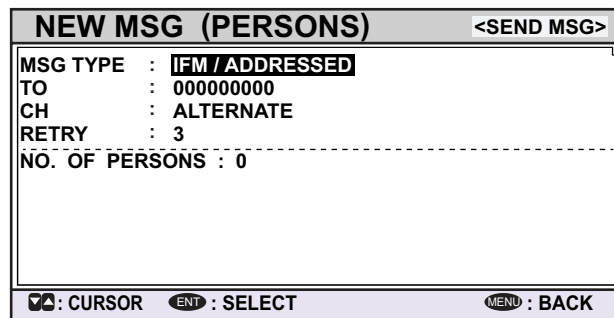

5. [MSG TYPE] is selected; press the **ENT/ACK** key.

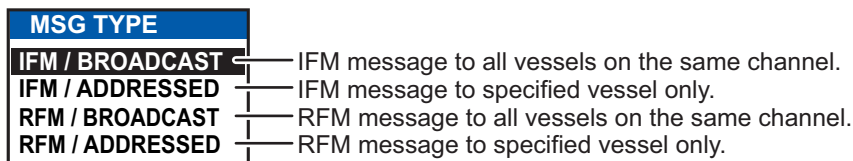

6. Select the appropriate message type, then press the **ENT/ACK** key.
IFM messages require the total number of people on board.
RFM messages require a breakdown of the total people on board (No. of crew, passengers and personnel).
7. Select [CH], then press the **ENT/ACK** key.

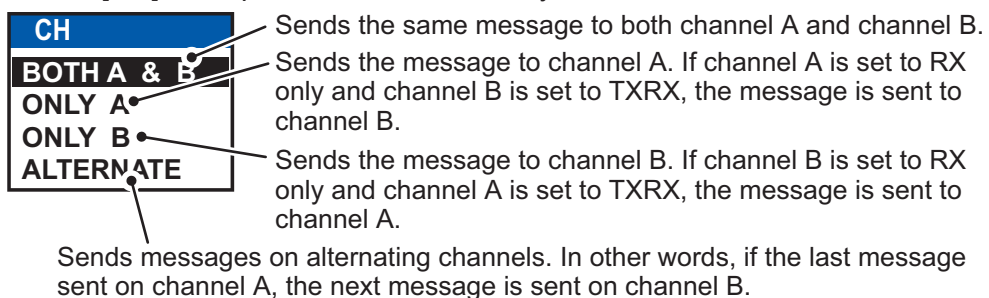

8. Select the channel to use to send the message then press the **ENT/ACK** key.
9. Select [RETRY], then press the **ENT/ACK** key. The retry attempts setting pop up appears.
10. Press ▲ to increase the retry attempts, ▼ to decrease the retry attempts. The maximum setting for retries is 3. Press the **ENT/ACK** key to apply the setting and close the pop up.
11. Select and enter the total number for [NO. OF PERSONS] (IFM message) or [CREW], [PASSENGER] and [PERSONNEL] (RFM message), then press the **ENT/ACK** key.

12. Press ▲ or ▼ to highlight [<SEND MSG>] at the top right of the screen, then press the **ENT/ACK** key. The system will now attempt to send the message.

2.6.5 EMMA warning message

EMMA (European Multiservice Meteorological Awareness) warnings are sent by base stations to skippers to inform them of special meteorological situations. EMMA does not provide continuous weather information, but only warnings of wind, rain, snow and ice, thunderstorm, fog, extreme temperatures (low and high), flood, fire in the forest. These messages are additional to the Notices to Skippers warnings.

The information includes the following:

- Start time of validity
- End time of validity
- Fairway section start and end co-ordinates
- Type of weather warning
- Minimum value
- Maximum value
- Classification of warning
- Wind direction

When you receive an EMMA warning, the "EMMA WARNING RECEIVED" pop up window appears and shows the MMSI or name of the sending agency. To see the contents of the message, do the following:

1. Press the **MENU/ESC** key to open the menu.
2. Select [MSG] then press the **ENT/ACK** key.
3. Select [EMMA WARNING BOX] then press the **ENT/ACK** key.
4. Select a message then press the **ENT/ACK** key.

The EMMA warning message looks something like example below. To view the other messages, press ▲ or ▼.

EMMA WARNING MSG DETAIL	
TIME [UTC] ◀ 30 /SEP 17: 20	} Time and date the message was received.
FROM ◀ 123456789 / NAUTILUS	
TERM [UTC] ◀ 26 /JAN 15: 00 ~ 26 / JAN 18 :00	} Time frame (from date/time to date/time) and area (coordinates) of the warning.
AREA ◀ 34 °25 .0000 'N ~ 34 °35 .0000 'N ◀ 134 °25 .0000 'E ~ 134 °35 .0000 'E	
TYPE ◀ WIND	} Type of weather warning, class of warning and other details of the warning.
VALUE (MIN~MAX) ◀ 36 ~ 50 [km/h]	
CLASS ◀ MEDIUM	
WIND DIRECTION ◀ NORTH EAST	
☑: MESSAGE MENU: BACK	

Item	Description
TYPE	[FIRE IN THE FORESTS], [FOG], [FLOOD], [HIGH TEMPERATURE], [LOW TEMPERATURE], [RAIN], [SNOW AND ICE], [THUNDERSTORM], [WIND] Units of measurement are as follows: <ul style="list-style-type: none"> • km/h (wind) • °C (temperature) • cm/h (snow) • l/m²h (rain) • m (visibility distance in fog)
MIN, MAX VALUE	The minimum and maximum value of respective item over one hour. For example, if the minimum and maximum values for snow and ice are 1 and 4 respectively, this means that 1-4 cm of snow or ice has fallen in one hour. The indication range is -254 to +254, or "- - - -" in case where a value is not reported, for example, fire in the forests and flood.
CLASS	Weather classification: [SLIGHT], [MEDIUM], [STRONG/HEAVY] or "- - - - -" (unknown)

Item	Description
WIND DIRECTION	[NORTH], [NORTH EAST], [EAST], [SOUTH EAST], [SOUTH], [SOUTH WEST], [WEST], [NORTH WEST] or "- - -" (Where no wind data is available.)

5. Press the **MENU/ESC** key to close the message.

2.6.6 Water level message

The water level message is sent by base stations to inform skippers about actual water levels in their area. It is additional short-term information to the water levels distributed via Notices to Skippers. The message contains the country code (location), gauge ID and water level.

When you receive a water level message, a pop up displays "WATER LEVEL MESSAGE RECEIVED."

To see the contents of the message, do the following:

1. Press the **MENU** key to open the menu.
2. Select [MSG] then press the **ENT/ACK** key.
3. Select [WATER LEVEL BOX] then press the **ENT/ACK** key.
4. Select a message then press the **ENT/ACK** key.

WATER LEVEL MSG DETAIL

TIME [UTC]	◀ 30 /SEP 17: 20	Time/date received, sender's details and country code.
FROM	◀ 123456789 / NAUTILUS	
COUNTRY CODE	◀ JP	
	GAUGE ID	WATER LEVEL
National unique gauge ID	0007	4 . 24m
	0015	5 . 33m
	0255	1 . 23m
	2047	- 1 . 22m
	}	} Positive or negative value
☒ : MESSAGE		☒ : BACK

5. Press the **MENU/ESC** key to close the message.

2.7 Viewing Initial Settings

The [INITIAL SET] menu, which is locked with a password to prevent accidental changes to the ship's details, is where the installer enters ship's MMSI, internal and external antenna positions, ship type, I/O port settings and network settings. You can view the settings on this menu as follows.

1. Press the **MENU/ESC** to open the menu.
2. Press the **ENT/ACK** key twice.
3. Select item to view then press the **ENT/ACK** key.

Note: The availability of some functions depends on the equipment specifications of your vessel. Some items are not displayed unless the vessel is equipped accordingly.

Password access is required to change these settings. Contact your local dealer to change the settings if required.

INITIAL SET

1 SHIP'S INFORMATION

2 ANTENNA POSITION

3 ALERT ENABLE

4 I / O PORT

5 PORT PRIORITY

6 NETWORK

7 EDIT : LOCK

The [INITIAL SET] menu is preset at installation and the [EDIT] function requires password access. To change these settings, contact your local dealer.

Displayed as "NET-
WORK (NAVNET)" when
the network type is set to
[NAVNET].

SHIP'S INFORMATION

MMSI ◀ 234567891
 NAME ◀ PERSEPHONE
 IMO NO. ◀ 00000000
 CALL SIGN ◀ @SEVEN@
 ENI ◀ 00100000

[LONG RANGE] SPEED QUALITY ◀ HIGH
 CH C ◀ 0075 COURSE QUALITY ◀ HIGH
 CH D ◀ 0076 HEADING QUALITY ◀ HIGH
 BLUE SIGN SW ◀ USE

MENU : BACK

ANTENNA POSITION

[SHIP SIZE] LENGTH 120dm BEAM 60dm

[ANT POSN] Y X

1 INTERNAL ◀ 60dm 0dm
 2 EXTERNAL ◀ 80dm 15dm

[ANT POSN] ←A, B* ←C, D*

1 INTERNAL ◀ 60, 60 30, 30
 2 EXTERNAL ◀ 40, 80 45, 15

MENU : BACK

ALERT ENABLE

WARNING1 WARNING2

ENABLE: 8 DISABLE: 0 ENABLE: 10 DISABLE: 0

001	014	005	011
002	026	007	025
003	029	008	032
004	030	009	035
			010

001 : TX MALFUNCTION

MENU : BACK

I / O PORT

PORT	MODE	SPEED
COM1	◀ LONG RANGE	38400baud
COM2	◀ EXT DISPLAY	38400baud
COM3	◀ EXT DISPLAY	38400baud
COM4	◀ EXT DISPLAY	38400baud
COM5	◀ EXT DISPLAY	38400baud
COM6	◀ EXT DISPLAY	38400baud
SENSOR1	◀ SENSOR	4800baud
SENSOR2	◀ SENSOR	4800baud
SENSOR3	◀ SENSOR	4800baud

MENU : BACK

PORT PRIORITY

PRIORITY	LL /SOG /COG	HDG	ROT
1st	◀ SENSOR1	SENSOR3	SENSOR3
2nd	◀ SENSOR2	SENSOR1	SENSOR1
3rd	◀ SENSOR3	SENSOR2	SENSOR2
4th	◀ COM4	COM6	COM6
5th	◀ COM5	COM4	COM4
6th	◀ COM6	COM5	COM5
7th	◀ LAN	LAN	LAN

MENU : BACK

NETWORK

IP ADDRESS ◀ 172 . 031 . 024 . 004
 SUBNET MASK ◀ 255 . 255 . 000 . 000
 GATEWAY ◀ 000 . 000 . 000 . 000
 SFI ◀ AI0001

[RX SFI]

LL/SOG/COG ◀ GP0001
 HDG ◀ GP0002
 ROT ◀ GP0002

MENU : BACK

In INLAND mode, the IMO no. is shown as "000000000" and the type of ship is not shown.

4. Press the **DISP** key to close the menu.


2.8 Setting for Time Difference

You can set the time difference from UTC (Coordinated Universal Time) to show the local time.

1. Press the **MENU/ESC** key to open the menu.
2. Select [USER SET] then press the **ENT/ACK** key.

USER SET		
①	KEY BEEP	: ON
②	TIME DIFF	: +00 : 00
③	LANGUAGE	: ENGLISH
④	AUTO SORT	: ON
⑤	SART TEST	: HIDE
⑥	LONG RANGE SET	▶
⑦	NOTIFICATION SET	
⑧	ACTIVATE	

3. Select [TIME DIFF], then press the **ENT/ACK** key. The settings pop up window is displayed.



4. Select the desired time difference then press the **ENT/ACK** key. You can change the value with ▲ or ▼, the digit with ▶ or ◀ The setting range is -14:00 to +14:00.
5. Press the **DISP** key to close the menu.

Note: When a UTC time offset is set, the time display indication for messages and NAV STATUS screen is indicated as "LT" (Local Time). When there is no offset, the time display indication for messages and the NAV STATUS screen is indicated as "UTC" (Coordinated Universal Time).

2.9 How to Select Menu Language

You can select the language for menu window among ENGLISH, FRENCH, DUTCH and GERMAN. The default language is ENGLISH.

1. Press the **MENU/ESC** key to open the menu.
2. Select [USER SET] then press the **ENT/ACK** key.
3. Select [LANGUAGE], then press the **ENT/ACK** key. The settings pop up window is displayed.



4. Select the desired language then press the **ENT/ACK** key.
5. Press the **DISP** key to close the menu.

3. MAINTENANCE, TROUBLE-SHOOTING

 WARNING	
	<p>ELECTRICAL SHOCK HAZARD Do not open the equipment.</p> <p>Only qualified personnel should work inside the equipment.</p>

NOTICE
<p>Do not apply paint, anti-corrosive sealant or contact spray to coating or plastic parts of the equipment.</p> <p>Those items contain organic solvents that can damage coating and plastic parts, especially plastic connectors.</p>

3.1 Maintenance

Regular maintenance is necessary to maintain performance. A monthly maintenance program should be established and should at least include the items listed in the table below.

Item	Check point
Connectors	Check that all connectors on the rear panel of the transponder unit and monitor unit are firmly connected.
Cabling	Check cabling for damage. Replace if damaged.
Ground terminal	Check the ground terminal on the monitor unit and transponder unit for rust. Clean if necessary.
Ground wire	Check that the ground wire on the monitor unit and transponder unit is firmly fastened.
Monitor unit, Transponder unit.	Dirt and dust should be removed from units with a soft, dry cloth. For the LCD, wipe it carefully to prevent scratching, using tissue paper and an LCD cleaner. To remove dirt or salt deposits, use an LCD cleaner, wiping slowly with tissue paper so as to dissolve the dirt or salt. Change paper frequently so the salt or dirt will not scratch the LCD. Do not use solvents such as thinner, acetone or benzene for cleaning any unit; they can remove paint and marks and deform the equipment.

3.2 Replacement of Fuse

The transponder unit contains a 8A fuse which protects the equipment from overvoltage, reverse polarity and equipment fault. If the power cannot be turned on, the fuse may be blown. Contact your local dealer for advice.

Unit	Fuse type	Specification	Code No.
Transponder unit FA-1701	FGMB-S 125V 8A PBF	12 to 24 VDC	000-191-004-10

WARNING

Use the proper fuse.

Use of a wrong fuse can cause fire or result in damage to the equipment.

3.3 Troubleshooting

The troubleshooting table below provides common symptoms of trouble and the means to rectify them. If you cannot restore normal operation, do not attempt to check inside the equipment. Refer any repair work to a qualified technician.

Symptom	Remedy
Power	
Cannot turn on the power.	<ul style="list-style-type: none"> • Check that the power cable between the transponder and monitor units for damage. • Check the power supply.
Transmitting, receiving messages	
Cannot transmit or receiver.	<ul style="list-style-type: none"> • Check that the VHF antenna cable is firmly fastened. • Check the VHF antenna for damage. • For TX messages, try a different TX channel. CLASS A: See section 1.9.1. INLAND: See section 2.6.1.
Can transmit but message is sent to wrong party.	Check that the [MSG TYPE] is set to [ADDRESSED] and the MMSI entered at [TO] is correct. For CLASS-A, see section 1.9.1. For INLAND: See section 2.6.1.
Position data	
No position data.	<ul style="list-style-type: none"> • Check the GPS antenna for damage. • Check the GPS antenna cable and its connectors.


3.4 Diagnostics

The FA-170 provides diagnostic tests to check the monitor unit and transponder unit for proper operation.


3.4.1 Monitor unit test

The monitor unit test shows program no., and checks the ROM, RAM, LCD and controls.

1. Press the **MENU/ESC** key to open the main menu.
2. Select [DIAGNOSTICS] then press the **ENT/ACK** key.

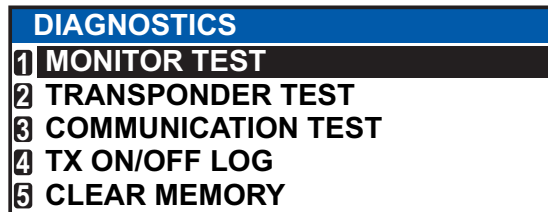

3. [MONITOR TEST] is already selected; press the **ENT/ACK** key.

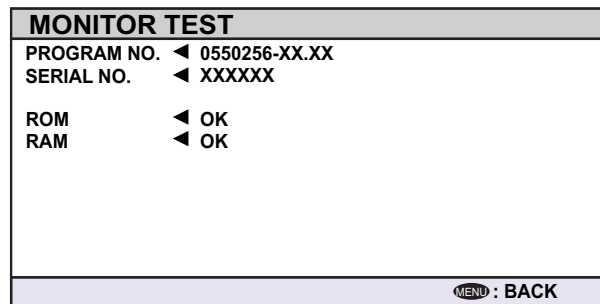

"XX.XX" indicates software version number.


- a) The screen in the test displays the monitor unit's program number and serial number.
- b) The ROM and RAM are checked. The results of the ROM/RAM check are shown as "OK" or "NG" (No Good). If "NG" appears, try the test again. If "NG" still appears, contact your dealer for advice.

3.4.2 Transponder test

The transponder tests two aspects of the transponder: transponder memory and internal GPS receiver.

To run this test, do the following:

1. Press the **MENU/ESC** key to open the main menu.
2. Select [DIAGNOSTICS] then press the **ENT/ACK** key.
3. Select [TRANSPONDER TEST] then press the **ENT/ACK** key.
4. The transponder program number and serial number are displayed and the ROM and RAM are checked. The results of the ROM and RAM check are displayed as "OK" or "NG" (No Good). For any "NG", contact your dealer for advice.

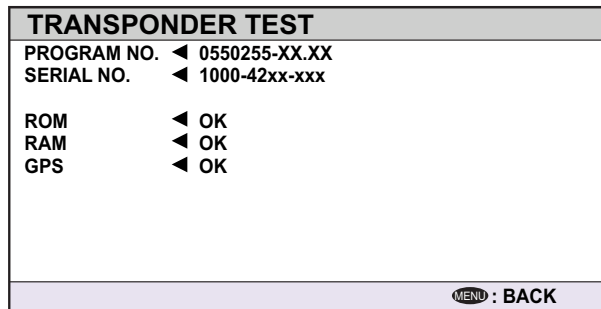

The GPS test results are displayed the format shown below.

OK: Normal

NG: No Good - Appears along with reason for NG.


- ROM ERROR
- RAM ERROR
- MEMORY ERROR
- COM ERROR
- ANTENNA ERROR

5. Press the **MENU/ESC** key to return to the [DIAGNOSTICS] sub-menu.

3.4.3 VHF communication test

The VHF communication test checks for proper transmission and reception over the VHF channel.

1. Press the **MENU/ESC** key to open the main menu.
2. Select [DIAGNOSTICS] then press the **ENT/ACK** key.
3. Select [COMMUNICATION TEST] then press the **ENT/ACK** key.

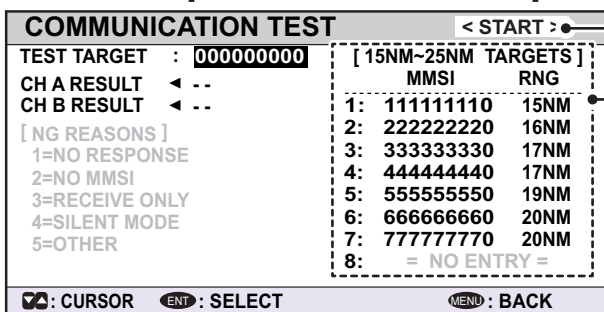

Select [START], then press the **ENT/ACK** key to begin the communications test.

Available test targets list showing the MMSI of each target and range to target.

The FA-170 automatically selects targets with a range of 15 NM to 25 NM for this list with CLASS A type targets listed above other types.


4. Input the required MMSI, referring to the list at the right of the screen. You can also select the test target from the list at the right of the screen using the arrow keys, then press the **ENT/ACK** key.
5. Select [START] then press the **ENT/ACK** key.

When the test is complete, the results are displayed for both channel A and B, along with a reason for test failure where applicable.

"OK": Normal

"NG": No Good. Unable to communicate with specified vessel's (MMSI) channel.

The result "NG" appears with a number explaining the failure. The number and meanings are listed in the table below.

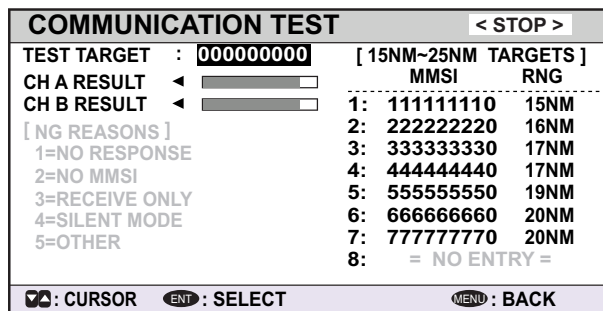

Number	Reason	Measures
1	No response. The message was not acknowledged by the test target.	Change targets, then repeat the test.
2	Own ship MMSI is not set.	Refer to the installation manual for this equipment and input the MMSI.
3	The FA-170 is set to "receive only" and cannot send a test message.	Change the setting for [CH INFO] to [TX/RX AorB] from the [REGION LIST]. See section 1.10.2. Note: The system automatically transmits when the setting is changed to [TX/RX AorB].
4	The FA-170 is in silent mode and cannot send a test message.	Disable silent mode.
5	Less than one minute interval between messages sent.	Wait for more than one minute, then repeat the test.
6	Failed for an unknown reason. (Other than those above.)	There may be an obstacle (land mass, etc.) between your vessel and the test vessel. Manually input a different test target MMSI then repeat the test.

6. Press the **MENU/ESC** key to return to the [DIAGNOSTICS] sub-menu.

3.4.4 TX on/off log

The [TX ON/OFF LOG] shows the date and time at which transmissions were started or stopped. The time and date at which unit was turned off is also displayed.

1. Press the **MENU/ESC** key to open the main menu.
2. Select [DIAGNOSTICS] then press the **ENT/ACK** key.
3. Select [TX ON/OFF LOG] then press the **ENT/ACK** key.

TX ON/OFF LOG		
↑ TX-OFF	TIME [UTC]	REASON
↓ TX-ON		
-- / -- / --	-- : -- : --	EQUIPMENT MALFUNCTION
30/APL/2015	8:35:00	
29/APL/2015	17:20:00	CH MANAGEMENT COMMAND
29/APL/2015	8:35:00	
28/APL/2015	17:20:00	CH MANAGEMENT COMMAND
38/APL/2015	8:35:00	
27/APL/2015	17:20:00	CH MANAGEMENT COMMAND
37/APL/2015	8:35:00	
☛ : CURSOR		ENT : BACK

The reasons which may be displayed are listed in the table below, along with their meaning.

Reason	Meaning
POWER OFF	Transmission disabled due to unit power off.
SILENT MODE	Transmission disabled due to unit operating in SILENT mode.
CH MANAGEMENT COMMAND	Transmission disabled due to CH INFO receive mode.
EQUIPMENT MALFUNCTION	Transmission disabled due to equipment malfunction.
INVALID CONFIGURATION	Transmission disabled due to invalid settings.

4. Press ▲ or ▼ to move the cursor and display other log entries.
The cursor selects two lines, as shown in reverse video in the figure above. The contents of each log entry are:
 - Top line: Date and time at which transmission was turned off and reason transmission was turned off.
Note: If transmission is turned off for more than 15 minutes, one of the reasons listed below is displayed.

Reason	Meaning
"POWER OFF"	Transmission ceased as the power was turned off.
"SILENT MODE"	Transmission ceased due to activation of [SILENT] mode.
"CH MANAGEMENT COMMAND"	Transmission ceased due to current channel settings.
"EQUIPMENT MALFUNCTION"	Transmission ceased due to equipment fault.
"INVALID CONFIGURATION"	Transmission ceased due to invalid settings.

- Bottom line: Date and time at which transmission was turned on.


5. Press the **MENU/ESC** key to return to the [DIAGNOSTICS] sub-menu.

3.5 Alerts

The buzzer sounds for equipment errors and is accompanied by a flashing indication at the bottom of the screen. Press the **ENT/ACK** key to silence the buzzer and acknowledge the alert.


If there are multiple alerts, each alert must be acknowledged individually.

The indication at the bottom of the screen remains until the alert cause is removed or rectified.

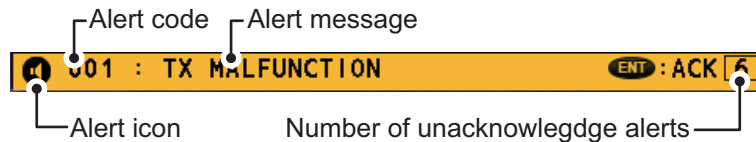

To see which alert(s) has been violated, display the [ALERT] log as shown in the procedure below.

1. Press the **DISP** key to show the [ALERT] log.

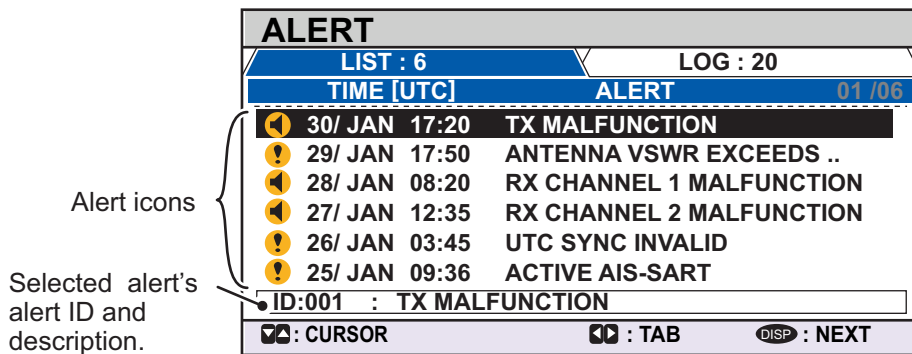

2. Use ▲ or ▼ to select an alert. Each alert is displayed with the date and time at which it was generated. Where there is no date/time data available, the date/time indication appears as “- -/ - - - - : - - - -”.
Select an alert to display the alert ID and brief description in the box at the bottom of the screen, as shown in the example above.
3. Press ◀ or ▶ to change the displayed tab.
The [LIST] tab shows active alerts only, in order from newest to oldest.
The [LOG] tab shows the latest 20 alerts which have been acknowledged and rectified.

Each active alert entry is accompanied by an alert icon, indicating the state of the alert. The alert icons displayed on the FA-170 are listed in the table below with a brief description.

Icon	Priority	Meaning	Icon	Priority	Meaning
	Warning	Active-unacknowledged notification, icon is flashing.*		Warning	Active-responsibility transferred notification, icon is lit steadily.
	Warning	Active-silenced notification, icon is flashing.*		Warning	Active-acknowledged notification, icon is lit steadily.
	Warning	Rectified-unacknowledged notification, icon is flashing.*		Caution	Active, icon is lit steadily.

*: Flashing at 0.5 second intervals.

See "ALERTS, IDS, MEANINGS AND MEASURES" on page AP-7 for a full list of alerts, alert IDs, their meanings and possible countermeasures.

3.6 GPS Monitor

The GPS monitor display shows information about the built-in GPS receiver, including position, speed over ground, course over ground, date, time, mode position accuracy, position-fixing status and RAIM status.

1. Press the **MENU/ESC** key to open the menu.
2. Select [STATUS], then press the **ENT/ACK** key.
3. Select [INTERNAL GPS], then press the **ENT/ACK** key.

INTERNAL GPS	
UTC	◀ 28/NOV/2014 16:26:15
LAT	◀ 34°44.5000'N
LON	◀ 135°21.3000'E
SOG	◀ 110.9kn
COG	◀ 350.0°
MODE	◀ DGPS
STATUS	◀ NO FIX
PA	◀ HIGH
RAIM	◀ UNUSED
MENU : BACK	

Indication	Description	Indication	Description
UTC	Date and time	MODE	Selected GPS mode <ul style="list-style-type: none"> • [GPS]: GPS is used for position fix. • [DGPS]: DGPS is used for position fix. • [NO FIX]: The system is unable to calculate a position fix.
LAT	Latitude of current position	STATUS	GPS status <ul style="list-style-type: none"> • [2D]: Two dimensional GPS fix. • [3D]: Three dimensional GPS fix. • [D2D]: Two dimensional DGPS fix. • [D3D]: Three dimensional DGPS fix. • [DOP]: Dilution of precision fix. • [NO FIX]: The system is unable to calculate a position fix.
LON	Longitude of current position	PA	Position accuracy (HIGH = Less than 10 m, LOW = more than 10 m)
SOG	Speed Over Ground	RAIM	Current RAIM status (USED or UNUSED)
COG	Course Over Ground		

4. Press the **DISP** key to close the display.

3.7 Displaying Sensor Status

The [SENSOR STATUS] screen shows currently connected sensors' status.

1. Press the **MENU/ESC** key.
2. Select [STATUS], then press the **ENT/ACK** key.
3. Select [SENSOR STATUS] then press the **ENT/ACK** key.

SENSOR STATUS	
SENSOR STATUS	01 / 04
01 : No. 1 EXTERNAL DGNSS IN USE	
02 : No. 4 INTERNAL DGNSS IN USE (MESSAGE 17)	
03 : No. 7 INTERNAL SOG / COG IN USE	
04 : No. 10 OTHER ROT SOURCE IN USE	
☒ : CURSOR	MENU : BACK


4. Press the **DISP** key to close the display. The table below lists the possible sensor status messages and their meanings.

Sensor Status Message	Meaning
EXTERNAL DGNSS IN USE	Using external DGNSS
EXTERNAL GNSS IN USE	Using external GNSS
INTERNAL DGNSS IN USE (BEACON)	Using internal DGNSS beacon
INTERNAL DGNSS IN USE (MESSAGE 17)	MSG 17 corrects internal GNSS with differential correction
INTERNAL GNSS IN USE	Using internal GNSS
EXTERNAL SOG/COG IN USE	Using external SOG/COG
INTERNAL SOG/COG IN USE	Using internal SOG/COG
HEADING VALID	Heading data normal
RATE OF TURN INDICATOR IN USE	ROT data normal
OTHER ROT SOURCE IN USE	Value calculated from HDT, or ROT device used and talker is other than TI.
CHANNEL MANAGEMENT PARAMETERS CHANGED	Channel changed (displayed about 30 s)

3.8 How to Restore Default Settings

You may clear all or specific settings to start afresh with default settings. When all data is cleared, the default settings for all items in the [USER SET] menu are restored. Additionally all messages and the alert history are cleared. GPS data is also cleared; however, MMSI and IMO numbers, ship's name and call sign are not cleared.

1. Press the **MENU/ESC** key to open the menu.
2. Select [DIAGNOSTICS] then press the **ENT/ACK** key.
3. Select [CLEAR MEMORY] then press the **ENT/ACK** key.
4. Select [CLEAR ALL], [CLEAR MONITOR SET] or [CLEAR GPS] as appropriate then press the **ENT/ACK** key. A confirmation pop up window appears.

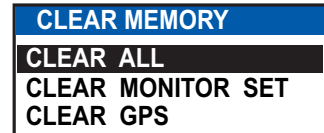

CLEAR ALL	Restores all settings to default, except items in the [INITIAL SET] menu (MMSI No., IMO No., ship's name and call sign, etc.)
CLEAR MONITOR SET	Restore default settings for dimmer, contrast, key beep and notifications.
CLEAR GPS	Clears GPS Almanac to receive latest Almanac.


5. Select [YES] then press the **ENT/ACK** key.
For [CLEAR ALL] and [CLEAR MONITOR SET], a beep sounds then the equipment restarts.

3.9 AIS-SART Test Indication in Target List

The FA-170 can confirm if an AIS-SART station is functioning correctly. This test requires message 1 data or Message 14 data. Note that this setting is deactivated when the power is turned off.

Note: This function tests if an AIS-SART station is functioning correctly. It is not a SART diagnostic tool for FA-170.

1. Press the **MENU/ESC** key to open the menu.
2. Select [USER SET], then press the **ENT/ACK** key.

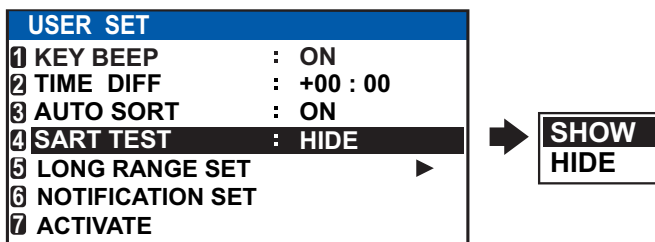

3. Select [SART TEST], then press the **ENT/ACK** key.
4. Select [SHOW], then press the **ENT/ACK** key.
5. Press the **DISP** key to close the menu.
6. Press the **DISP** to show the [TARGET LIST]. If the [DANGEROUS TARGET] is displayed, switch to the [TARGET LIST], referring to step 3 of section 1.8.2.
7. Select [SART] then press the **ENT/ACK** key to show detailed information for the AIS-SART station.
8. Confirm that the [STATUS] field is showing "SART TEST".

APPENDIX 1 MENU TREE

Class-A Menu Tree

Bold Italic : Default

MAIN MENU

- | 1 MSG
- | 2 STATUS
- | 3 USER SET
- | 4 INITIAL SET
- | 5 CH INFO
- | 6 DIAGNOSTICS
- | 7 SERVICE (For service personnel only)

1 MSG

- | NEW MSG
- | MSG BOX
 - | INBOX
 - | OUTBOX

2 STATUS

- | INTERNAL GPS
- | SENSOR STATUS

3 USER SET

- | KEY BEEP (**ON**, OFF)
- | TIME DIFF (-14:00 to +14:00, default: **+00:00**)
- | AUTO SORT (**ON**, OFF)
- | SART TEST (SHOW, **HIDE**)
- | LONG RANGE SET
 - | LR RESPONSE (**AUTO**, MANUAL)
 - | LR BROADCAST (**ON**, OFF)
- | NOTIFICATION SET
 - | ALERT — BUZZER (**ON**, OFF)
 - | RX MESSAGE
 - | ADDRESSED (**POPUP+BUZZER**, POPUP, OFF)
 - | BROADCAST (**POPUP+BUZZER**, POPUP, OFF)
 - | COLLISION DETECT
 - | INDICATION (**POPUP+BUZZER**, POPUP, OFF)
 - | CPA THRESHOLD (0.0 NM to 6.0 NM, **6.0 NM**)
 - | TCPA THRESHOLD (0 min to 60 min, **60 min**)
- | ACTIVATE

4 INITIAL SET

- | SHIP'S INFORMATION
 - | MMSI (000000000 to 999999999, default: -----)
 - | NAME (Maximum 20 characters, default: **BLANK**)
 - | IMO NO. (**000000000** to 1073741823)
 - | CALL SIGN (Maximum 7 characters, default: **BLANK**)
 - | TYPE OF SHIP (**00** to 99)
 - | LONG RANGE
 - | CH C (0075, **1075**, 0076, 1076)
 - | CH D (0075, 1075, 0076, **1076**)
- | ANTENNA POSITION
 - | SHIP SIZE
 - | LENGTH (**0m** to 800m)
 - | BEAM (**0m** to 100m)
 - | ANT POSN*
 - | INTERNAL Y (**0 m**)
 - | INTERNAL X (**0 m**)
 - | EXTERNAL Y (**0 m**)
 - | EXTERNAL X (**0 m**)
- | ALERT ENABLE
 - | WARNING1 (001,002,003,004,014,026,029,030) (**ON**, OFF)
 - | WARNING2 (005,007,008,009,010,011,025,032,035,BAM**) (**ON**, OFF)

*: The setting ranges depend on the length/beam of ship size.

** : Displayed only when connected to BAMS.

Continued on following page.

Continued from previous page.

- I/O PORT
 - COM1
 - └ MODE (**EXT DISPLAY**, LONG RANGE, BEACON, MONITOR, DISABLE)
 - └ SPEED (57600baud, **38400baud**, 4800baud)
 - COM2 (SAME AS COM 1)
 - COM3 (SAME AS COM 1)
 - COM4
 - └ MODE (**EXT DISPLAY**, LONG RANGE, SENSOR, BEACON, MONITOR, DISABLE)
 - └ SPEED (57600baud, **38400baud**, 4800baud)
 - COM5 (SAME AS COM 4)
 - COM6 (SAME AS COM 4)
 - SENSOR1
 - └ MODE (**SENSOR**, DISABLE)
 - └ SPEED (Fixed at 4800baud)
 - SENSOR2 (SAME AS SENSOR 1)
 - SENSOR3 (SAME AS SENSOR 1)
- PORT PRIORITY
 - 1st
 - └ LL/SOG/COG (**SENSOR1**, SENSOR2, SENSOR3, COM4, COM5, COM6, LAN)
 - └ HDG (SENSOR1, SENSOR2, **SENSOR3**, COM4, COM5, COM6, LAN)
 - └ ROT (SENSOR1, SENSOR2, **SENSOR3**, COM4, COM5, COM6, LAN)
 - 2nc
 - └ LL/SOG/COG (SENSOR1, **SENSOR2**, SENSOR3, COM4, COM5, COM6, LAN)
 - └ HDG (**SENSOR1**, SENSOR2, SENSOR3, COM4, COM5, COM6, LAN)
 - └ ROT (**SENSOR1**, SENSOR2, SENSOR3, COM4, COM5, COM6, LAN)
 - 3rd
 - └ LL/SOG/COG (SENSOR1, SENSOR2, **SENSOR3**, COM4, COM5, COM6, LAN)
 - └ HDG (SENSOR1, **SENSOR2**, SENSOR3, COM4, COM5, COM6, LAN)
 - └ ROT (SENSOR1, **SENSOR2**, SENSOR3, COM4, COM5, COM6, LAN)
 - 4th
 - └ LL/SOG/COG (SENSOR1, SENSOR2, SENSOR3, **COM4**, COM5, COM6, LAN)
 - └ HDG (SENSOR1, SENSOR2, SENSOR3, COM4, COM5, **COM6**, LAN)
 - └ ROT (SENSOR1, SENSOR2, SENSOR3, COM4, COM5, **COM6**, LAN)
 - 5th
 - └ LL/SOG/COG (SENSOR1, SENSOR2, SENSOR3, COM4, **COM5**, COM6, LAN)
 - └ HDG (SENSOR1, SENSOR2, SENSOR3, **COM4**, COM5, COM6, LAN)
 - └ ROT (SENSOR1, SENSOR2, SENSOR3, **COM4**, COM5, COM6, LAN)
 - 6th
 - └ LL/SOG/COG (SENSOR1, SENSOR2, SENSOR3, COM4, COM5, **COM6**, LAN)
 - └ HDG (SENSOR1, SENSOR2, SENSOR3, COM4, **COM5**, COM6, LAN)
 - └ ROT (SENSOR1, SENSOR2, SENSOR3, COM4, **COM5**, COM6, LAN)
 - 7th
 - └ LL/SOG/COG (SENSOR1, SENSOR2, SENSOR3, COM4, COM5, COM6, **LAN**)
 - └ HDG (SENSOR1, SENSOR2, SENSOR3, COM4, COM5, COM6, **LAN**)
 - └ ROT (SENSOR1, SENSOR2, SENSOR3, COM4, COM5, COM6, **LAN**)
- NETWORK
 - └ IP ADDRESS (000.000.000.000 to 255.255.255.255, default: **172.031.024.004**)
 - └ SUBNET MASK (000.000.000.000 to 255.255.255.255, default: **255.255.000.000**)
 - └ GATEWAY (**000.000.000.000** to 255.255.255.255)
 - └ OWN SFI (**A10001** to A19999)
 - └ RX SFI
 - └ LL/SOG/COG
 - └ HDG
 - └ ROT
- NETWORK (NAVNET)
 - └ IP ADDRESS (000.000.000.000 to 255.255.255.255, default: **172.031.024.004**)
 - └ SUBNET MASK (000.000.000.000 to 255.255.255.255, default: **255.255.000.000**)
 - └ GATEWAY (**000.000.000.000** to 255.255.255.255)
 - └ NAVNET PORT (**10000** to 30000)
 - └ HOST NAME (**AIS0** to AIS9)
 - └ AIS INFO (**ON**, OFF)
 - └ ZDA INFO (ON, **OFF**)
 - └ GPS INFO (ON, **OFF**)
- EDIT

Continued on following page.

Continued from previous page.

5 CH INFO

└ REGION LIST

- └ AREA (top right corner coordinates) └ LAT; default: --° --.' - (**current coordinates**)
 - └ LON; default: --° --.' - (**current coordinates**)
- └ AREA (bottom left corner coordinates), same as top right coordinates.
- └ ZONE (1 to 8, default: **5**)
- └ CH └ PWR (**HIGH**, LOW)
 - └ CH A (Channel no./TXRX, RX, OFF); default: **2087/TXRX**.
 - └ CH B (Channel no./TXRX, RX, OFF); default: **2088/TXRX**.

6 DIAGNOSTICS

- └ MONITOR TEST
- └ TRANSPONDER TEST
- └ COMMUNICATION TEST
- └ TX ON/OFF LOG
- └ CLEAR MEMORY (**CLEAR ALL**, CLEAR MONITOR SET, CLEAR GPS)

7 SERVICE (Requires password access. For service personnel only)

Inland Menu Tree

Bold Italic : Default

MAIN MENU

- | 1 MSG
- | 2 STATUS
- | 3 USER SET
- | 4 INITIAL SET
- | 5 CH INFO
- | 6 DIAGNOSTICS
- | 7 SERVICE (For service personnel only)

1 MSG

- | TEXT ┌ NEW MSG
 - └ MSG BOX
- | ETA/RTA ┌ NEW MSG*
 - └ MSG BOX
- | NO. OF PERSONS ┌ NEW MSG
 - └ MSG BOX
- | EMMA WARNING BOX
- | WATER LEVEL BOX

*: Not available in SOLAS mode.

2 STATUS

- | INTERNAL GPS
- | SENSOR STATUS

3 USER SET

- | KEY BEEP (**ON**, OFF)
- | TIME DIFF (-14:00 to +14:00), default: **+00:00**
- | LANGUAGE (**ENGLISH**, FRENCH, DUTCH, GERMAN)
- | AUTO SORT (**ON**, OFF)
- | SART TEST (SHOW, **HIDE**)
- | LONG RANGE SET ┌ LR RESPONSE (**AUTO**, MANUAL)
 - └ LR BROADCAST (**ON**, OFF)
- | NOTIFICATION SET
 - | ALERT — BUZZER (**ON**, OFF)
 - | RX MESSAGE ┌ ADDRESSED (**POPUP+BUZZER**, POPUP, OFF)
 - └ BROADCAST (**POPUP+BUZZER**, POPUP, OFF)
 - | COLLISION DETECT ┌ INDICATION (**POPUP+BUZZER**, POPUP, OFF)
 - ┌ CPA THRESHOLD (0.0 NM to 6.0 NM, **6.0 NM**)
 - └ TCPA THRESHOLD (0 min to 60 min, **60 min**)
- | ACTIVATE

4 INITIAL SET

- | SHIP'S INFORMATION
 - | MMSI (000000000, 200000000 to 799999999 or 982000000 to 987999999, default: -----)
 - | NAME (Maximum 20 characters, default: **BLANK**)
 - | IMO NO. (Fixed at **000000000**)
 - | CALL SIGN (Maximum 7 characters, default: **BLANK**)
 - | ENI (Maximum 8 characters, default: **BLANK**)
 - | TYPE OF SHIP* (**00** to 99) *: Displayed only for SOLAS mode of AIS.
 - | LONG RANGE ┌ CH C (0075, **1075**, 0076, 1076)
 - └ CH D (0075, 1075, 0076, **1076**)
 - | SPEED QUALITY (HIGH, **LOW**)
 - | COURSE QUALITY (HIGH, **LOW**)
 - | HEADING QUALITY (HIGH, **LOW**)
 - | BLUE SIGN (**USE**, UNUSE)

Continued on following page.

Continued from previous page.

- └ ANTENNA POSITION
 - └ SHIP SIZE
 - └ LENGTH (**0dm** to 8000dm)
 - └ BEAM (**0dm** to 1000dm)
 - └ ANT POSN***
 - └ INTERNAL Y (**0dm**)
 - └ INTERNAL X (**0dm**)
 - └ EXTERNAL Y (**0dm**)
 - └ EXTERNAL X (**0dm**)
- ***: The setting ranges depend on the length/beam of ship size.
- └ ALERT ENABLE
 - └ WARNING1 (001,002,003,004,014,026,029,030)*
 - └ (501,502,503,504,514,526,529,530)**
 - └ WARNING2 (005,007,008,009,010,011,025,032,035)*
 - └ (505,507,508,509,510,511,525,532,535,BAM)**
- *: Displayed for alert modes other than ALERT IF2.
- **: Displayed only for ALERT IF2 alert
- └ I/O PORT
 - └ COM1
 - └ MODE (**EXT DISPLAY**, LONG RANGE, BEACON, MONITOR, DISABLE)
 - └ SPEED (57600baud, **38400baud**, 4800baud)
 - └ COM2 (SAME AS COM 1)
 - └ COM3 (SAME AS COM 1)
 - └ COM4
 - └ MODE (**EXT DISPLAY**, LONG RANGE, SENSOR, BEACON, MONITOR, DISABLE)
 - └ SPEED (57600baud, **38400baud**, 4800baud)
 - └ COM5 (SAME AS COM 4)
 - └ COM6 (SAME AS COM 4)
 - └ SENSOR1
 - └ MODE (**SENSOR**, DISABLE)
 - └ SPEED (Fixed at 4800baud)
 - └ SENSOR2 (SAME AS SENSOR 1)
 - └ SENSOR3 (SAME AS SENSOR 1)
 - └ PORT PRIORITY
 - └ 1st
 - └ LL/SOG/COG (**SENSOR1**, SENSOR2, SENSOR3, COM4, COM5, COM6, LAN)
 - └ HDG (SENSOR1, SENSOR2, **SENSOR3**, COM4, COM5, COM6, LAN)
 - └ ROT (SENSOR1, SENSOR2, **SENSOR3**, COM4, COM5, COM6, LAN)
 - └ 2nc
 - └ LL/SOG/COG (SENSOR1, **SENSOR2**, SENSOR3, COM4, COM5, COM6, LAN)
 - └ HDG (**SENSOR1**, SENSOR2, SENSOR3, COM4, COM5, COM6, LAN)
 - └ ROT (**SENSOR1**, SENSOR2, SENSOR3, COM4, COM5, COM6, LAN)
 - └ 3rd
 - └ LL/SOG/COG (SENSOR1, SENSOR2, **SENSOR3**, COM4, COM5, COM6, LAN)
 - └ HDG (SENSOR1, **SENSOR2**, SENSOR3, COM4, COM5, COM6, LAN)
 - └ ROT (SENSOR1, **SENSOR2**, SENSOR3, COM4, COM5, COM6, LAN)
 - └ 4th
 - └ LL/SOG/COG (SENSOR1, SENSOR2, SENSOR3, **COM4**, COM5, COM6, LAN)
 - └ HDG (SENSOR1, SENSOR2, SENSOR3, COM4, COM5, **COM6**, LAN)
 - └ ROT (SENSOR1, SENSOR2, SENSOR3, COM4, COM5, **COM6**, LAN)
 - └ 5th
 - └ LL/SOG/COG (SENSOR1, SENSOR2, SENSOR3, COM4, **COM5**, COM6, LAN)
 - └ HDG (SENSOR1, SENSOR2, SENSOR3, **COM4**, COM5, COM6, LAN)
 - └ ROT (SENSOR1, SENSOR2, SENSOR3, **COM4**, COM5, COM6, LAN)
 - └ 6th
 - └ LL/SOG/COG (SENSOR1, SENSOR2, SENSOR3, COM4, COM5, **COM6**, LAN)
 - └ HDG (SENSOR1, SENSOR2, SENSOR3, COM4, **COM5**, COM6, LAN)
 - └ ROT (SENSOR1, SENSOR2, SENSOR3, COM4, **COM5**, COM6, LAN)
 - └ 7th
 - └ LL/SOG/COG (SENSOR1, SENSOR2, SENSOR3, COM4, COM5, COM6, **LAN**)
 - └ HDG (SENSOR1, SENSOR2, SENSOR3, COM4, COM5, COM6, **LAN**)
 - └ ROT (SENSOR1, SENSOR2, SENSOR3, COM4, COM5, COM6, **LAN**)
 - └ NETWORK
 - └ IP ADDRESS (000.000.000.000 to 255.255.255.255, default: **172.031.024.004**)
 - └ SUBNET MASK (000.000.000.000 to 255.255.255.255, default: **255.255.000.000**)
 - └ GATEWAY (**000.000.000.000** to 255.255.255.255)
 - └ OWN SFI (AI0001 to AI9999)
 - └ RX SFI
 - └ LL/SOG/COG
 - └ HDG
 - └ ROT

Continued on following page

APPENDIX 1 MENU TREE

Continued from previous page

- | NETWORK (NAVNET)
 - | IP ADDRESS (000.000.000.000 to 255.255.255.255, default: **172.031.024.004**)
 - | SUBNET MASK (000.000.000.000 to 255.255.255.255, default: **255.255.000.000**)
 - | GATEWAY (**000.000.000.000** to 255.255.255.255)
 - | NAVNET PORT (**10000** to 30000)
 - | HOST NAME (**AIS0** to AIS9)
 - | AIS INFO (**ON**, OFF)
 - | ZDA INFO (ON, **OFF**)
 - | GPS INFO (ON, **OFF**)
- | EDIT

5 CH INFO

- | REGION LIST
 - | AREA (top right corner coordinates) └ LAT; default: --° --.' - (**current coordinates**)
 - | LON; default: --° --.' - (**current coordinates**)
 - | AREA (bottom left corner coordinates), same as top right coordinates.
 - | ZONE (1 to 8, default: **5**)
 - | CH └ PWR (**HIGH**, LOW)
 - | CH A (Channel no./TXRX, RX, OFF); default: **2087/TXRX**.
 - | CH B (Channel no./TXRX, RX, OFF); default: **2088/TXRX**.

6 DIAGNOSTICS

- | MONITOR TEST
- | TRANSPONDER TEST
- | COMMUNICATION TEST
- | TX ON/OFF LOG
- | CLEAR MEMORY (**CLEAR ALL**, CLEAR MONITOR SET, CLEAR GPS)

7 SERVICE (Requires password access. For service personnel only)

APPENDIX 2 ALERTS, IDS, MEANINGS AND MEASURES

The FA-170 displays alerts at the bottom of the screen, as they occur. You can see all alerts, current and past, from the [ALERT LIST] screen. The ID for each alert is different, depending on whether there is a BAM (Bridge Alert Management) system or an AMS (Alert Management System) connected.

The table on the following page shows the alert ID, displayed message, meaning and measures for each alert.

Note 1: Detection of RX malfunction







- 1) **Detection of TDMA RX malfunction**
Frequency error
 PLL chip on TRX-PWR board generates lock or unlock signal for synthesizer. MPU watches and sets status flag which reflects data of ALR sentence. ID 003 for RX1, ID 004 for RX2
- 2) **Detection of DSC RX malfunction**
General error
 A DSC error will occur when the FA-170 cannot detect a correct signal strength from the DSC receive circuit 120 seconds.

Note 2: Detection of TX malfunction

MPU detects TX malfunction (ID:001) in the following cases:

- 1) The signal indicated "LOCK" is not received from the PLL chip on the TRX-PWR board.
- 2) The voltage of monitoring signal on the TRX-PWR board is abnormal. The reason for TRX-PWR board malfunction can be a hardware problem or software problem causing a continuous transmission that exceeds 250 msec.
Note: The hardware stops automatically because of the continuous transmission.
- 3) Invalid MMSI
- 4) An excessively high VSWR (Voltage Standing Wave Ratio) for the AIS antenna detected.

Each active alert entry is accompanied by an alert icon, indicating the state of the alert. The alert icons displayed on the FA-170 are listed in the table below with a brief description.

Icon	Priority	Meaning	Icon	Priority	Meaning
	Warning	Active-unacknowledged notification, icon is flashing.*		Warning	Active-responsibility transferred notification, icon is lit steadily.
	Warning	Active-silenced notification, icon is flashing.*		Warning	Active-acknowledged notification, icon is lit steadily.
	Warning	Rectified-unacknowledged notification, icon is flashing.*		Caution	Active, icon is lit steadily.

*: Flashing at 0.5 second intervals.

APPENDIX 2 ALERTS, IDS, MEANINGS AND MEASURES

Alert ID (BAM ID)	Displayed message	Priority	Meaning	Measures
001 (501)	TX MALFUNCTION	Warning	Transmission stopped due to a failure.	Check antenna and FA-170 connections. Check that the own ship MMSI is set. Consult your dealer if the problem is not rectified.
002 (502)	LEGACY/ALERT IF1: ANTENNA VSWR EXCEEDS LIMIT ALERT IF2: ANTENNA MALFUNCTION	Warning	High VSWR for the AIS antenna detected.	Check the antenna. Consult your dealer if the problem is not rectified.
003 (503)	RX CHANNEL 1 MALFUNCTION	Warning	RX1 failure.	Circuit board may be damaged. Contact your dealer.
004 (504)	RX CHANNEL 2 MALFUNCTION	Warning	RX2 failure.	
005 (505) *1	RX CHANNEL 70 MALFUNCTION	Caution	Failed to receive DSC message.	
007 (507) *1	UTC SYNC INVALID	Caution	No synchronization with UTC.	Internal GPS has no fix. Check weather and surroundings for obstacles. If the error appears frequently, contact your dealer.
008 (508) *1	MKD CONNECTION LOST	Caution	Communication failure between the transponder and the monitor unit.	Check connection between units. Consult your dealer if the problem is not rectified.
009 (509) *1	INT/EXT GNSS POSITION MISMATCH	Caution	Mismatch of position data between internal GNSS and external GNSS. After taking into account the antenna position, there is a difference of over 100 m.	Check calibration and location setting for both GPS antennas.
010 (510) *1	NAV STATUS INCORRECT	Caution	Mismatch between ship's speed and [NAVSTATUS] information.	Check [NAV STATUS] menu settings. Adjust settings appropriately.
011 (511)*1	LEGACY/ALERT IF1: HEADING SENSOR OFFSET ALERT IF2: MISMATCH BETWEEN HDG AND COG	Caution	Mismatch between COG and HDT. There is a difference of over 45° for more than five minutes at a speed of over five knots.	Check connection to sensor.
014 (514)	ACTIVE AIS-SART	Warning	AIS-SART message received.	Check the message.
025 (525)*1	EXTERNAL EPFS LOST	Caution	Signal from external navigational aids lost or interrupted.	Check connection to EPFS devices.

Alert ID (BAM ID)	Displayed message	Priority	Meaning	Measures
026 (526)	NO POSITION SENSOR IN USE	Warning	No position data available.	Check connection to sensor.
029 (529)	NO VALID SOG INFORMATION	Warning	SOG information is invalid.	
030 (530)	NO VALID COG INFORMATION	Warning	COG information is invalid.	
032 (532) *1	HEADING LOST / INVALID	Caution	HDG information is lost or invalid.	
035 (535) *1	NO VALID ROT INFORMATION	Caution	No ROT information available.	
600950*1	BAM COM ERROR	Caution	Communication failure between the BAMS and the transponder unit.	Check connection between unit and BAM.

Note 1: The Alert IDs listed in parentheses are output when the FA-170 is connected to a BAM (Bridge Alert Management) system.

Note 2: Alert ID 600950 is only output when a BAM (Bridge Alert Management) is connected and is given “Caution” priority level.

Note 3: Where the [ALERT MODE] is set to [Legacy Ed.1/Ed.2], alert priority level for all alerts is fixed at “Warning”.

Note 4: Where the [ALERT MODE] is set to [ALERT IF1] or [ALERT IF2] the alerts shown with “*1” in the table above are assigned “Caution” priority level.

APPENDIX 3 PARTS LIST/LOCATION

Parts List


This equipment contains complex modules in which fault diagnosis and repair down to component level are not practical (IMO A.694(17)/8.3.1). Only some discrete components are used. FURUNO Electric Co., Ltd. believes identifying these components is of no value for shipboard maintenance; therefore, they are not listed in the manual. Major modules can be located on the parts location photo on the following pages.

FURUNO ELECTRICAL PARTS LIST	Model	FA-170	
	Unit	MONITOR UNIT, TRANSPONDER UNIT	
	Blk.No.		
TYPE, NAME	LOCATION		
PRINTED CIRCUIT BOARD			
20P8200D, MAIN	MONITOR UNIT FA-1702		
05P0894, C-IF	MONITOR UNIT FA-1702		
05P0893, TRX-PWR	TRANSPONDER UNIT FA-1701		
05P0891, T-IF	TRANSPONDER UNIT FA-1701		
20P8211, GPS	TRANSPONDER UNIT FA-1701		
05P0892, R-MOD	TRANSPONDER UNIT FA-1701		


Parts Location

Monitor Unit

Remove the C-IF board, then remove the grounding plate to expose the main board.

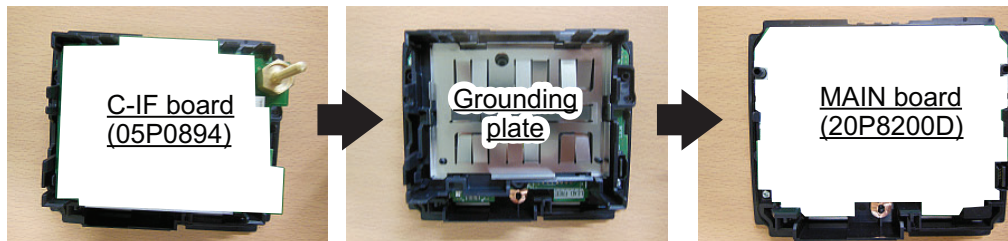

Transponder unit

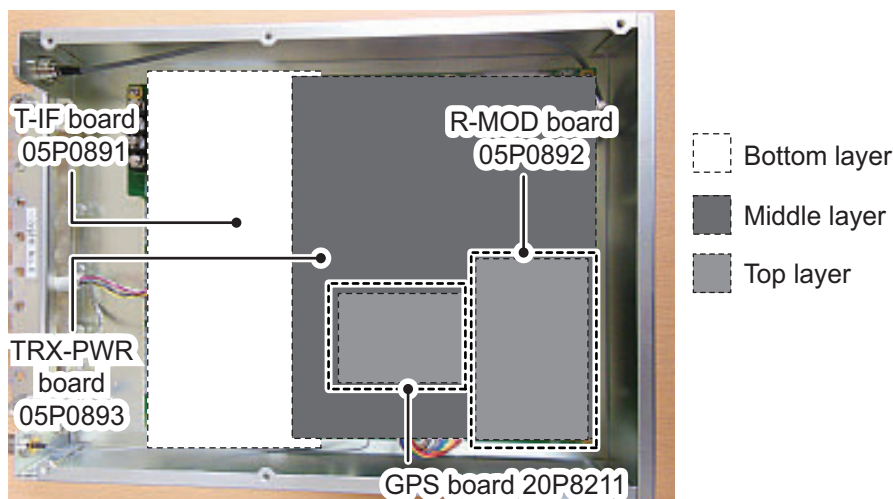

APPENDIX 4 CHANNEL LISTS AND ERI CODES

International mode VHF channel list

Ch No.	Freq.	Ch No.	Freq.	Ch No.	Freq.	Ch No.	Freq.
1001	156.05	1065	156.275	1088	157.425	2024	161.8
1002	156.1	1066	156.325	2001	160.65	2025	161.85
1003	156.15	67	156.375	2002	160.7	2026	161.9
1004	156.2	68	156.425	2003	160.75	2027	161.95
1005	156.25	69	156.475	2004	160.8	2028	162
6	156.3	70	156.525	2005	160.85	2060	160.625
1007	156.35	71	156.575	2007	160.95	2061	160.675
1018	156.9	72	156.625	8	156.4	2062	160.725
1019	156.95	73	156.675	9	156.45	2063	160.775
1020	157	74	156.725	10	156.5	2064	160.825
1021	157.05	75	156.775	11	156.55	2065	160.875
1022	157.1	76	156.825	12	156.6	2066	160.925
1023	157.15	77	156.875	13	156.65	2078	161.525
1024	157.2	1078	156.925	14	156.7	2079	161.575
1025	157.25	1079	156.975	15	156.75	2080	161.625
1026	157.3	1080	157.025	16	156.8	2081	161.675
1027	157.35	1081	157.075	17	156.85	2082	161.725
1028	157.4	1082	157.125	2018	161.5	2083	161.775
1060	156.025	1083	157.175	2019	161.55	2084	161.825
1061	156.075	1084	157.225	2020	161.6	2085	161.875
1062	156.125	1085	157.275	2021	161.65	2086	161.925
1063	156.175	1086	157.325	2022	161.7	2087	161.975
1064	156.225	1087	157.375	2023	161.75	2088	162.025

USA mode VHF channel list

Ch No.	Freq.	Ch No.	Freq.	Ch No.	Freq.	Ch No.	Freq.
1001	156.05	1065	156.275	1088	157.425	2024	161.8
		1066	156.325	2001	160.65	2025	161.85
1003	156.15	67	156.375	2002	160.7	2026	161.9
		68	156.425	2003	160.75	2027	161.95
1005	156.25	69	156.475	2004	160.8	2028	162
6	156.3	70	156.525	2005	160.85	2060	160.625
1007	156.35	71	156.575	2007	160.95	2061	160.675
1018	156.9	72	156.625	8	156.4	2062	160.725
1019	156.95	73	156.675	9	156.45	2063	160.775
1020	157	74	156.725	10	156.5	2064	160.825
1021	157.05	75	156.775	11	156.55	2065	160.875
1022	157.1	76	156.825	12	156.6	2066	160.925
1023	157.15	77	156.875	13	156.65	2078	161.525
1024	157.2	1078	156.925	14	156.7	2079	161.575
1025	157.25	1079	156.975	15	156.75	2080	161.625
1026	157.3	1080	157.025	16	156.8	2081	161.675
1027	157.35	1081	157.075	17	156.85	2082	161.725
1028	157.4	1082	157.125	2018	161.5	2083	161.775
		1083	157.175	2019	161.55	2084	161.825
1061	156.075	1084	157.225	2020	161.6	2085	161.875
		1085	157.275	2021	161.65	2086	161.925
1063	156.175	1086	157.325	2022	161.7	2087	161.975
1064	156.225	1087	157.375	2023	161.75	2088	162.025

Note: 1 W power on CH13 and CH67.

ERI Codes

Full code	U	ERI code Ship name (EN)	AIS code	
			First digit	Second digit
8000	No	VESSEL, TYPE UNKNOWN	9	9
8010	V	MOTOR FREIGHTER	7	9
8020	V	MOTOR TANKER	8	9
8021	V	MOTOR TANKER, LIQUID CARGO, TYPE N	8	0
8022	V	MOTOR TANKER, LIQUID CARGO, TYPE C	8	0
8023	V	MOTOR TANKER, DRY CARGO AS IF LIQUID (E.G. CEMENT)	8	9
8030	V	CONTAINER VESSEL	7	9
8040	V	GAS TANKER	8	0
8050	C	MOTOR FREIGHTER, TUG	7	9
8060	C	MOTOR TANKER, TUG	8	9
8070	C	MOTOR FREIGHTER WITH ONE OR MORE SHIPS ALONGSIDE	7	9
8080	C	MOTOR FREIGHTER WITH TANKER	8	9
8090	C	MOTOR FREIGHTER PUSHING ONE OR MORE FREIGHTERS	7	9
8100	C	MOTOR FREIGHTER PUSHING AT LEAST ONE TANK-SHIP	8	9
8110	No	TUG, FREIGHTER	7	9
8120	No	TUG, TANKER	8	9
8130	C	TUG, FREIGHTER, COUPLED	3	1
8140	C	TUG, FREIGHTER/TANKER, COUPLED	3	1
8150	V	FREIGHTBARGE	9	9
8160	V	TANKBARGE	9	9
8161	V	TANKBARGE, LIQUID CARGO, TYPE N	9	0
8162	V	TANKBARGE, LIQUID CARGO, TYPE C	9	0
8163	V	TANKBARGE, DRY CARGO AS IF LIQUID (E.G. CEMENT)	9	9
8170	V	FREIGHTBARGE WITH CONTAINERS	8	9
8180	V	TANKBARGE, GAS	9	0
8210	C	PUSHTOW, ONE CARGO BARGE	7	9
8220	C	PUSHTOW, TWO CARGO BARGES	7	9
8230	C	PUSHTOW, THREE CARGO BARGES	7	9
8240	C	PUSHTOW, FOUR CARGO BARGES	7	9
8250	C	PUSHTOW, FIVE CARGO BARGES	7	9
8260	C	PUSHTOW, SIX CARGO BARGES	7	9
8270	C	PUSHTOW, SEVEN CARGO BARGES	7	9
8280	C	PUSHTOW, EIGHT CARGO BARGES	7	9
8290	C	PUSHTOW, NINE CARGO BARGES	7	9
8310	C	PUSHTOW, ONE TANK/GAS BARGE	8	0
8320	C	PUSHTOW, 2 BARGES AT LEAST ONE TANKER/GAS BARGE	8	0
8330	C	PUSHTOW, 3 BARGES AT LEAST ONE TANKER/GAS BARGE	8	0
8340	C	PUSHTOW, 4 BARGES AT LEAST ONE TANKER/GAS BARGE	8	0
8350	C	PUSHTOW, 5 BARGES AT LEAST ONE TANKER/GAS BARGE	8	0
8360	C	PUSHTOW, 6 BARGES AT LEAST ONE TANKER/GAS BARGE	8	0
8370	C	PUSHTOW, 7 BARGES AT LEAST ONE TANKER/GAS BARGE	8	0
8380	C	PUSHTOW, 8 BARGES AT LEAST ONE TANKER/GAS BARGE	8	0
8390	C	PUSHTOW, 9 OR MORE BARGES AT LEAST ONE TANKER/GAS BARGE	8	0
8400	V	TUG, SINGLE	5	2
8410	No	TUG, ONE OR MORE TOWS	3	1
8420	C	TUG, ASSISTING A VESSEL OR LINKED COMBINATION	3	1
8430	V	PUSHBOAT, SINGLE	9	9
8440	V	PASSENGER SHIP, FERRY, CRUISE SHIP, RED CROSS SHIP	6	9
8441	V	FERRY	6	9
8442	V	RED CROSS SHIP	5	8
8443	V	CRUISE SHIP	6	9
8444	V	PASSENGER SHIP WITHOUT ACCOMMODATION	6	9
8450	V	SERVICE VESSEL, POLICE PATROL, PORT SERVICE	9	9
8460	V	VESSEL, WORK MAINTENANCE CRAFT, FLOATING DERRICK, CABLE SHIP, BUOY SHIP, DREDGE	3	3
8470	C	OBJECT, TOWED, NOT OTHERWISE SPECIFIED	9	9
8480	V	FISHING BOAT	3	0
8490	V	BUNKERSHIP	9	9
8500	V	BARGE, TANKER, CHEMICAL	8	0
8510	C	OBJECT, NOT OTHERWISE SPECIFIED	9	9
1500	V	GENERAL CARGO VESSEL MARITIME	7	9
1510	V	UNIT CARRIER MARITIME	7	9
1520	V	BULK CARRIER MARITIME	7	9
1530	V	TANKER	8	0
1540	V	LIQUIFIED GAS TANKER	8	0
1850	V	PLEASURE CRAFT, LONGER THAN 20 METRES	3	7
1900	V	FAST SHIP	4	9
1910	V	HYDROFOIL	4	9

Note: ERI codes 8070, 8440 and 8460 are displayed in abbreviated format.

APPENDIX 5 ABBREVIATIONS, UNITS AND SYMBOLS

Numerical abbreviations

Abbreviation	Meaning	Abbreviation	Meaning
2D	Two Dimensional Positioning	3rd	Third
3D	Three Dimensional Positioning	4th	Fourth
1st	First	5th	Fifth
2nd	Second	6th	Sixth

A:

Abbreviation	Meaning	Abbreviation	Meaning
ACK	Acknowledge	ANT	Antenna
AGE	Time elapsed from acquisition.	APR	April
AIS	Automatic Identification System	AtoN	Aids to Navigation
ALARM	Alarm	AUG	August
ALT	Altitude	AUTO	Automatic

B:

Abbreviation	Meaning	Abbreviation	Meaning
BAM	Bridge Alert Management	BRG	Bearing
BASE	Base Station	BRILL	Brilliance
baud	Baud rate	BS	Beam of ship, Back Space, Base Station
BC	Beam of convoy		

C:

Abbreviation	Meaning	Abbreviation	Meaning
CH	Channel	CONT	Contrast
COG	Course Over the Ground	CPA	Closest Point of Approach
COM, COMM	Communication	CPU	Central Processing Unit

D:

Abbreviation	Meaning	Abbreviation	Meaning
D2D	Differential and 2D	DGNSS	Differential GNSS
D3D	Differential and 3D	DGPS	Differential GPS
DATE	Date	DIFF	Difference
DAY	Day	DISP	Display
DEC	December	DNGR	Danger
DEL	Delete	DOP	Dilution Of Precision
DEST	Destination	DPTH	Depth
DG	Dangerous Goods	DSC	Digital Selective Calling

APPENDIX 5 ABBREVIATIONS, UNITS AND SYMBOLS

E:

Abbreviation	Meaning	Abbreviation	Meaning
E	East	ENI	Unique European Vessel Identification Number
EA	Extension A	ENT	Enter
EB	Extension B	EPIRB	Emergency Position Indicating Radio Beacon
EC	Extension C	EPFS	Electronic Position Fixing System
ECDIS	Electronic Chart Display Information System	ERI	Electronic Reporting International (ship type) code
EMMA	European Multiservice Meteorological Awareness system	ESC	Escape
		ETA	Estimated Time of Arrival
		EXT	External

F:

Abbreviation	Meaning	Abbreviation	Meaning
FEB	February	FL	Flood
FI	Fire in the forests	FO	Fog
FIX	Fix	FUNC	FUNCTION

G:

Abbreviation	Meaning	Abbreviation	Meaning
GNSS	Global Navigation Satellite System	GPS	Global Positioning System

H:

Abbreviation	Meaning	Abbreviation	Meaning
H	Height	HI	High
HDG	Heading	HS	Harmful Substances (applies to AIS)
HDT	Data sentence (Heading-true)		
HECT	Hectometer	HSC	High Speed Craft

I:

Abbreviation	Meaning	Abbreviation	Meaning
ID	Identification	INFO	Information
IEC	International Electrotechnical Commission	INT	Internal
IF	Interface	I/O	Input/Output
IFM	International Function Message	IP	Internet Protocol (Address)
IMO	International Maritime Organization	ISO	International Standards Organization

J:

Abbreviation	Meaning	Abbreviation	Meaning
JAN	January	JUN	June
JUL	July		

L:

Abbreviation	Meaning	Abbreviation	Meaning
L	Low, left	LO	Low
LAN	Local Area Network	LOG	Log
LAT	Latitude	LON	Longitude
LC	Length of convoy	LR	Long Range
LCD	Liquid Crystal Display	LS	Length of ship
L/L	Latitude/Longitude	LT	Local Time
LL	Latitude/Longitude		

M:

Abbreviation	Meaning	Abbreviation	Meaning
MAR	March	MMSI	Maritime Mobile Services Identity number
MAX	Maximum	MP	Maritime Pollutant (applies to AIS)
MAY	May	MPU	Micro processing Unit
MENU	Menu	MSG	Message
MIN	Minimum	MOB	Man Overboard
MKD	Minimum Keyboard Display		

N:

Abbreviation	Meaning	Abbreviation	Meaning
N	North	NIGHT	Night
NAME	Name	NG	No Good
NAV	Navigation	NO.	Number
NAV STATUS	Navigational status	NOV	November
NE	Northeast	NW	Northwest

O:

Abbreviation	Meaning	Abbreviation	Meaning
OCT	October	ON	On
OFF	Off	OS	Other Substances, Own Ship
OK	O.K.		

P:

Abbreviation	Meaning	Abbreviation	Meaning
PA	Position Accuracy	PORT	Port
PI	Position Indicator	POSN	Position
PLL	Phase Locked Loop	PWR	Power

APPENDIX 5 ABBREVIATIONS, UNITS AND SYMBOLS

R:

Abbreviation	Meaning	Abbreviation	Meaning
RA	Rain	ROM	Read Only Memory
RAIM	Receiver Autonomous Integrity Monitoring	ROM(M)	ROM (Monitor Unit)
RAIN	Rain	ROM(T)	ROM (Transponder Unit)
RAM	Random Access Memory	ROT	Rate Of Turn
RAM(M)	RAM (Monitor Unit)	RSSI	Received Signal Strength Indication
RAM(T)	RAM (Transponder Unit)	RTA	Requested Time of Arrival
RFM	Regional Function Message	RX	Receive
RNG	Range		

S:

Abbreviation	Meaning	Abbreviation	Meaning
S	South	SFI	System Function ID
SAR	Search And Rescue	SIM	Simulation
SART	Search And Rescue Transponder	SN	Snow and Ice
SART ACT.	SART active	SOG	Speed Over the Ground
SE	Southeast	SOLAS	Safety Of Life At Sea
SEP	September	STW	Speed Through the Water
SET	Set (i.e., set and drift, or setting a value)	SW	Southwest, Switch
		SYNC	Synchronization

T:

Abbreviation	Meaning	Abbreviation	Meaning
TCPA	Time to Closest Point of Approach	TOW	Vessel engaged in towing operations
TEST	Test	TRANS	Transition
TH	Thunderstorm	TRX	Transceiver
TI	Turn rate Indicator	TX	Transmit
TIME	Time		

U:

Abbreviation	Meaning	Abbreviation	Meaning
UN/LOADED	LOADED or UNLOADED	UTC	Universal Coordinated Time

V:

Abbreviation	Meaning	Abbreviation	Meaning
VHF	Very High Frequency	VSWR	Voltage Standing Wave Ratio










W:

Abbreviation	Meaning	Abbreviation	Meaning
W	West, Wide	WI	Wind
WARNING	Warning	WIG	Wing In Ground

Units

Abbreviation	Unit	Abbreviation	Unit
°	degree(s)	kn	knot(s)
°C	degree(s)	kpbs	kilo bit per second
bps	bit per second	l/m ² h	liter per square meter hour
cm	centimeter	m	meter
cm/h	centimeter per hour	min	minute(s)
dm	decimeter	msec	millisecond
hr	Hour(s)	NM	nautical mile(s)
km	kilometer	s	second(s)
km/h	kilometer per hour		

Symbols

Symbol	Description	Symbol	Description
	Own ship symbol		AIS AtoN (physical)
	Selected target		AIS AtoN (virtual)
	Unselected target		AIS SART/AIS MOB/EPIRB AIS
	AIS Base Station		SAR vessel
	SAR aircraft		

APPENDIX 6 RADIO REGULATORY INFORMATION

USA-Federal Communications Commission (FCC)

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation. Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Caution: Exposure to Radio Frequency Radiation

- This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment and meets the FCC radio frequency (RF) Exposure Guidelines in Supplement C to OET65.
- This equipment should be installed and operated keeping the radiator at least 9 cm or more away from person's body.
- This device must not be co-located or operating in conjunction with any other antenna or transmitter.

Canada-Industry Canada (IC)

Caution: Exposure to Radio Frequency Radiation

This equipment complies with IC radiation exposure limits set forth for an uncontrolled environment and meets RSS-102 of the IC radio frequency (RF) Exposure rules. This equipment should be installed and operated keeping the radiator at least 9 cm or more away from person's body.

Cet équipement est conforme aux limites d'exposition aux rayonnements énoncées pour un environnement non contrôlé et respecte les règles d'exposition aux fréquences radioélectriques (RF) CNR-102 de l'IC. Cet équipement doit être installé et utilisé en gardant une distance de 9 cm ou plus entre le dispositif rayonnant et le corps.

To reduce potential radio interference to other users, the antenna type and its gain should be so chosen that the equivalent isotropically radiated power (EIRP) is not more than that required for successful communication.

**SPECIFICATIONS OF U-AIS TRANSPONDER
FA-170**

1 TRANSPONDER UNIT

- 1.1 TX/RX frequency 156.025 MHz to 162.025 MHz
- 1.2 Class of emission F1D, F2B
- 1.3 Output power 1 W or 12.5 W selectable
- 1.4 Impedance 50 ohms
- 1.5 DSC receiver CH70 fixed, 156.525 MHz
- 1.6 Bandwidth 25 kHz

2 MONITOR UNIT

- 2.1 Screen 4.3-inch color LCD, 480 x 272 dots (WQVGA)
- 2.2 Brilliance control 18 steps
- 2.3 Visible distance 0.7 m nominal
- 2.4 Buzzer volume 75 to 85 dB (A)

3 GPS RECEIVER

- 3.1 Receiving frequency 1575.42 MHz
- 3.2 Tracking code C/A code
- 3.3 Number of channel 12 channels parallel, 12 satellites
- 3.4 Accuracy (dependent on ionospheric activity and multipath)
 - GPS 13 m max. (2drms, HDOP < 4)
 - DGPS 5 m max. (2drms, HDOP < 4)
- 3.5 Tracking speed 1000 kn
- 3.6 Position fixing time Warm start: 12 s, Cold start: 90 s
- 3.7 Position update interval 1 second typical
- 3.8 DGPS data receiving RTCM SC-104 ver-2.1

4 INTERFACE

- 4.1 Number of ports
 - Serial 6 ports, IEC61162-1 Ed.4 or IEC61162-2 Ed.1
 - Sensor input 3 port, IEC61162-1 Ed.4, 4800 bps
 - Alarm I/O 1 port, Contact closure (normal close or open),
Output level: 50 V, 80 mA max.
 - LAN 1 port, Ethernet, 100Base-TX, RJ45 connector, Auto MDI/MDIX,
for IEC61162-450 Ed.1
 - BLUESIGN input 1 port, Relay contact
- 4.2 Data sentences IEC61162-1/2/450
 - Input ABM, ACA, ACK, ACM, ACN, AIQ, AIR, BBM, DTM, EPV, GBS,
GGA, GLL, GNS, HBT, HDT, LRF, LRI, OSD, PIWWIVD,
PIWWSPW, PIWWSSD, PIWWVSD, RMC, ROT, SPW, SSD, THS,
VBW, VSD, VTG

- Output ABK, ACA, ACS, ALC, ALF, ALR, ARC, EPV, HBT, LR1, LR2, LR3, LRF, LRI, NAK, PIWWIVD, PIWWSPR, PIWWSSD, PIWWVSD, SSD, TRL, TXT, VER, VDM, VDO, VSD
- 4.3 Proprietary sentences (output only)
 - PFEC LBK, Alcmd, idatr, ident, idfnc, pidat, pireq
- 4.4 IEC61162-450 transmission group
 - Input MISC, TGTD, SATD, NAVD, PROP
 - Output Arbitrary (default: TGTD)
- 4.5 Network function (except IEC61162-450)
 - Data format SNMP, HTTP, Syslog, Furuno Management Protocol (FMP)
 - Data sentences same as 4.2 sentences

5 POWER SUPPLY

- 3.1 Transponder unit 12-24 VDC: 6-3 A
- 3.2 Monitor unit 12 VDC: 0.3 A max. (supplied from transponder unit)
- 3.3 AC/DC power supply unit (PR-240, option)
100-115/200-230 VAC, 1 phase, 50/60 Hz

6 ENVIRONMENTAL CONDITIONS

- 6.1 Ambient temperature
 - GPS/VHF antenna -30°C to +70°C (storage: -30°C to +85°C)
 - Other units -15°C to +55°C
- 6.2 Relative humidity 93% or less at +40°C
- 6.3 Degree of protection
 - GPS/VHF antenna IP56
 - Transponder unit IP20, IP22 (bulkhead mount)
 - Monitor unit IP22, IP35 (option)
 - Pilot plug unit IP22 (front panel), IPX0 (chassis)
- 6.4 Vibration IEC 60945 Ed.4

7 UNIT COLOR

- 7.1 GPS/VHF antenna N9.5
- 7.2 Transponder/ Monitor unit N2.5
- 7.3 Pilot plug unit N2.5

INDEX

A

- AIS-SART test indication..... 3-10
- ALERT display 1-19
- ALERT LIST 3-7
- ALERT LOG 3-7
- Alert status 3-7

C

- Channels
 - setting..... 1-25
 - viewing 1-24
- Contrast..... 1-3
- Controls..... 1-1

D

- Dangerous (target) list..... 1-15, 2-11
- Default settings 3-10
- Diagnostics
 - monitor unit test..... 3-3
 - TX on/off log 3-6
 - VHF communication test 3-5
- Dimmer..... 1-3
- DISP key 1-11
- Display
 - icons..... 1-4
 - key guidance 1-4
 - status bar 1-4

E

- EMMA warning message (inland AIS) 2-21
- ETA message (inland AIS)..... 2-16

F

- Fuse replacement 3-2

G

- GPS monitor..... 3-8

I

- Initial settings
 - class A..... 1-31
 - inland AIS..... 2-23
- Inland AIS
 - activating 2-1
 - EMMA warning message 2-21
 - ETA message..... 2-17
 - mode selection 2-2
 - no. of persons message 2-20
 - RTA message 2-19
 - static data..... 2-8
 - text message..... 2-14
 - time difference setting 1-32, 2-24
 - voyage-related data entry 2-3
 - water level message 2-22

K

- Key beep

- on/off 1-28

L

- Long range mode 1-28

M

- Maintenance..... 3-1
- Memory clear 3-10
- Menu
 - entering alphanumeric data..... 1-6
 - selecting an option 1-6
- MENU key 1-5
- Menu language selection 2-24
- Messages
 - EMMA warning (inland AIS) 2-21
 - ETA (inland AIS)..... 2-17
 - receive text, class A 1-22
 - received message pop up window 1-22
 - RTA (inland AIS) 2-19
 - send text message, class A..... 1-20
 - water level (inland AIS) 2-22
- Monitor unit test..... 3-3

N

- NAV STATUS
 - entering voyage-related data 1-7
- NAV STATUS key 1-7, 2-3
- No. of persons message (inland AIS) 2-20
- Notifications..... 1-10
 - alert buzzer 1-10
 - collision detection..... 1-10
 - received messages 1-10

P

- Plotter display..... 1-12
- Power on/off 1-2

R

- RTA message (inland AIS)..... 2-19

S

- Sensor status 3-9
- Static data display 1-18
- System overview iii

T

- Target list 1-14, 2-9
- Troubleshooting 3-2

Declaration of Conformity



0560

We **FURUNO ELECTRIC CO., LTD.**

(Manufacturer)

9-52 Ashihara-Cho, Nishinomiya City, 662-8580, Hyogo, Japan

(Address)

declare under our sole responsibility that the product

U-AIS TRANSPONDER FA-170

(Model name, type number)

to which this declaration relates conforms to the following standard(s) or normative document(s)

IMO Resolution MSC.694 (17)	IEC 61993-2 Ed.2.0: 2012
IMO Resolution MSC.74 (69)	IEC 61108-1 Ed.2.0: 2003
IMO Resolution MSC.191 (79)	IEC 61162-1 Ed.4.0: 2010
IMO Resolution MSC.302(87)	IEC 61162-2 Ed.1.0: 1998
ITU-R M.1371-5	IEC 61162-450 Ed.1.0: 2011
2000 HSC Code 13	IEC 62288 Ed.2.0: 2014
	IEC 60945 Ed.4.0: 2002 incl. Corr. 1, 2008
	IEC 61924-2 Ed.1.0: 2012 Annex K and M
	CCNR Test standard Inland AIS Ed.2.0: 2012

(title and/or number and date of issue of the standard(s) or other normative document(s))

For assessment, see

- EC type examination (Module B) certificate No. MEDB00000EV issued by DNV GL, Norway.
- Product Quality System (Module D) certificate No. P 112 issued by Telefication, The Netherlands.

This declaration is issued according to the Directive 2014/90/EU of the European Parliament and of the Council on marine equipment, and the Implementing Regulation (EU) 2017/306.

On behalf of Furuno Electric Co., Ltd.

Nishinomiya City, Japan
May 17, 2017

(Place and date of issue)

Yoshitaka Shogaki
Department General Manager
Quality Assurance Department

(name and signature or equivalent marking of authorized person)